



COMPONENTS ARE LOCATED ON BACK WALL OF GRINDER

- BD - BRIDGE DIODE
- DP1 - DOOR PROX LH
- DP2 - DOOR PROX RH
- ESS - EMERGENCY STOP SWITCH
- FTR - FILTER
- FU1 - FUSE 1 AMP
- FU2 - FUSE 4 AMP
- GMC - GRIND MOTOR CONTROL
- GMS - GRIND MOTOR SWITCH
- IJS - INFEEED JOG SWITCH
- ISS - INFEEED SPEED SWITCH
- MAG - MAGNETIC STARTER
- PX1 - TRAVERSE PROX RH
- PX2 - TRAVERSE PROX LH
- REL - RELAY
- RES - RESISTOR
- RTP - RELIEF TORQUE POT
- SDC - SPIN DRIVE CONTROL
- SRS - SPIN ROTATION SWITCH
- SSP - SPIN SPEED POT
- SSS - SYSTEM START SWITCH
- STS - SPIN/TORQUE SELECTOR
- TDC - TRAVERSE DRIVE CONTROL
- TRF - TRANSFORMER
- TMS - TRAVERSE MOTOR SWITCH
- TSP - TRAVERSE SPEED POT