



- ESS - EMERGENCY STOP SWITCH
- FU1 - FUSE 1 - 1 AMP
- FU2 - FUSE 2 - 4 AMP
- FU3 - FUSE 3 - 1/4 AMP
- GMS - GRINDING MOTOR SWITCH
- MAG - MAGNETIC STARTER
- PX1 - L.H. PROX SWITCH-TRAV
- PX2 - R.H. PROX SWITCH-TRAV
- REL - RELAY
- FTR - FILTER
- GMC - GRIND MOTOR CONTROL
- IJS - INFEEED JOG SWITCH
- ISS - INFEEED SPEED SWITCH
- STS - SPIN/TORQUE SELECTOR
- SRS - SPIN ROTATION SWITCH
- SSS - SYSTEM START SWITCH
- TSP - TRAVERSE SPEED POT
- TDC - TRAVERSE DRIVE CONTROL
- TMS - TRAVERSE MOTOR SWITCH
- SDC - SPIN DRIVE CONTROL
- MCC = MAGNETIC CONTACT COIL
- OLC = OVERLOAD COIL
- OL = OVERLOAD
- 1M = MAGNETIC CONTACT
- TFR - TRANSFORMER
- BD - BRIDGE DIODE
- RTP - RELIEF TORQUE POT
- SSP - SPIN SPEED POT