


DWNER'S HANUAL
PARTS MANUAL
SERVICE MANUAL

20 HORSE POWER MOTOR 12' INLET HOSE

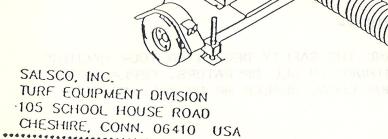

· NOTE: PLEASE READ "CAUTIONS" IN THIS MANUAL


CAUTION

BEFORE YOU START THIS MACHINE:

- 1. READ AND UNDERSTAND DWNER'S MANUAL.
- DO NOT RUN WITHOUT GUARDS AND OTHER SAFETY COVERS ON MACHINE.
- 3. NEVER LEAVE MACHINE RUNNING WHILE UNATTENDED.
- 4. NEVER REACH UNDER OR INTO MACHINE FOR ANY REASON WHILE MACHINE IS RUNNING AS IT CAN CAUSE SERIOUS INJURY.
- 5. ALWAYS REMOVE SPARK PLUG WIRE, MAKE SURE ENGINE SWITCH IS OFF, THROTTLE IS IN STOP POSITION, AND SHUT GAS OFF WHEN WORKING ON OR CHECKING INSIDE OF MACHINE.
- 6. NEVER CLEAN INLET TUBE OR OUTLET TUBE WHILE ENGINE IS RUNNING.
- 7. EYE PROTECTION SHOULD ALWAYS BE WORN WHEN RUNNING MACHINE.
- 8. BE SURE AIR INTAKE ON ENGINE IS CLEAR OF LEAVES AND DEBRIS.
- 9. WHEN UNHITCHING FROM TOW VEHICLE BE SURE REAR JACK STANDS ARE 3" FROM GROUND AND PINNED.
- 10. DO NOT REMOVE CAUTION DECALS.
- 11. SAFETY DECALS SHOULD BE REPLACED IMMEDIATELY AFTER REPAINTING OR WHEN THEY BECOME ILLEGIBLE. ** SEE NOTE BELOW **

** NOTE **

SAFETY IS A PRIME CONCERN AT SALSCO AND THE SAFETY DECALS ON YOUR MACHINE ARE A HIGHLY VISIBLE AND CONSTANT REMINDER TO ALL OPERATORS. REPLACEMENT SAFETY DECALS MAY BE OBTAINED FROM YOUR LOCAL DEALER OR BY CALLING TOLL FREE 1-800-8SALSCO.

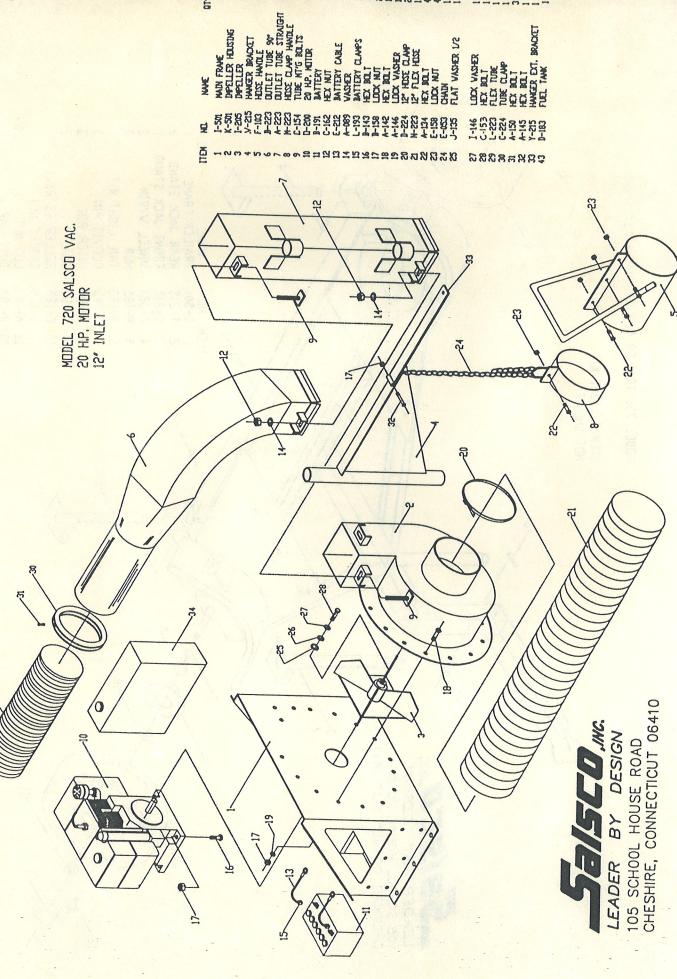

FRONT JACK STAND WHEEL WIRIN SEAL ROLLER BEARING CASTLE NUT LUG NUT DUST CAP MODEL 750 TRAILER FOR 716 VAC \$720 VAC TAIL LIGHT KIT CLEVIS PIN HITCH PIN B-167 C-185 C-185 A-173 B-192 ITEM 6 LIGHT KIT NOT SHOWN 6