
 


OPERATORS MANUAL - 720 & 725 TRUCKLOADER LEAF VACUUM

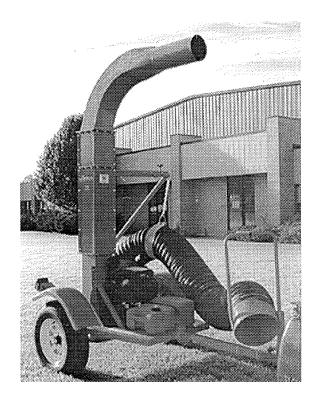

SALSCO, INC.

105 School House RoadCheshire, CT 06410, 203/271-1682, 203/271-2596 (Fax)1/800/872-5726



STATEMENT OF FACT

YOU HAVE JUST PURCHASED THE HIGHEST QUALITY, MOST EFFICIENT TRUCKLOADER VACUUM ON THE MARKET TODAY. THIS UNIT HAS THE ABILITY TO MEET EXACT STANDARDS AND PERFORM FOR YEARS WITH MINIMUM DOWN TIME. HOWEVER, IT CANNOT READ NOR WILL IT UNDERSTAND THIS MANUAL NO MATTER HOW LONG YOU LEAVE IT ON TOP OF THE MACHINE. IT IS YOUR RESPONSIBILITY TO READ AND UNDERSTAND IT. IT IS ALSO YOUR RESPONSIBILITY TO BE CERTAIN THIS INFORMATION IS PASSED ALONG TO ANYONE WHO IS EXPECTED TO OPERATE THIS EQUIPMENT. SHOULD YOU CHOOSE NOT TO READ, UNDERSTAND AND PASS ALONG THE INFORMATION PROVIDED YOU, PLEASE EXPECT EQUIPMENT FAILURE AND POSSIBLE INJURIES TO PERSONS AROUND THIS EQUIPMENT.

FOR THE SAFETY OF THE OPERATOR, IT IS IMPERATIVE THAT THIS MANUAL IS CAREFULLY READ AND UNDERSTOOD.

HAVING READ THIS MANUAL, IT IS YOUR RESPONSIBILITY TO BE SURE THAT ALL NEW OPERATORS READ AND UNDERSTAND THIS MANUAL ESPECIALLY THE CAUTIONS ON PAGE FIVE.

AS A MANUFACTURER OF EQUIPMENT WE HAVE A RESPONSIBILITY TO DESIGN A SAFE PIECE OF EQUIPMENT. HOWEVER, ONLY YOU CAN PREVENT ACCIDENTS!!

DO NOT RUN MACHINE WITHOUT GUARDS IN PLACE

DESCRIPTION

716 AND 720 TRUCKLOADER VACULMS

Our larger vacs, 16 H.F. and up are considered the work horses of the line and are a must for anyone who has large clean up jobs in their future. with the smaller vacs, these units also standard with a wrapped spring steel wire hose, and the impellers are welded on a robotic welding system to insure a smooth balanced operation. matter which model you choose, we're sure you'll agree, that not only have you purchased a unit that will increase profits; but also one that will give you years of service with minimal care. There are three great options to make the 716 and 720 independent trailer units: the LOADERVAC TRAILER 750 which makes highway trailing a cinch; the WHEEL KIT 751 which allows you to convert either truck loader to trailer units; and the LOADERVAC TRAILER our deluxe model which comes standard with leaf springs, screwjack, and a place to carry two walk behind leaf blowers.

THINK SAFETY

MANUFACTURED BY:

SALSCO, INC.

TURF EQUIPMENT DIVISION 105 SCHOOL HOUSE ROAD

CHESHIRE, CONNECTICUT 06410

203/271-1682

FAX (203) 271-2596

TRUCKLOADER VACUUM MANUAL

THIS MANUAL COVERS MODELS:

716 & 720 TAILGATE LOADERS 751 & 752 TRAILERS

This company reserves the right to discontinue, add improvements to, or change the design of any model or product at any time without obligation to improve existing machines, either by changing the design or adding new parts.

It has been and will continue to be the policy of SALSCO to update existing machines at its own discretion. Whenever possible, new designs will be made in such a way, that they can be "Retro Fit" if so desired.

Record in space provided below the model and serial numbers of this unit. Please retain these numbers for future reference.

No parts orders will be accepted without Model numbers or parts numbers.

Model Number

Serial Number

Model No.

<u>Prefix</u>

Part Number Code:

716

716

Model Part Number*

* PART NUMBER PREFIX MUST BE USED WHEN ORDERING PARTS (___A000).
PREFIX NUMBER IS LISTED ABOVE.

**** CAUTION ****

READ AND UNDERSTAND THIS MANUAL BEFORE STARTING MACHINE!!

SERVICE SCHEDULE

Å n	CHECK ENGINE OIL (SEE ENGINE MANUAL)	DAIL.Y
2.	CHECK VIBRATIONS	DAILY
3,	CHECK FOR TORN OR DAMAGED HOSE	DAILY
4 _a	VISUALLY CHECK FOR LOOSE BOLTS OR DAMAGE	DAILY
) <i>a</i>	CLEAN MACHINE	DAILY
6.	CHECK TIRES (TRAILER UNITS)	DAILY
7.	CHECK BATTERY FOR WATER AND ELECTRICAL CONNECTIONS	WEEKLY

THINK

SAFETY

CAUTION

BEFORE YOU START THIS MACHINE:

- 1. READ AND UNDERSTAND OWNER'S MANUAL.
- 2. DO NOT RUN WITHOUT GUARDS AND OTHER SAFETY COVERS ON MACHINE.
- 3. NEVER LEAVE MACHINE RUNNING WHILE UNATTENDED.
- 4. NEVER REACH UNDER OR INTO MACHINE FOR ANY REASON WHILE MACHINE IS RUNNING AS IT CAN CAUSE SERIOUS INJURY.
- 5. ALWAYS REMOVE SPARK PLUG WIRE, MAKE SURE ENGINE SWITCH IS OFF, THROTTLE IS IN STOP POSITION, AND SHUT GAS OFF WHEN WORKING ON OR CHECKING INSIDE OF MACHINE.
- 6. NEVER CLEAN INLET TUBE OR OUTLET TUBE WHILE ENGINE IS RUNNING.
- 7. EYE PROTECTION SHOULD ALWAYS BE WORN WHEN RUNNING MACHINE.
- 8. BE SURE AIR INTAKE ON ENGINE IS CLEAR OF LEAVES AND DEBRIS.
- 9. WHEN UNHITCHING FROM TOW VEHICLE BE SURE REAR JACK STANDS ARE 2" FROM GROUND AND PINNED.
- 10. DO NOT REMOVE CAUTION DECALS.
- 11. SAFETY DECALS SHOULD BE REPLACED IMMEDIATELY AFTER REPAINTING OR WHEN THEY BECOME ILLEGIBLE. ** SEE NOTE BELOW **

** NOTE **

SAFETY IS A PRIME CONCERN AT SALSCO AND THE SAFETY DECALS ON YOUR MACHINE ARE A HIGHLY VISIBLE AND CONSTANT REMINDER TO ALL OPERATORS. REPLACEMENT SAFETY DECALS MAY BE OBTAINED FROM YOUR LOCAL DEALER OR BY CALLING TOLL FREE 1-800-88ALSCO.

DO NOT RUN MACHINE WITHOUT GUARDS IN PLACE

(082288)

OPERATING INSTRUCTIONS


- 1) READ MANUAL THROUGHLY.
- 2) ON TRAILER UNITS, LOWER TRAILER LEG STANDS.
- 3) BE SURE INTAKE HOSE IS CONNECTED TO BLOWER HOUSING.
- 4) PLACE INLET HOSE ON GROUND NEAR PILE OF DEBRIS.
- 5) START MOTOR AND LET IDLE TILL IT WARMS UP (SEE ENGINE MANUAL).
- 6) BRING UP TO FULL R.P.M. SLOWLY, CHECKING FOR VIBRATIONS.
- 7) YOU SHOULD BE ABLE TO DO 90% OF YOUR WORK WITH THE ENGINE AT 3/4 THROTTLE. THIS WILL LESSEN FUEL CONSUMPTION AND ADD TO ENGINE LIFE.
- 8) YOU CAN EITHER MOVE INLET BY HAND OR BLOW LEAVES TO INLET TUBE. IT WILL PICK UP MOST OF THE PILE BY ITSELF.


**** NOTE ***

BE CAREFUL NOT TO PICK UP ROCKS, BOTTLES ETC. AS THIS COULD RESULT IN DAMAGE TO THE UNIT AND POSSIBLY INJURE THE OPERATOR.

DO NOT RUN MACHINE WITHOUT GUARDS IN PLACE

(082288)

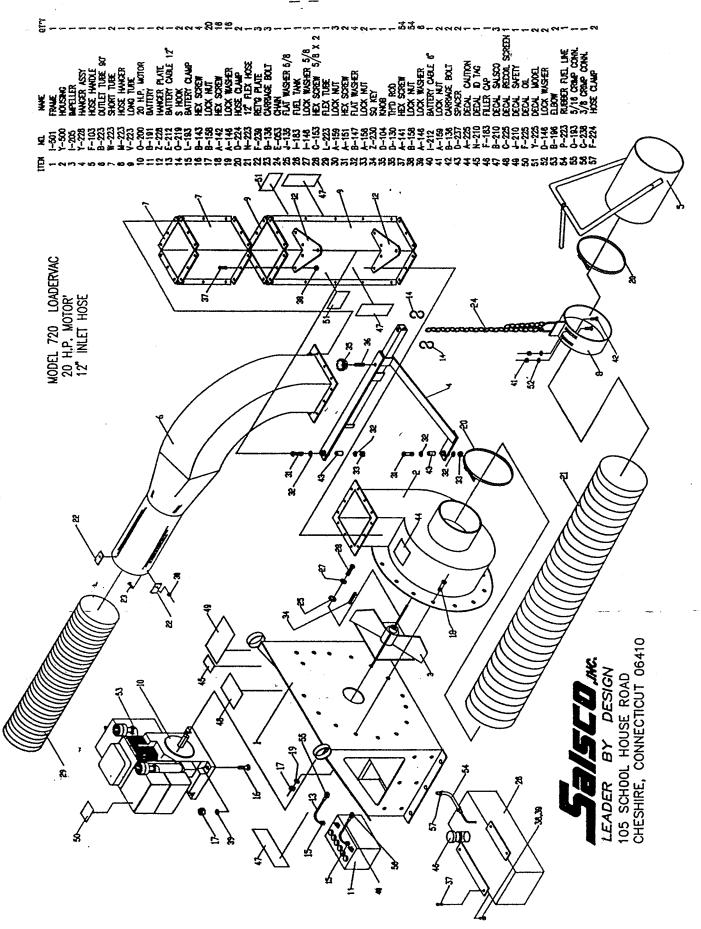

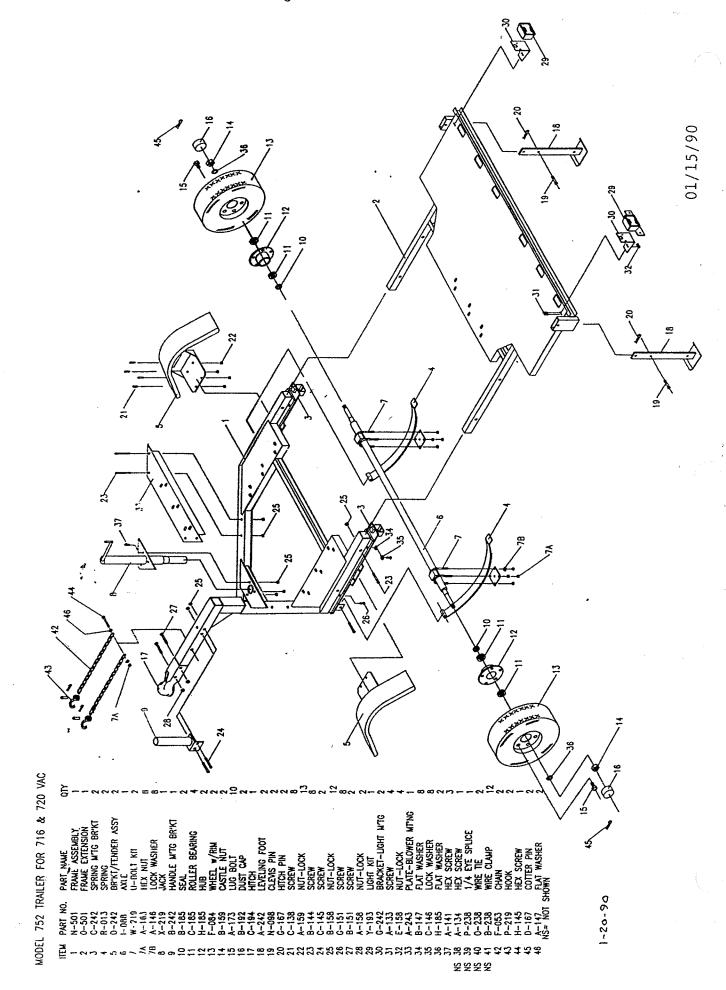

SERVICE RECORD

THIS SCHEDULE IF KEPT PROPERLY WILL HELP TRACK PROBLEMS IN THE FUTURE

		¥ *			TOTAL HRS OF SQ. FT
DATE	QTY.	PART #	DESCRIPTION OF WORK DONE		TO DATE

		·			.
	,				
·					
				·	
	•				



		,

