

# **Salsco, INC.**


LEADER BY DESIGN

\*\*\*\*\*

-----

\*\*\*\*\*

OWNER'S MANUAL  
PARTS MANUAL  
SERVICE MANUAL

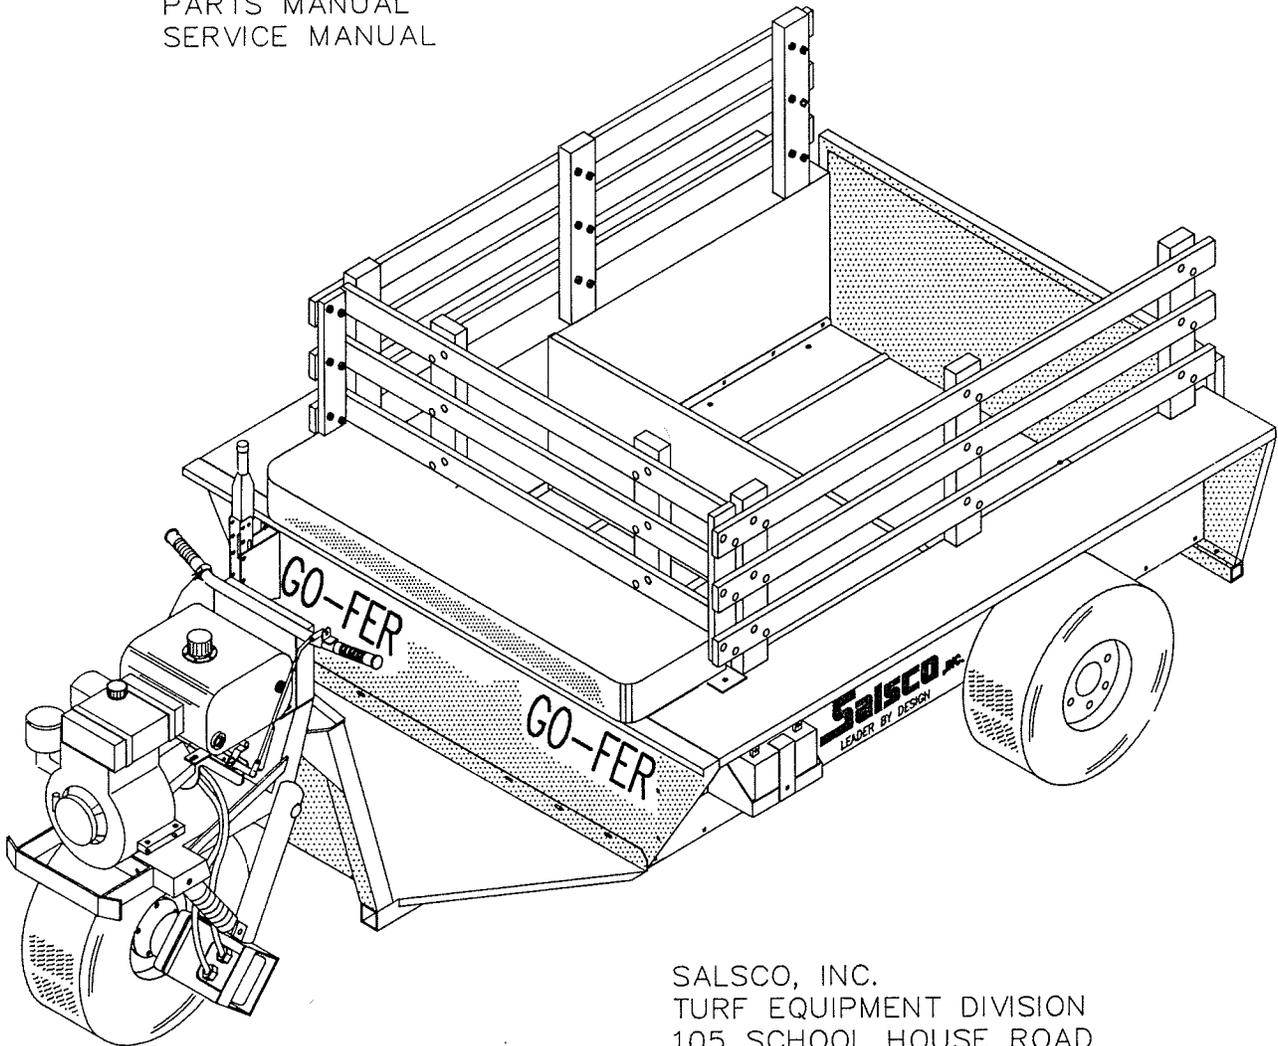

SALSCO, INC.  
TURF EQUIPMENT DIVISION  
105 SCHOOL HOUSE ROAD  
CHESHIRE, CONN. 06410 USA

\*\*\*\*\*

-----

\*\*\*\*\*

\* NOTE: PLEASE READ "CAUTIONS" IN THIS MANUAL

0701001  
4-19-90

## STATEMENT OF FACT

YOU HAVE JUST PURCHASED THE HIGHEST QUALITY, MOST MANEUVERABLE UTILITY VEHICLE ON THE MARKET TODAY. THIS UNIT HAS THE ABILITY TO MEET EXACT STANDARDS AND PERFORM FOR YEARS WITH MINIMUM DOWN TIME. HOWEVER, IT CANNOT READ NOR WILL IT UNDERSTAND THIS MANUAL NO MATTER HOW LONG YOU LEAVE IT ON TOP OF THE MACHINE. IT IS YOUR RESPONSIBILITY TO READ AND UNDERSTAND IT. IT IS ALSO YOUR RESPONSIBILITY TO BE CERTAIN THIS INFORMATION IS PASSED ALONG TO ANYONE WHO IS EXPECTED TO OPERATE THIS EQUIPMENT. SHOULD YOU CHOOSE NOT TO READ, UNDERSTAND AND PASS ALONG THE INFORMATION PROVIDED YOU, PLEASE EXPECT EQUIPMENT FAILURE AND POSSIBLE INJURIES TO PERSONS AROUND THIS EQUIPMENT.

FOR THE SAFETY OF THE OPERATOR, IT IS IMPERATIVE THAT THIS MANUAL IS CAREFULLY READ AND UNDERSTOOD.

HAVING READ THIS MANUAL, IT IS YOUR RESPONSIBILITY TO BE SURE THAT ALL NEW OPERATORS READ AND UNDERSTAND THIS MANUAL ESPECIALLY THE CAUTIONS ON PAGE 9.

AS A MANUFACTURER OF EQUIPMENT WE HAVE A RESPONSIBILITY TO DESIGN A SAFE PIECE OF EQUIPMENT. HOWEVER, ONLY YOU CAN PREVENT ACCIDENTS!!

DO NOT RUN VEHICLE WITHOUT COVERS IN PLACE

## DESCRIPTION

The Go-Fer<sup>tm</sup> is a three wheel Utility Vehicle designed to do a multitude of jobs in many different industries. Its low center of gravity and wide wheel base give it excellent stability on hills and inclines. Being light weight and having FLOTATION TURF TIRES allows it to travel to the work site in the early hours before the sun has a chance to dry the turf. Lowering the 20" TAILGATE allows it to act as a Ramp. With the body only 8" off the ground, loading and un-loading of small hand equipment becomes easy. We've also lined the floor and TAILGATE/RAMP with rubber, which provides a non-slip surface. The Go-Fer's 29 CUBIC FOOT CAPACITY is one of the largest on the market for Utility Vehicles of its size.

Go-Fer is available in either PULL OR ELECTRIC START. The standard power source is an 8 h.p. KOHLER ENGINE coupled with a SUNSTRAND HYDRAULIC PUMP which in turn sends power to a CHAR-LYNN DRIVE MOTOR which we mount on the front wheel. On the ALL WHEEL DRIVE GO-FER, we've added a CHAR-LYNN DRIVE MOTOR to each of the rear wheels. This machine has the ability to climb inclines that would never be attempted, let alone conquered by most other Utility Vehicles.

User friendly, is a term which certainly applies to this machine. The right hand operates the throttle, the left hand; FORWARD AND REVERSE WITH HYDROSTATIC DRIVE, when coming out of full forward or reverse on your way to neutral, the dynamic braking of the HYDRAULIC SYSTEM will automatically stop the machine. No chance of putting this machine into neutral to coast down a hill! However, in case of a break down or while servicing, if you need to push or pull the Go-Fer, there is a valve on top of the HYDRAULIC PUMP which when manually turned will allow the oil to by-pass and the machine to be put into neutral. An emergency brake handle on the right of the operator's seat is used for parking only.

DO NOT RUN VEHICLE WITHOUT COVERS IN PLACE

MANUFACTURED BY:

SALSCO, INC.  
TURF EQUIPMENT DIVISION  
105 SCHOOL HOUSE ROAD  
CHESHIRE, CT 06410  
(203) 271-1682  
FAX: (203) 271-2596

THIS MANUAL COVERS MODELS:

- 0001001 - FRONT WHEEL DRIVE, KOHLER ENGINE, ELECTRIC START.
- 0001002 - FRONT WHEEL DRIVE, KAWASAKI ENGINE, PULL START.
- 0001003 - FRONT WHEEL DRIVE, KOHLER ENGINE, PULL START.
- 0001004 - FRONT WHEEL DRIVE, KAWASAKI ENGINE, ELECTRIC START.
- 0001005 - ALL WHEEL DRIVE, KOHLER ENGINE, ELECTRIC START.
- 0001006 - ALL WHEEL DRIVE, KAWASAKI ENGINE, PULL START.
- 0001007 - ALL WHEEL DRIVE, KOHLER ENGINE, PULL START.
- 0001008 - ALL WHEEL DRIVE, KAWASAKI ENGINE, ELECTRIC START.

This company reserves the right to discontinue, add improvements to, or change the design of any model or product at any time without obligation to improve existing machines, either by changing the design or adding new parts.

It has been and will continue to be the policy of SALSCO to update existing machines at its own discretion. Whenever possible, new designs will be made in such a way, that they can be "Retro Fit" if so desired.

Record in the space provided below the model and serial number of this unit. Please retain these numbers for future reference.

No parts orders will be accepted without model numbers or part numbers. All part numbers are listed in this manual.

---

SERIAL NUMBER

---

MODEL NUMBER & NAME

NOTE: Be sure to complete and return your warranty card. This will insure immediate processing of warranty claims.

READ AND UNDERSTAND THIS MANUAL BEFORE STARTING MACHINE

## MAINTENANCE AND SERVICE

The Go-Fer<sup>tm</sup> is a light weight, 750 lbs. hydrostatically driven Utility Vehicle powered by an 8 h.p. Kohler pull or electric start engine, capable of carrying up to 1,000 lbs. of people and equipment. It's cargo area is only 8" off the ground and with it's 20" tailgate it's extremely easy for one person to load and unload.

To operate the Go-Fer, just turn the key, control the throttle with the right hand twist grip, which returns to idle when released, and control forward, reverse, direction, and speed with the left hand twist grip; which also returns to neutral when released. The parking brake is on the right side of the seat.

### **TO MAINTAIN THE GO-FER**

1. Clean the air cleaner and change the oil as recommended by the engine manufacturer.
2. Grease the two fittings on the front end weekly.
3. Change the hydraulic filter semi-annually or after 500 hours of use.
4. Repack the rear wheel bearings yearly.
5. Check P.S.I. in tires weekly.
6. Visually check the following before operating machine:
  - a) Hydraulic hoses for leaks, cuts or areas that might be leaking.

### **TO REMOVE THE HYDROSTATIC PUMP**

1. Drain the tank.
2. Mark, remove, and plug the hoses and pump parts.
3. Remove the linkage.
4. Remove the two bolts holding the pump.
5. Remove the pump.
6. Reverse the order to install.

### **TO REMOVE THE DRIVE MOTOR**

1. Jack the front wheel off the ground.
2. Put a block under the frame.
3. Remove the front wheel.
4. Mark, remove and plug the hoses and motor parts.
5. Remove the four nuts holding the motor and slide the motor out.
6. Reverse the order to install the motor.

DO NOT RUN VEHICLE WITHOUT COVERS IN PLACE

#### TO REPLACE BUSHINGS IN SUSPENSION

1. Jack front wheel off the ground.
2. Put a block under the frame.
3. Mark, remove, and plug the hoses and motor parts.
4. Remove the spring shock lower bolt.
5. Loosen and remove the two set screws on the locking collar.
6. Remove the locking collar.
7. Slide the shaft assembly out and lower.
8. Drive out the worn bushings and replace.
9. Reverse order to assemble.

#### TO REPLACE THE STEERING BUSHINGS

1. Jack the front wheel up just enough to release the weight on the bushings.
2. Put a block under the frame.
3. Loosen the locking collar on the bottom of the pivot pin.
4. Support the front end assembly securely from above before removing the pivot pin as it weighs over 200 lbs.
5. Remove the pivot pin and spacers, (top and bottom).
6. Separate the back from the front.
7. Drive out the worn bushings and replace with new bushings.
8. When assembling check to see if spacers need to be replaced.
9. Assemble in reverse order.

DO NOT RUN VEHICLE WITHOUT COVERS IN PLACE

## OPERATING INSTRUCTIONS

### BEFORE YOU START THIS MACHINE:

1. READ AND UNDERSTAND THIS OWNER'S MANUAL.
2. BE SURE THAT THE PARKING BRAKE IS ON.
3. CHECK THE ENGINE OIL .
4. CHECK THE ENGINE FUEL.
5. CHECK THE HYDRAULIC OIL. (ISO 32, 10 Weight Anti-Foam - Citgo)
6. MAKE SURE THE FORWARD/REVERSE LEVER IS IN NEUTRAL.
7. TURN THE ON/OFF SWITCH TO ON.
8. TURN KEY SWITCH TO ON.
9. START ENGINE AND LET WARM UP (SEE ENGINE MANUAL).
10. SIT ON MACHINE, KEEP YOUR FEET ON THE FLOOR BOARD.
11. DISENGAGE PARKING BRAKE.
12. SLOWLY GIVE THE MOTOR A LITTLE THROTTLE, MOVE FORWARD/REVERSE LEVER TO THE FORWARD POSITION.

**NOTE:** THE MORE YOU MOVE THE FORWARD/REVERSE LEVER IN A DIRECTION THE FASTER YOU'LL GO WITH LESS POWER. FOR MORE POWER GO WITH LESS SPEED.

SAFETY IS A PRIME CONCERN AT SALSCO AND THE SAFETY DECALS ON YOUR MACHINE ARE A HIGHLY VISIBLE AND CONSTANT REMINDER TO ALL OPERATORS. REPLACEMENT SAFETY DECALS MAY BE OBTAINED BY CALLING TOLL FREE 1-800-8SALSCO.


DO NOT RUN VEHICLE WITHOUT COVERS IN PLACE

## CAUTIONS

### BEFORE YOU START THIS MACHINE:

1. READ AND UNDERSTAND THIS MANUAL.
2. NEVER OPERATE WITHOUT THE COVERS IN PLACE.
3. DO NOT ALLOW PASSENGERS TO SIT UP FRONT. THIS IS A ONE PERSON SEAT. PASSENGERS MUST SIT IN BACK KEEPING HANDS AND FEET INSIDE WHILE VEHICLE IS IN MOTION. REMEMBER THE WELL BEING OF THE PASSENGER IS YOUR RESPONSIBILITY.
4. NEVER LEAVE THE VEHICLE RUNNING WHILE UNATTENDED AND ALWAYS USE YOUR PARKING BRAKE.

DO NOT RUN VEHICLE WITHOUT COVERS IN PLACE

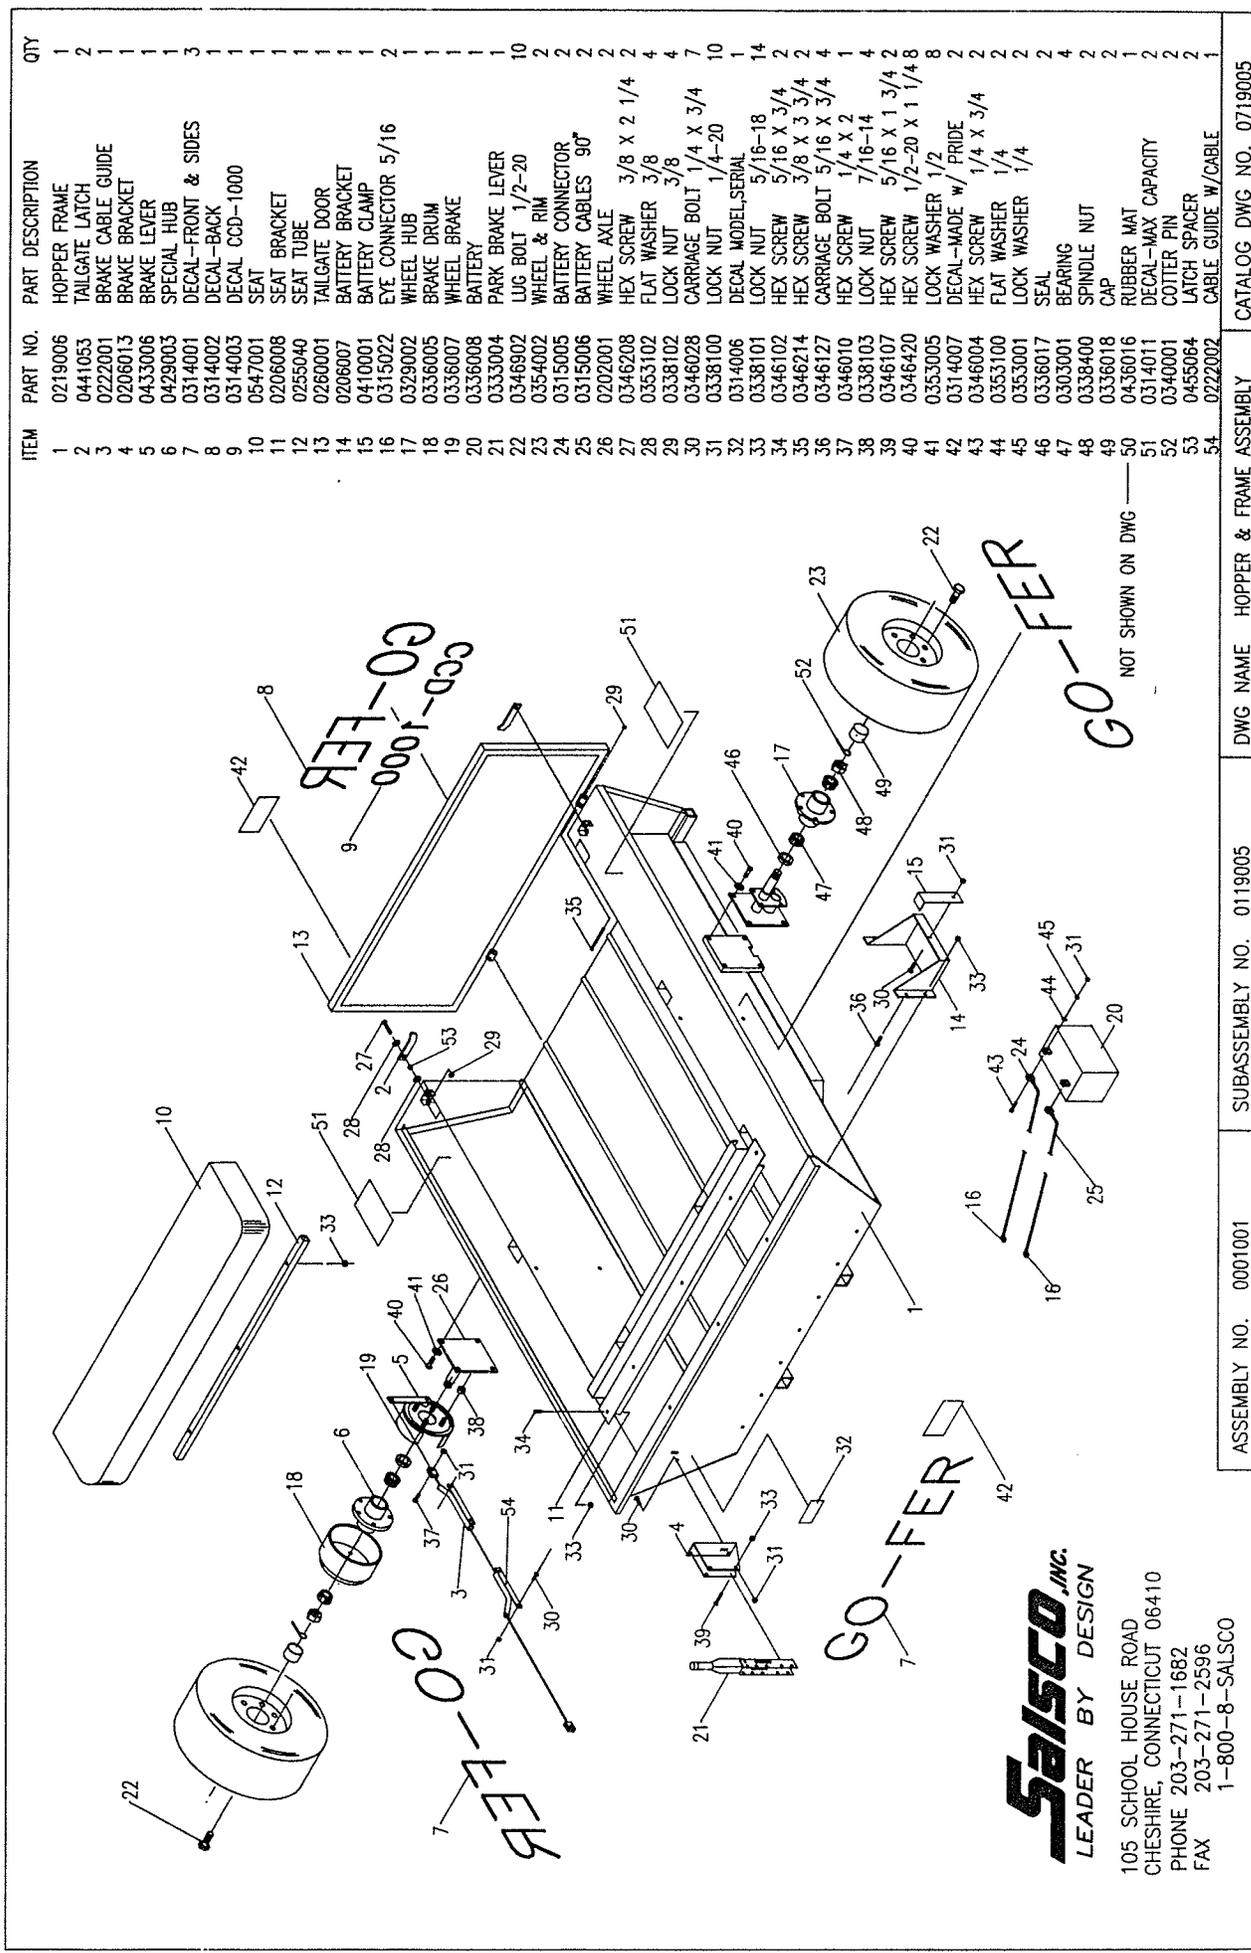


ITEM	PART NO.	PART DESCRIPTION	QTY
1	0219006	HOPPER FRAME	1
2	0441053	TAILGATE LATCH	2
3	0222001	BRAKE CABLE GUIDE	1
4	0206013	BRAKE BRACKET	1
5	0433006	BRAKE LEVER	1
6	0429003	SPECIAL HUB	1
7	0314001	DECAL-FRONT & SIDES	3
8	0314002	DECAL-BACK	1
9	0314003	DECAL CCD-1000	1
10	0547001	SEAT	1
11	0206008	SEAT BRACKET	1
12	0255040	SEAT TUBE	1
13	0260001	TAILGATE DOOR	1
14	0206007	BATTERY BRACKET	1
15	0410001	BATTERY CLAMP	1
16	0315022	EYE CONNECTOR 5/16	2
17	0329002	WHEEL HUB	1
18	0336005	WHEEL DRUM	1
19	0336007	WHEEL BRAKE	1
20	0336008	BATTERY	1
21	0333004	PARK BRAKE LEVER	1
22	0346902	LUG BOLT 1/2-20	10
23	0354002	WHEEL & RIM	2
24	0315005	BATTERY CONNECTOR	2
25	0315006	BATTERY CABLES 90"	2
26	0202001	WHEEL AXLE	2
27	0346208	HEX SCREW 3/8 X 2 1/4	2
28	0353102	FLAT WASHER 3/8	4
29	0338102	LOCK NUT 3/8	4
30	0346028	CARRIAGE BOLT 1/4 X 3/4	7
31	0338100	LOCK NUT 1/4-20	10
32	0314006	DECAL MODEL SERIAL	1
33	0338101	LOCK NUT 5/16-18	14
34	0346102	HEX SCREW 5/16 X 3/4	2
35	0346214	HEX SCREW 3/8 X 3/4	2
36	0346127	CARRIAGE BOLT 5/16 X 3/4	4
37	0346010	HEX SCREW 1/4 X 2	1
38	0338103	LOCK NUT 7/16-14	4
39	0346107	HEX SCREW 5/16 X 1 3/4	2
40	0346420	HEX SCREW 1/2-20 X 1 1/4	8
41	0353005	LOCK WASHER 1/2	2
42	0314007	DECAL-MADE w/ PRIDE	2
43	0346004	HEX SCREW 1/4 X 3/4	2
44	0353100	FLAT WASHER 1/4	2
45	0353001	LOCK WASHER 1/4	2
46	0336017	SEAL	2
47	0303001	BEARING	4
48	0338400	SPINDLE NUT	4
49	0336018	CAP	2
50	0436016	RUBBER MAT	2
51	0314011	DECAL-MAX CAPACITY	1
52	0340001	COITER PIN	2
53	0455004	LATCH SPACER	2
54	0222002	CABLE GUIDE W/CABLE	1

ASSEMBLY NO. 0001001      SUBASSEMBLY NO. 0119005      DWG NAME HOPPER & FRAME ASSEMBLY      CATALOG DWG NO. 0719005

REV. 4-19-90

**SALISCO, INC.**  
**LEADER BY DESIGN**  
 105 SCHOOL HOUSE ROAD  
 CHESHIRE, CONNECTICUT 06410  
 PHONE 203-271-1682  
 FAX 203-271-2596  
 1-800-8-SALISCO

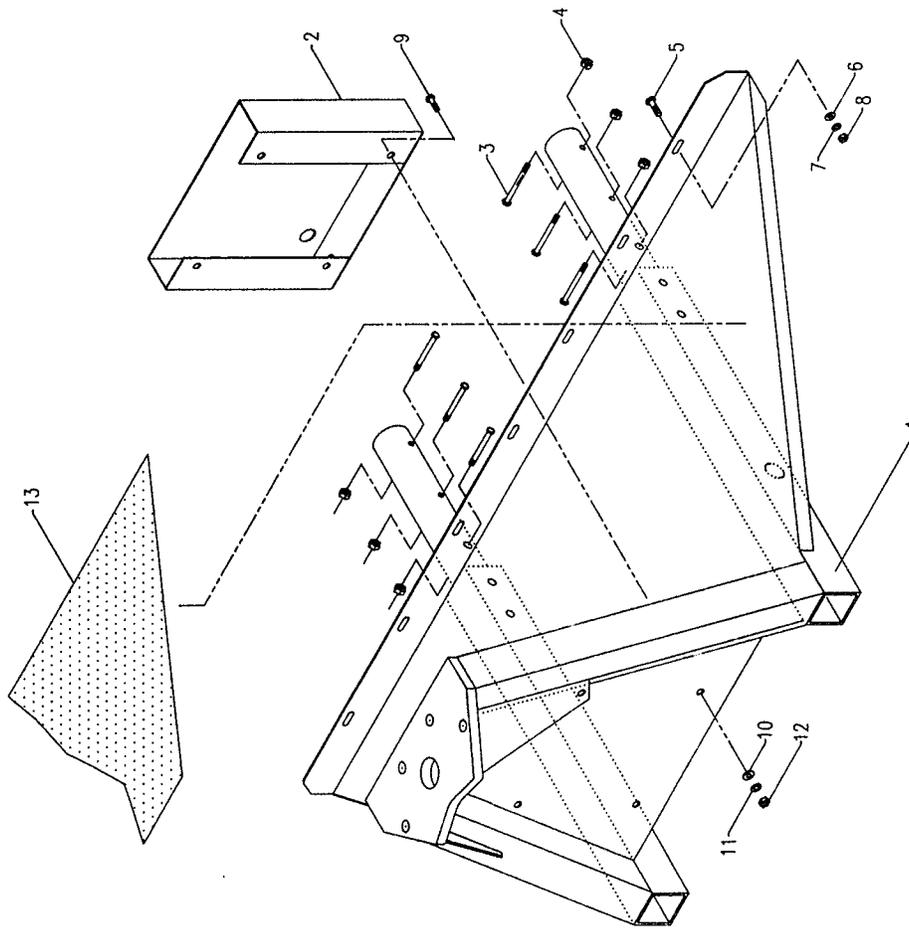

ITEM	PART NO.	PART DESCRIPTION	QTY
1	0219002	FRONT FRAME	1
2	0536009	CLIP BOARD HOLDER	1
3	0346210	HEX SCREW 3/8 x 2 3/4	6
4	0338102	LOCK NUT 3/8	6
5	0346028	CARRIAGE BOLT 1/4 x 3/4	7
6	0353100	FLAT WASHER 1/4	7
7	0353001	LOCK WASHER 1/4	7
8	0338100	LOCK NUT 1/4	7
9	0346102	HEX SCREW 5/16 x 3/4	4
10	0353101	FLAT WASHER 5/16	4
11	0353002	LOCK WASHER 5/16	4
12	0338101	LOCK NUT 5/16	4
13	0336004	ABRASIVE NON SKID	1

**Salsco, Inc.**  
**LEADER BY DESIGN**

105 SCHOOL HOUSE ROAD  
 CHESHIRE, CONNECTICUT 06410  
 PHONE 203-271-1682  
 FAX 203-271-2596  
 1-800-8-SALSCO

ASSEMBLY NO. 0001001


SUBASSEMBLY NO. 0119004

DWG NAME FRONT FRAME ASSEMBLY

CATALOG DWG NO. 0719004

REV.4-19-90

ITEM	PART NO.	PART DESCRIPTION	QTY
1	0337001	KOHLER 8 HP MOTOR	1
	0337005	KAWASAKI 7 1/2 HP	1
	0337006	KOHLER 8 HP MOTOR	1
	0337003	KAWASAKI 7 1/2 HP	1
2	0338102	LOCK NUT 3/8-16	7
3	0353102	FLAT WASHER 3/8	13
4	0346205	HEX SCREW 3/8 x 1 1/2	4
5	0313001	PUMP COUPLING	4
6	0353003	LOCK WASHER 3/8	7
7	0346203	HEX SCREW 3/8 x 1	4
8	0313004	SPYDER COUPLING 1" ID	1
9	0313005	RUBBER COUPLING	1
10	0313005	SPYDER COUPLING .593 ID	1
11	0506014	TANK M/TNG PLATE	1
12	0317002	JIC ADAPTER	1
13	0455042	SPACER	1
14	0346207	HEX SCREW 3/8 x 2	1
15	0331004	SQ KEY 3/16 X 1	1
16	0350003	EXTENSION SPRING	1
17	0455025	THREADED ROD	1
18	0338006	BALL JOINT	4
19	0338021	HEX NUT 5/16-24	6
20	0353002	LOCK WASHER 5/16	4

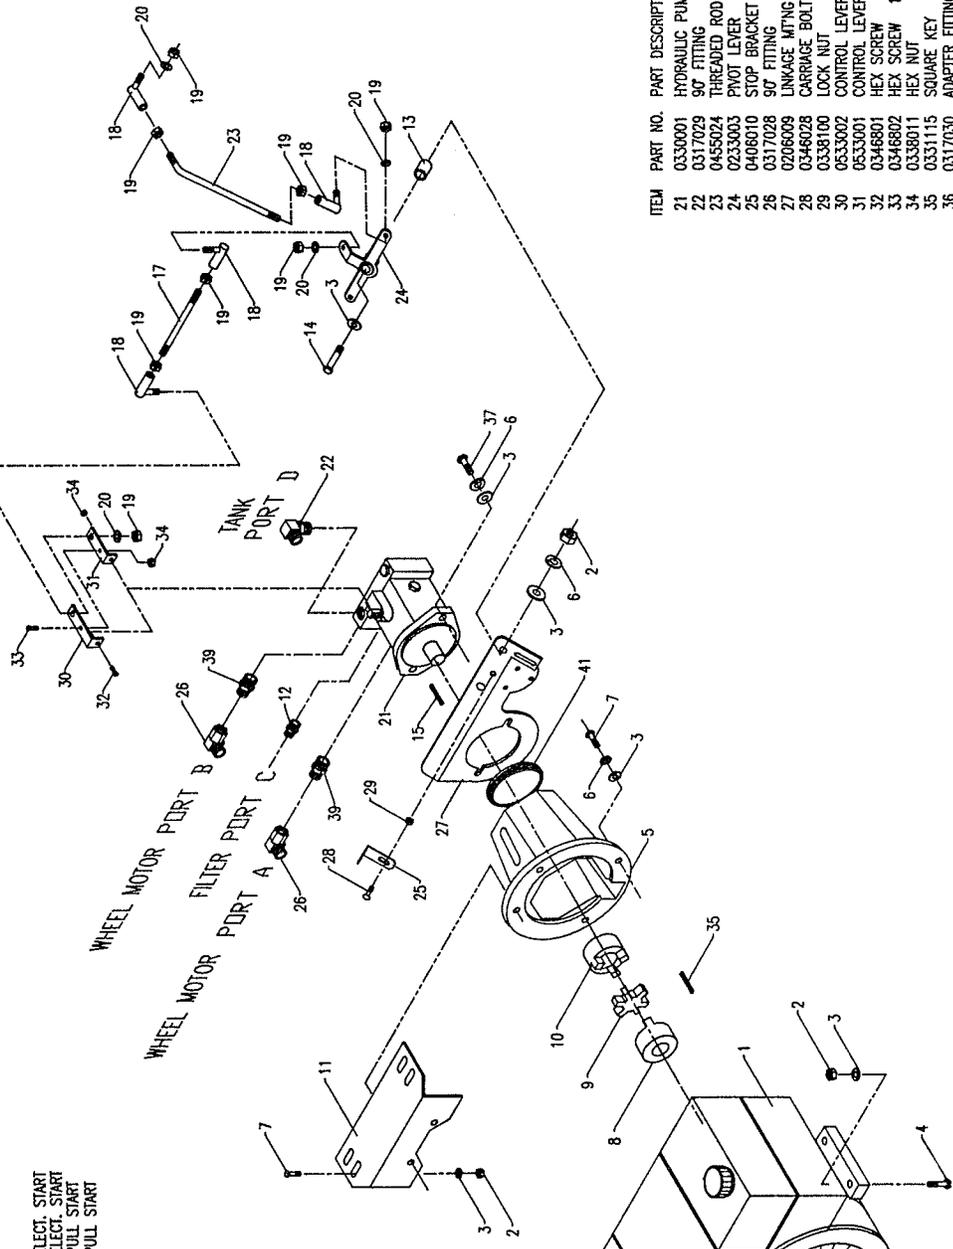

ITEM	PART NO.	PART DESCRIPTION	QTY
21	0330001	HYDRAULIC PUMP	1
22	0317029	90° FITTING 9/16-18 JIC	1
23	0455024	THREADED ROD	1
24	0233003	PIVOT LEVER	1
25	0408010	STOP BRACKET	1
26	0317028	90° FITTING 3/4-16 JIC	2
27	0206009	LINKAGE M/TNG BRKT	1
28	0346028	CARRIAGE BOLT 1/4 X 3/4	1
29	0338100	LOCK NUT 1/4-20	1
30	0353002	CONTROL LEVER	1
31	0353001	CONTROL LEVER	1
32	0346801	HEX SCREW 10-32 X 1	1
33	0346802	HEX SCREW 10-32 X 1/2	1
34	0338011	HEX NUT 10-32	2
35	0331115	SQUARE KEY 1/4 SQ	1
36	0317030	ADAPTER FITTING	2
37	0346205	HEX SCREW 3/8 X 1 1/2	2
38	0415006	ALUM COUPLING	1


**Salsco, Inc.**  
LEADER BY DESIGN

105 SCHOOL HOUSE ROAD  
CHESHIRE, CONNECTICUT 06410  
PHONE 203-271-1682  
FAX 203-271-2596  
1-800-8-SALSCO

ASSEMBLY NO.	0001004	KAWASAKI ELECTRIC	SUBASSEMBLY NO.	0137004	DWG NAME	MOTOR & HYD. PUMP ASSEMBLY	CATALOG DWG NO.	0737004
ASSEMBLY NO.	0001001	KOHLER ELECTRIC	SUBASSEMBLY NO.	0137002	DWG NAME	MOTOR & HYD. PUMP ASSEMBLY	CATALOG DWG NO.	0737002

REV 4-20-90

ITEM	PART NO.	PART DESCRIPTION	QTY
1	0252001	HYDRAULIC TANK	1
2	0318004	FILLER CAP	1
3	0317009	3/8 PIPE PLUG	2
4	0317010	3/4 PIPE PLUG	1
5	0317004	PIPE NIPPLE	1
6	0317003	STREET ELBOW	1
7	0318002	FILTER & HOUSING	1
8	0318003	REPLACEMENT FILTER	1
9	0317011	REDUCER BUSHING	2
10	0317005	JIC ELBOW	2
11	0314004	SALSCO DECAL	2
12	0327003	HOSE ASSEMBLY	2
	0314005	DECAL SAFETY RULES	1

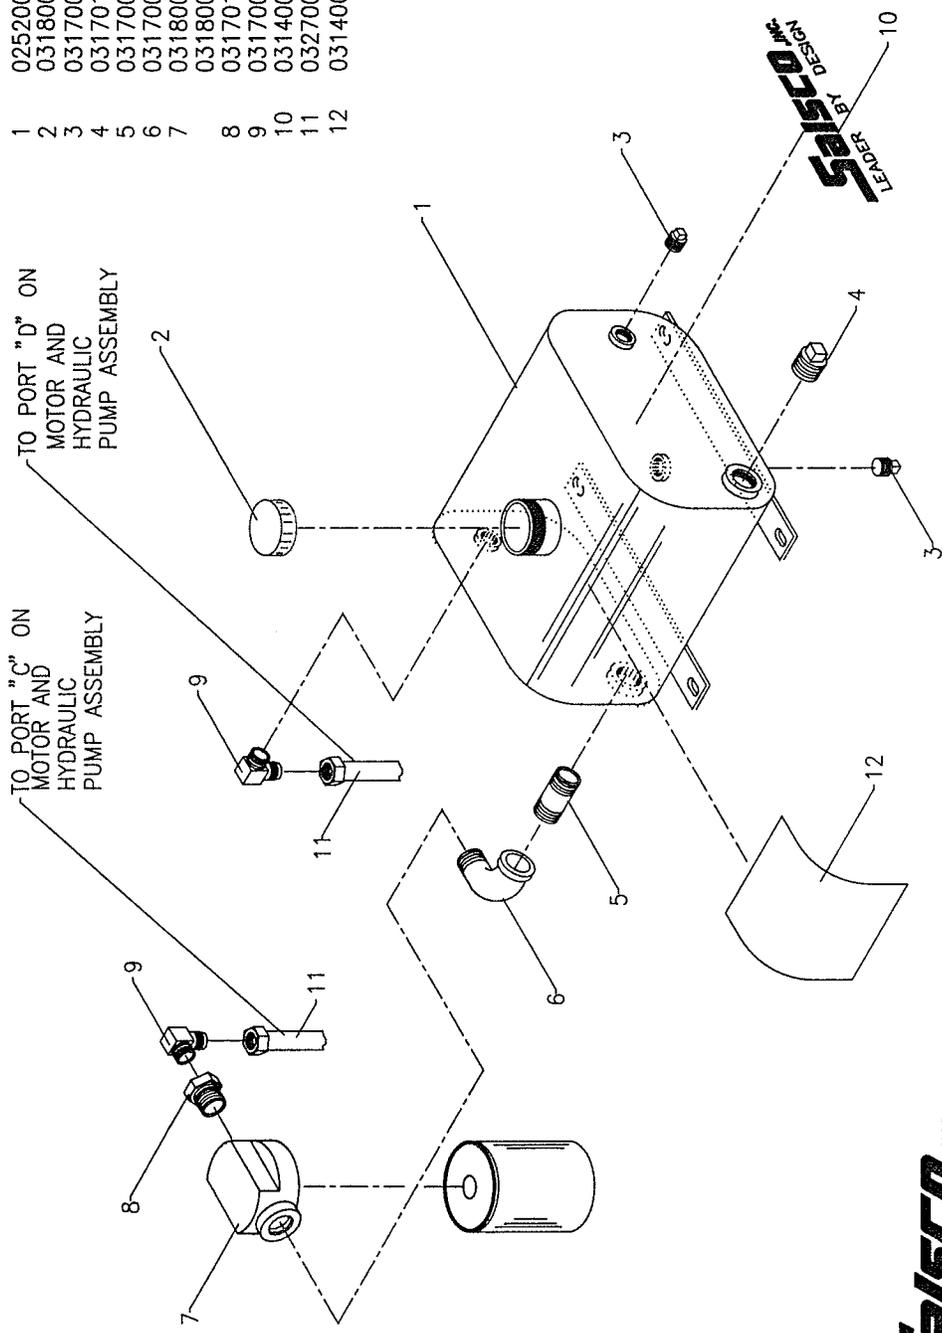

NOTE DECAL ITEM 12  
 START UP SECTION OF THIS DECAL  
 MUST BE CUT AND INSTALLED  
 ON HANDLE BAR PANEL


**SALSCO, INC.**  
 LEADER BY DESIGN

105 SCHOOL HOUSE ROAD  
 CHESHIRE, CONNECTICUT 06410  
 PHONE 203-271-1682  
 FAX 203-271-2596  
 1-800-8-SALSCO

ASSEMBLY NO. 0001001	SUBASSEMBLY NO. 0152002	DWG NAME HYDRAULIC TANK	CATALOG DWG NO. 0752002
----------------------	-------------------------	-------------------------	-------------------------

REV 4-20-90

ITEM	PART NO.	PART DESCRIPTION	QTY
1	0236011	BUMPER	1
2	0236010	MOTOR FRAME W/BUSHING	1
2A	0307002	REPLACEMENT BUSHING	2
3	0206011	STEERING SUPPORT BK'T	1
3A	0307011	REPLACEMENT BUSHING	2
4	0455035	PIVOT SHAFT	1
5	0350002	SHOCK SPRING	1
6	0346203	HEX SCREW 3/8 X 1	2
7	0353003	LOCK WASHER 3/8	2
8	0338102	LOCK NUT 3/8	2
9			
10	0346414	HEX SCREW 1/2 X 4"	1
11	0455033	SPACER .765	1
12	0455032	SPACER .860	1
13	0346406	HEX SCREW	4
14	0353095	THRUST WASHER	1
15	0338104	LOCK NUT	5
16	0338101	LOCK NUT	1
17	0346106	HEX SCREW	1
18	0317001	GREASE FITTING STRAIGHT	2
19	0317035	GREASE FITTING 90°	1

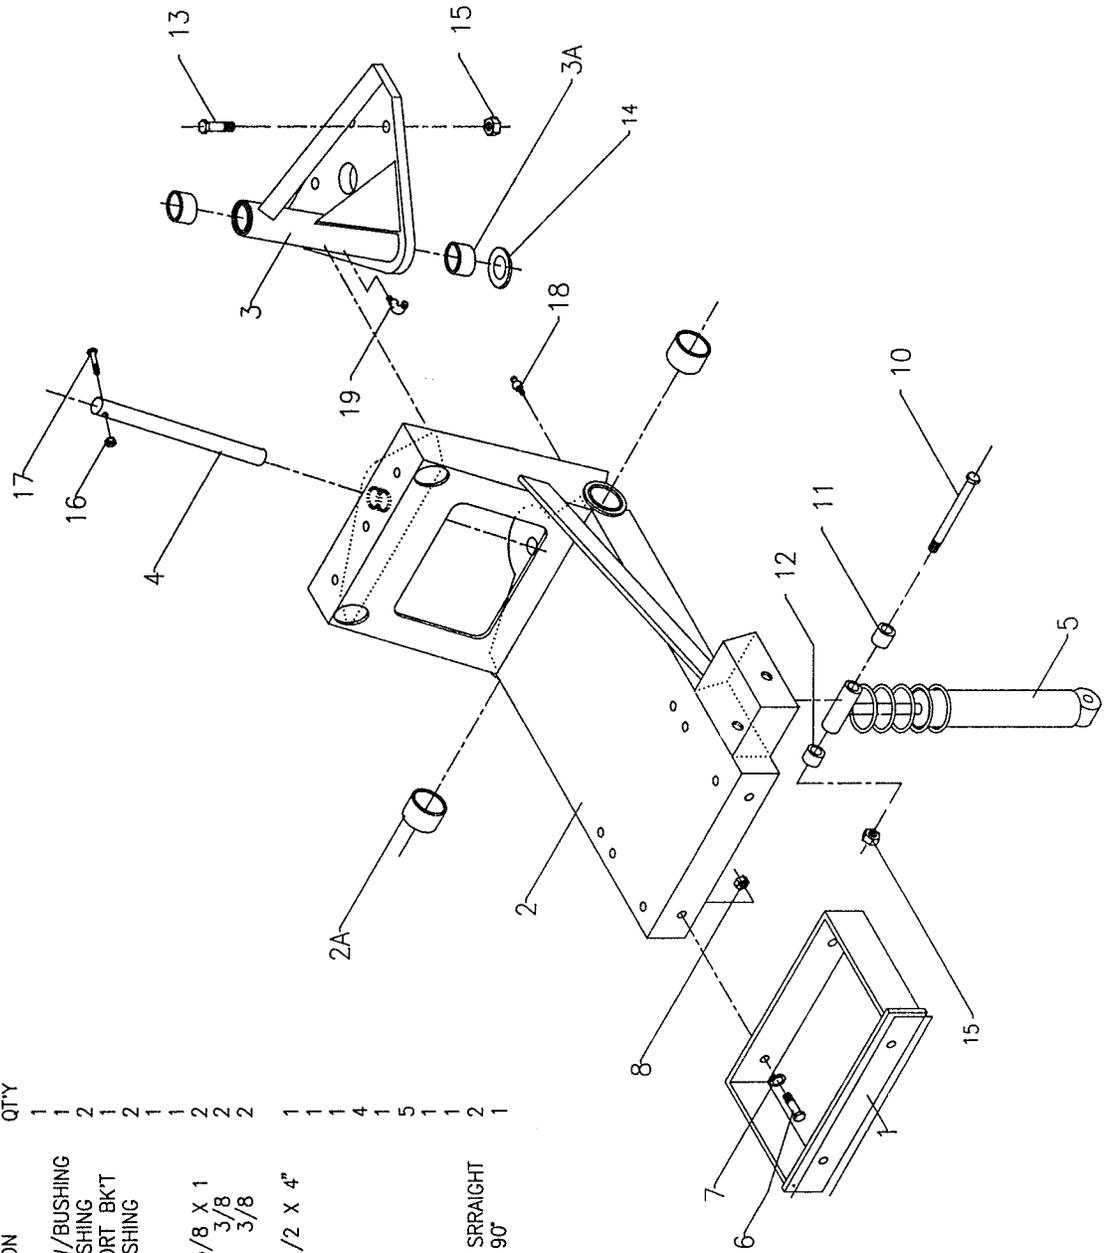

**SALISCO** .INC.  
LEADER BY DESIGN

105 SCHOOL HOUSE ROAD  
CHESHIRE, CONNECTICUT 06410  
PHONE 203-271-1682  
FAX 203-271-2596  
1-800-8-SALISCO

ASSEMBLY NO. 0001001

SUBASSEMBLY NO. 0119003

DWG NAME


MOTOR FRAME ASSEMBLY

CATALOG DWG NO. 0719003

RFV. 4-73-90

ITEM	PART NO.	PART DESCRIPTION	QTY
1	0223005	HANDLE BARS	1
2	0223004	CONTROL HANDLE	1
3	032003	HANDLE GRIP	1
4	0308001	THRUSTLE GRIP	1
5	0346102	HEX SCREW 5/16 X 3/4	1
6	0353002	LOCK WASHER 5/16	1
7	0353101	FLAT WASHER 5/16	1
8 *	0315020	KEY SWITCH KOHLER	1
8 *	0315029	KEY SWITCH KAWASAKI	1
9	0315001	KEY SWITCH PULL START	1
9	0320001	HOUR METER	1
10	0336025	CAP (OPTIONAL PULL STARTS)	1
11	0346203	HEX SCREW 3/8 X 1	5
12	0314017	DECAL DO NOT STAND	1
13	0338102	LOCK NUT 3/8	5
14	0315002	EYE CONNECTOR	1
15	0315013	WHITE WIRE	5 IN.
16	0315003	TAB CONNECTOR	2
17	0315011	BLUE WIRE	16 IN.
18	0314008	ON OFF DECAL ELEC.START	1
19	0314018	ON OFF DECAL PULL START	1
20	0314005	SAFETY RULES DECAL	1
21	0308002	THRUSTLE CABLE	1
21	0314010	DECAL FOR.-REVERSE	1
22	0115023	WIRE HARNACE KOHLER	1
	0115030	WIRE HARNACE KAWASAKI	1
	0115031	WIRE HARNACE PULL START	1


\* = SUPPLIED WITH MOTORS

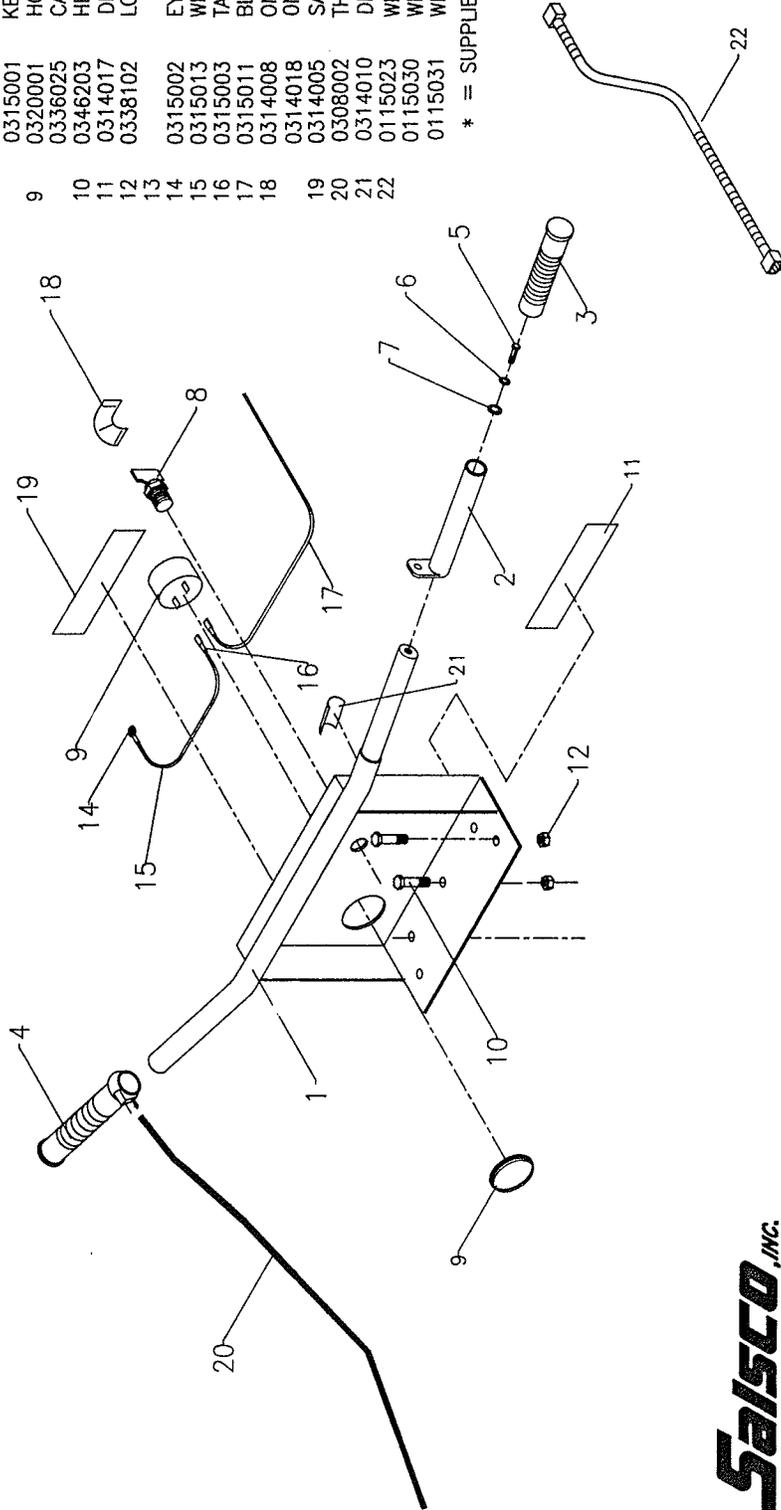

**Salsco, Inc.**  
LEADER BY DESIGN


105 SCHOOL HOUSE ROAD  
CHESHIRE, CONNECTICUT 06410  
PHONE 203-271-1682  
FAX 203-271-2596  
1-800-8-SALSCO

ASSEMBLY NO. 0001004	SUBASSEMBLY NO. 0123010	DWG NAME HANDLE BAR ASSEMBLY	CATALOG DWG NO. 0723010
ASSEMBLY NO. 0001001	SUBASSEMBLY NO. 0123006	DWG NAME HANDLE BAR ASSEMBLY	CATALOG DWG NO. 0723006

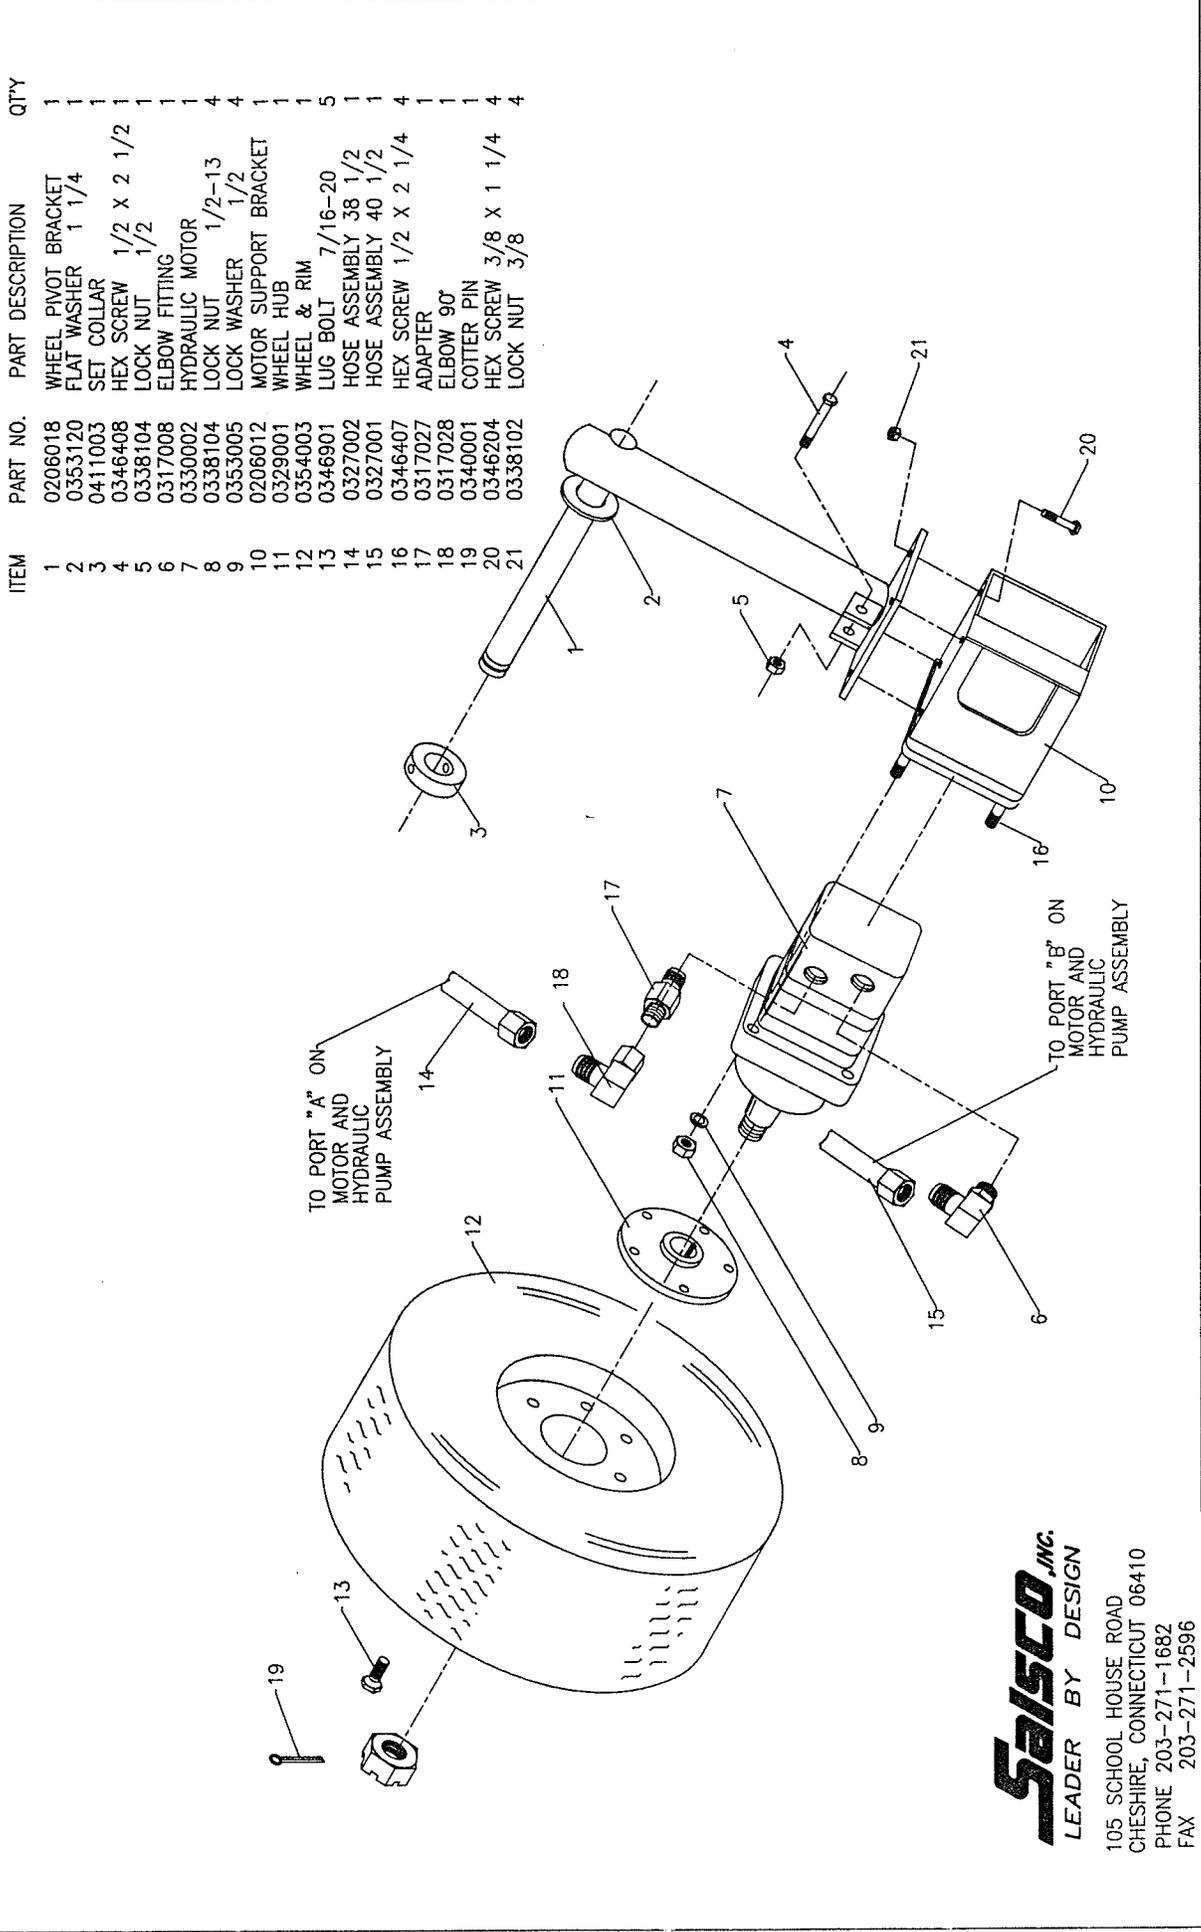

ITEM	PART NO.	PART DESCRIPTION	QTY
1	0206018	WHEEL PIVOT BRACKET	1
2	0353120	FLAT WASHER 1 1/4	1
3	0411003	SET COLLAR	1
4	0346408	HEX SCREW 1/2 X 2 1/2	1
5	0338104	LOCK NUT 1/2	1
6	0317008	ELBOW FITTING	1
7	0330002	HYDRAULIC MOTOR	1
8	0338104	LOCK NUT 1/2-13	4
9	0353005	LOCK WASHER 1/2	4
10	0206012	MOTOR SUPPORT BRACKET	1
11	0329001	WHEEL HUB	1
12	0354003	WHEEL & RIM	1
13	0346901	LUG BOLT 7/16-20	5
14	0327002	HOSE ASSEMBLY 38 1/2	1
15	0327001	HOSE ASSEMBLY 40 1/2	1
16	0346407	HEX SCREW 1/2 X 2 1/4	4
17	0317027	ADAPTER	1
18	0317028	ELBOW 90°	1
19	0340001	COTTER PIN	1
20	0346204	HEX SCREW 3/8 X 1 1/4	4
21	0338102	LOCK NUT 3/8	4

**Salsco, Inc.**  
 LEADER BY DESIGN  
 105 SCHOOL HOUSE ROAD  
 CHESHIRE, CONNECTICUT 06410  
 PHONE 203-271-1682  
 FAX 203-271-2596  
 1-800-8-SALSCO

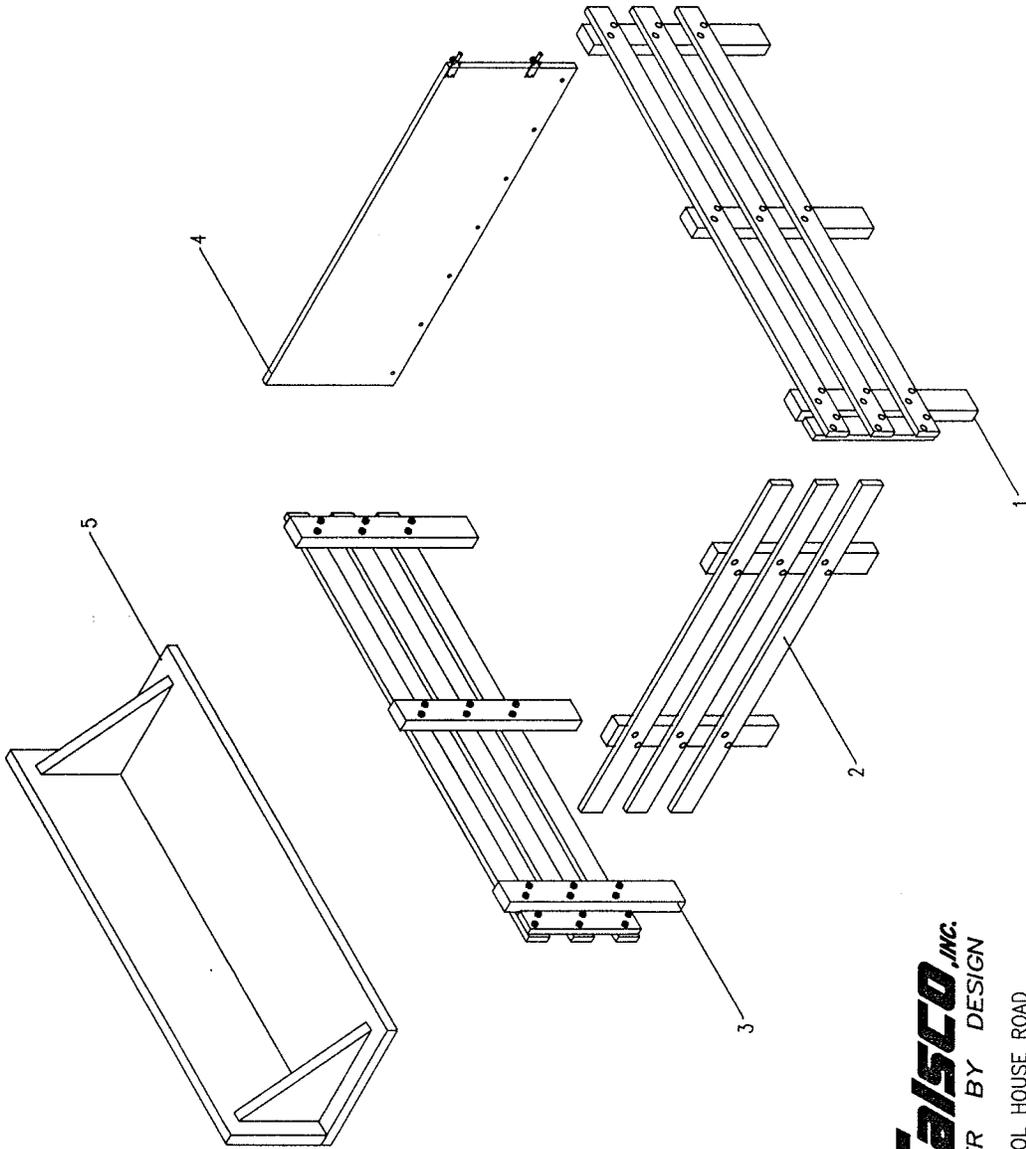

ITEM	PART NO.	PART DESCRIPTION	QTY
1	0136015	WOODEN RACK--RIGHT	1
2	0136014	WOODEN RACK--BACK	1
3	0136013	WOODEN RACK--LEFT	1
4	0136012	SEPARATOR BOARD	1
5	0547002	SIDE SEAT	2

**Salsco, Inc.**  
**LEADER BY DESIGN**

105 SCHOOL HOUSE ROAD  
 CHESHIRE, CONNECTICUT 06410  
 PHONE 203-271-1682  
 FAX 203-271-2596  
 1-800-8-SALSCO

ASSEMBLY NO. 0001001 SUBASSEMBLY NO.

DWG NAME OPTIONAL EQUIPMENT

CATALOG DWG NO. 0736019

1-22-90

# Suggested Tightening Torques For Alloy 1960 Inch Series Socket Head Cap Screws

NOMINAL SIZE	BASIC SCREW DIAMETER INCHES	TORQUE TO TIGHTEN SCREWS TO YIELD (in-lb)		TIGHTENING TORQUE* (in-lb)	
		UNRC	UNRF	UNRC	UNRF
0	0.0600	—	3.5	—	2.6
1	0.0730	6	6.5	4.5	4.8
2	0.0860	10	11	7.5	8
3	0.0990	15	16	11	12
4	0.1120	22	24	16	18
5	0.1250	32	33	24	24
6	0.1380	40	45	30	34
8	0.1640	74	78	55	58
10	0.1900	105	120	79	90
		(ft-lb)		(ft-lb)	
1/4	0.2500	22	25	17	19
5/16	0.3125	46	51	35	38
3/8	0.3750	83	93	62	70
7/16	0.4375	132	146	100	109
1/2	0.5000	203	230	150	172
5/8	0.6250	380	430	283	317
3/4	0.7500	667	750	500	562
7/8	0.8750	917	1020	688	767
1	1.0000	1390	1520	1040	1080
1-1/4	1.2500	2780	3080	2080	2310
1-1/2	1.5000	4850	5450	3625	4080

Nominal Sizes	Tensile Strength P.S.I. Min.	Yield Strength P.S.I. Min.	Elongation* In 2 inches Per Cent Min.	Reduction of Area* Per Cent Min.	Minimum Hardness Rockwell C
0 to 1/2	180,000	162,000	12	35	39
Over 1/2	170,000	153,000	14	40	38

\* Listed tightening torques are 75 percent of the torque to yield based on ASTM574. Specification listing tensile strength of 180,000 PSI for screw size 0.500 and smaller and 170,000 PSI for screw size 0.625 and larger. Values based on plated and non-lubricated fasteners.

Tightening torques are only recommended for proper applications. Refer to your engineering stats.

# Suggested Tightening Torques For Other Alloy Socket Screw Products (INCH-POUND)

Nom. size	Basic Screw Diameter	Button Head Flat Head Hex Key Size	Flat Head		Button Head		Nominal Size	Hex Key Size	Shoulder Screw	Low Head
			Tightening Torque	Tightening Torque	Tightening Torque	Tightening Torque				
0	.060	.035	—	1.5	—	1.5	—	—	—	
1	.073	.050	2.5	2.5	2.5	2.5	—	—	—	
2	.086	.050	4.5	4.5	4.5	4.5	—	—	—	
3	.099	1/16	7	7	7	7	—	—	—	
4	.112	1/16	8	8	8	9	4	.050	5.0	
5	.125	5/64	12	13	12	12	5	.062	9.5	
6	.138	5/64	15	17	16	16	6	.062	9.5	
8	.164	3/32	30	31	30	30	8	5/64	19.4	
10	.190	1/8	40	45	40	45	10	3/32	33.5	
1/4	.250	5/32	100	110	100	110	1/4	1/8	50	77.9
5/16	.312	3/16	200	220	200	220	5/16	5/32	125	156.0
3/8	.375	7/32	350	400	350	400	3/8	3/16	265	273.0
7/16	.437	1/4	560	625	—	—	7/16	7/32	—	428.0
1/2	.500	5/16	850	1,000	850	1,000	1/2	1/4	470	615.0
9/16	.562	5/16	1,200	1,360	—	—	—	—	—	—
5/8	.625	3/8	1,700	1,900	1,700	1,800	5/8	5/16	1,150	1,315.0
3/4	.750	1/2	3,000	3,200	—	—	3/4	3/8	2,000	—
7/8	.875	9/16	5,000	5,400	—	—	—	—	—	—
1	1.000	5/8	8,000	7,600	—	—	1	1/2	4,000	—

\* Listed tightening torques are 75 percent of the torque to yield based on ASTM574. Specification listing tensile strength of 180,000 PSI for screw size 0.500 and smaller and 170,000 PSI for screw size 0.625 and larger. Values based on plated and non-lubricated fasteners.

Tightening torques are only recommended for proper applications. Refer to your engineering stats.

## WARRANTY POLICY

Your Salsco Commercial or Turf Equipment product is a commercial type product and is normally manufactured and sold for commercial or industrial use. Salsco will, for the original purchaser, for two (2) years from the date of purchase (90 days if used for rental purposes) repair, replace, free of charge, any part or parts found to be defective in material, workmanship or both. Any transportation charges to be borne by the purchaser.

If, during the Warranty Period, the product does not function properly due to defect, simply contact Salsco and follow the warranty procedures on page 19.

SALSCO, INC.  
105 School House Road  
Cheshire, CT 06410  
(203) 271-1682  
Fax: (203) 271-2596  
1-800-8SALSCO

This warranty does not include incidental or consequential damages and is exclusive of any implied warranties.

This warranty does not include normal maintenance parts, including, but not limited to spark plugs, filters, lubricants, etc.

This warranty does not include parts or components which are covered under the original manufacturers warranty, including, but not limited to engine and differential.

BE SURE TO READ AND UNDERSTAND THIS MANUAL BEFORE OPERATING

## SALSCO'S WARRANTY PROCEDURE

In order for Salsco to process your warranty claims (see copy on page-20) in a timely manner you must follow the simple procedures listed below:

### 1) MACHINE OR PART FAILURE

- a) Call our service department for easy instruction on how to correct or repair the problem. Preventive maintenance will also be suggested.
- b) Fill in all information requested on warranty claim form (date of purchase, company name, address, etc.).
- c) List all parts used. Make sure part numbers are correct. You can obtain these from your manual. Any parts that you believe to be defective or any parts that break should be retained for possible inspection until after the warranty has been paid or part has been replaced.

Please make note that Salsco is not responsible for the warranty or failure of engines or hydraulic pumps. Please call the manufacturer directly.

If you have any questions, please do not hesitate to call us. Our toll free number is 1-800-8SALSCO.

BE SURE TO READ AND UNDERSTAND THIS MANUAL BEFORE OPERATING



