


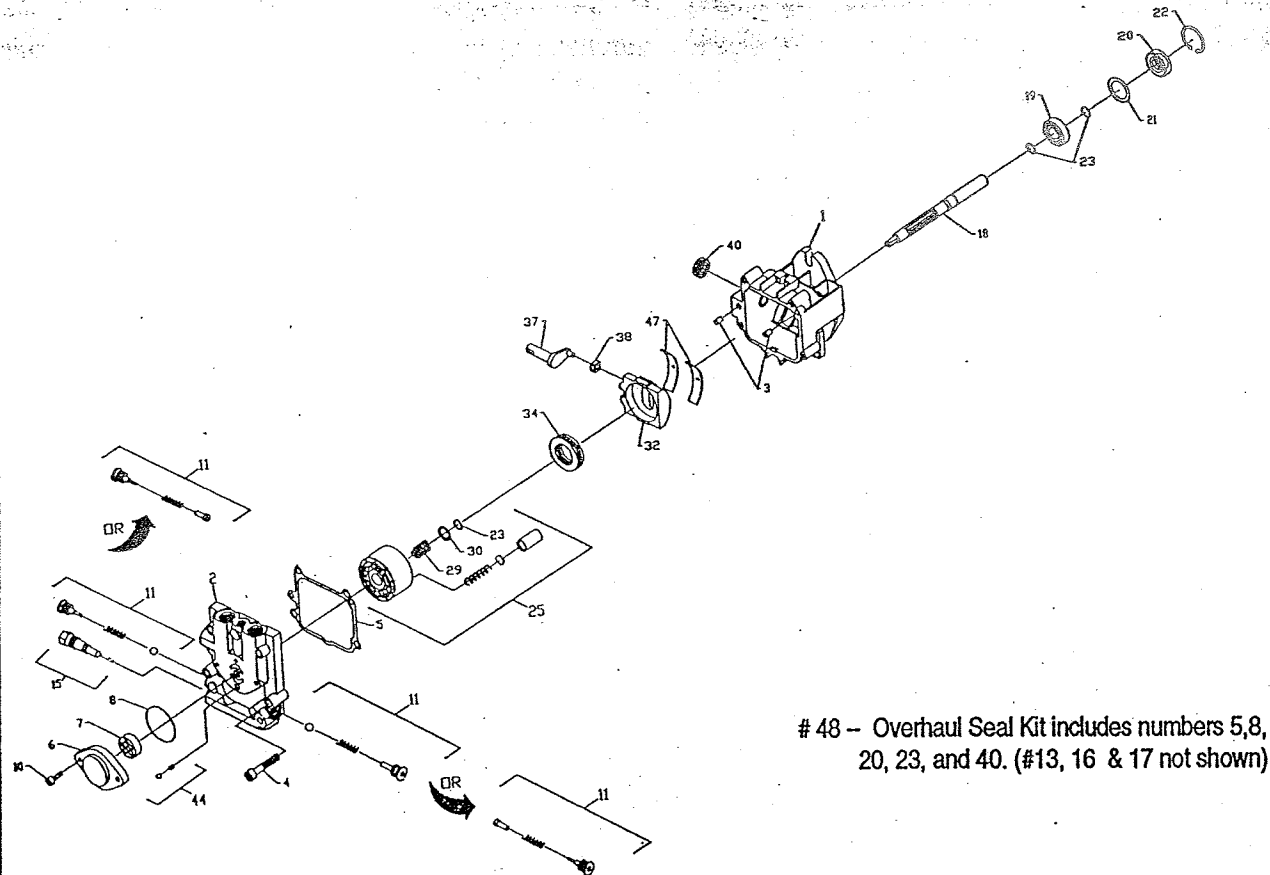

MODEL#	SHAFT#	BYPASS VALVE KIT	CHECK VALVE KITS		ROTATION
			Trunnion Side	Opp. Trunnion	
BDP-10L-110	J1030673	2510036	2510008	2510008	CW
BDP-10L-111	J1030673	2510036	2510000	2510008	CCW
BDP-10L-112	J1020695	2510036	2510008	2510008	CW
BDP-10L-113	J1020695	2510036	2510008	2510008	CCW
BDP-10L-116	J1030673	2510038	2510008	2510008	CCW
BDP-10L-117	J1030673	2510037	2510027	2510027	CCW
BDP-10L-118	J1030673	2510039	2510008	2510008	CCW
BDP-10L-119	J1030673	2510037	2510027	2510008	CCW
BDP-10L-120	J1030673	2510036	2510027	2510027	CCW
BDP-10L-121	J1030673	2510037	2510008	2510027	CCW
BDP-10L-122	J1030673	2510038	2510008	2510008	CW
BDP-10L-123	J1030673	2510036	2510027	2510027	CW

BDP-10L VARIABLE PUMP

Parts List

1	HOUSING KIT SEAL - LIP HOUSING BEARING, JOURNAL	2513017	1 1 1 1	20	SEAL - LIP	9008000-0128	1
2	END CAP KIT END CAP BEARING, JOURNAL	2513016	1 1 1	21	SPACER	2003018	1
3	PIN, ST. HDLS	9004800-2506	2	22	RING - RETAINING	2003052	1
4	SCREW - SOCKET HEAD	9007314-0810	4	23	RING - RETAINING	2003016	3
5	END CAP GASKET	2003067	1	25	CYLINDER BLOCK KIT CYLINDER BLOCK PISTON SPRING - PISTON WASHER - PISTON SPRING - BLOCK WASHER - BLOCK THRUST RING - RETAINING	2513009	1 5 5 5 1 1 1
6	CHARGE PUMP ASSEMBLY	2003040	1	29	SPRING - BLOCK	2003014	1
7	GEROTOR ASSEMBLY	J1041008	1	30	WASHER - BLOCK THRUST	2003017	1
8	O-RING	9004101-1340	1	32	SWASHPLATE	2003087	1
10	SCREW - SOCKET HEAD	9007375-0038	2	34	BEARING - ROLLER THRUST	2003044	1
11	CHECK VALVE KIT SPRING CHECK PLUG BALL (OR) CHECK VALVE ORIFICE	2510008 2510027	1 1 1	37	TRUNNION ARM	2003005	1
15	BY-PASS VALVE KIT BY-PASS VALVE BACK-UP RING O-RING	2510036 2510037 2510038 2510039	1 1 1 1	38	GUIDE SLOT	2000015	1
18	SHAFT - PUMP	J1030673 J1020695	1 1	40	SEAL - LIP	9008000-0126	1
19	BEARING - BALL	2003043	1	44	CHARGE RELIEF VALVE KIT SPRING - CHECK RELIEF BALL	2510011	1 1
				47	BEARING - CRADLE	J1040976	2
				48	OVERHAUL SEAL KIT END CAP GASKET O-RING O-RING BACK UP RING SEAL - LIP RING - RETAINING SEAL - LIP	2513018	1 1 3 1 1 3 1

NOTES