Quality of Workmanship Innovative Design Built to Last!



HP5.5 ROLLER - 09083 Operators And Parts Manual



MANUFACTURER OF OUTDOOR POWER EQUIPMENT

Products for Turf & Lawncare, Rental, Construction, Tree Care, Wood Processing, Nursery & Farm Industries
3-1/2" - 18" Capacity, Gas, Diesel, & PTO Wood/Brush Chippers - Slab Chippers
Gas, Electric & Tow Behind Rollers - Tranz-Former Roller - CRV Core Recovery Vehicle
Mini-Paver - Mini-Track Paver - Cobra Curbers - Scorpion Router - Concrete Paver
Chipper Shredder Vacuums - Tailgate & Truckloader Vacuums
9 cu. yds. - 50 cu. yds. Per Hour, Electric, PTO & Diesel Powered Shaving Mills



105 Schoolhouse Road Cheshire, CT 06410 U.S.A. 800-872-5726 (Toll Free), 203-271-1682, 203-271-2596 (Fax) www.salsco.com, sales@salsco.com

TABLE OF CONTENTS

MODEL HP 5.5, GAS GREENS ROLLER

COVER & TABLE OF CONTENTS	Page 1
STATEMENT OF FACT	Page 2
SPECIFICATIONS & FEATURES	Page 3
MACHINE REGISTRATION	Page 4
SAFETY & OPERATING INSTRUCTIONS	Page 5
SERVICE & MAINTENANCE INSTRUCTIONS	Page 6
PARTS DIAGRAMS	Pages 7 – 24
LIGHT KIT WIRING DIAGRAM	Page - 25
TORQUE CHARTS	Page 26
WARRANTY POLICY/PROCEDURE	Page 27
COPY OF WARRANTY CLAIM FORM	Pages 28 - 29
COPY OF DEALER DELIVERY REPORT & WARRANTY CARD	Page 30
SERVICE SCHEDULE LOG	Page 31

SALSCO, INC. 105 Schoolhouse Road Cheshire, CT 06410 800-872-5726, 203-271-1682 203-271-2596 (Fax) www.salsco.com, sales@salsco.com

STATEMENT OF FACT

You have just purchased the highest quality, most maneuverable, dependable, **GREENS ROLLER** on the market today. This unit has the ability to meet exact standards and perform for years with minimum downtime. HOWEVER, it cannot read nor will it understand this manual no matter how long you leave it on top of the machine.

It is your responsibility to read and understand this manual; it is also your responsibility to be certain this information is passed along to anyone who is expected to operate this equipment. Should you choose not to read, understand and pass along the information provided you, please expect equipment failure and possible injuries to persons around this equipment.

For the safety of the operator, it is **imperative** that this manual is carefully read and understood.

Once you have read this manual, it is your responsibility to be sure that all new operators read and understand this manual, especially all cautions stated.

As a manufacturer of equipment, we have a responsibility to design a safe piece of equipment. NOTE: The important safeguards and instructions in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating this equipment.

ONLY YOU CAN PREVENT ACCIDENTS!!

	SPECIFICATIONS - Model 5.5
WARRANTY:	5 - Year Limited Warranty.
ENGINE:	13HP Honda, electric start. Rubber mounted to reduce vibration.
FUEL TANK:	Provided with engine. 1.6 gallons.
CONTROLS:	On/Off switch, choke & fuel.
HOUR METER:	Standard.
BATTERY:	12 Volt, 245 CCA automotive type.
ENGINE COOLING FAN:	Standard.
SEAT:	Molded cushion with protective edge trim, neutral safety switch & forward/reverse adjustment. Rubber mounted to reduce vibration.
STEERING SYSTEM:	All four rolls articulate & oscillate to smooth the surface of the green without changing the undulations designed into the green.
STEERING WHEEL:	13-1/4" diameter, automotive type tilt steering wheel. 13-1 ratio.
MAIN FRAME:	2-1/2" x 2-1/2" x 1/4" steel square tube. Fully gusseted and continuous welds.
DRIVE ROLLS:	Four (4) - Oscillating steel rolls, driven for positive traction. 5.5" diameter, 36" long with beveled ends. Rolls are machined to within two thousandths of an inch concentricity.
TRACTION DRIVE:	Hydraulic pump to 2 hydrostats - 1 to each set of rolls. Chain drive from hydraulic motors to rolls. #50 O-Ring Chain & Sprockets.
CLIMBING TRACTION:	Up to 40°.
BRAKES:	Hydrostatic.
HYDRAULIC COMPONENTS:	Hoses: SAE JIC hose ends & fittings. 3,000 P.S.I. working, 12,000 P.S.I. burst. Motors: Two (2) Char-Lynn 7.3 cubic inch displacement. Pump: One (1) Piston type, .97 cubic inch displacement.
ROLLING SWATH:	36".
SPEED:	Variable 0-11.9 MPH
GROUND PRESSURE:	3.47 lbs. P.S.I.
TRANSPORT TRAILER:	Axle: Spindle type with greaseable hub assemblies. Tire/wheel assemblies: 18.5 X 8.5-8 load range C, 6 ply, rated 935 lbs. Hitch: Tractor type hitch. Jack: 500 lbs. side crank with swivel wheel. Full rubber mat in box and on tailgate.
GUARDS/DECALS:	All moving parts guarded. Full set of safety decals.
PAINT:	Orange, polyester powder coat paint provides excellent outdoor weatherability and offers protection against ultraviolet discoloration. All parts painted separately.
ROLLER OPTIONS:	LED Light Kit, Top Dressing Brush Kit, Inner Spike-Air Kit, Arm Rest Seat Upgrade, Scraper Kit.
ROLLER DIMENSIONS:	Length: 45" Width: 41" Height: 57" Weight: 750 lbs.
TRAILER DIMENSIONS:	Length: 48-3/4" Width: 44-3/4" Side Rails: 10" Hitch Height: 16" Weight: 197 lbs.
3/27/2020	

MACHINE REGISTRATION				
MANUFACTURED BY:	SALSCO, INC. 105 Schoolhouse Rd., Cheshire, CT 06410 800-872-5726, 203-271-1682, 203-271-2596 (Fax) sales@salsco.com www.salsco.com			
THIS MANUAL COVERS MODEL(s):				
	nue, add improvements to, or change the design of any ition to improve existing machines, either by changing the			
	y of SALSCO to update existing machines at its own s will be made in such a way that they can be "Retro Fit" if			
Record in the space provided below the mo numbers for future reference.	del and serial number of this unit. Please retain these			
NO PARTS ORDERS will be accepted WIT PART NUMBERS. All part numbers are list	HOUT A SERIAL NUMBER, MODEL NUMBER AND ted in this manual.			
Serial Number	Model Number			
NOTE: Be sure to complete your warranty warranty claims.	card. This will ensure immediate processing of any			
READ AND UNDERSTAND THIS MANUAL BEFORE STARTING THE MACHINE				

SAFETY INSTRUCTIONS

- 1. **NEVER** leave unit running while unattended.
- 2. **NEVER** park on a green for any reason.
- 3. **NEVER** go down steep hills sideways. **ALWAYS** approach hills straight on.
- 4. **NEVER** change your mind mid-way down a steep incline. Once you've started down a steep incline, change direction only with the greatest of care and gentlest touch.
- 5. Allow engine to cool for several minutes before filling with fuel, since fuel tank is over the engine.

NOTE: HONDA ENGINES - ALWAYS TURN OFF THE FUEL SHUTOFF, WHEN THE ENGINE IS NOT RUNNING, i.e. WHEN IN TRANSPORT, STORAGE, ETC.

OPERATING INSTRUCTIONS

- 1. Check that the unit has been serviced and all fluids are checked and topped off.
- 2. Check all hydraulic hose fittings.
- 3. Push fuel shut off switch to on position.

4.

- 5. Push choke to full on position
- 6. Push throttle to just above idle.
- 7. Turn on/off switch to on position.
- 8. You should start engine from seat position. Just reach down to engine controls. Keep feet off pedals. Hydrostatic drive should come to neutral when engine starts.
- 9. Hydrostatic transmission should come to neutral when engine is started. REMEMBER: RIGHT PEDAL TO GO RIGHT, LEFT PEDAL TO GO LEFT.
- 10. Slide choke to full off position.
- 11. Once unit is running at just above idle, push pedal down slowly. Unit will begin to move. Drive it out of trailer on to grass area.
- 12. Since the unit is hydrostatic, engine should run at full R.P.M. and speed should be controlled by pressure on the pedal.

HINTS:

- 1. **KEEP BOTH FEET ON PEDALS AT ALL TIMES.** By keeping your heels planted and moving your toes to change direction, you have smooth control left to right.
- 2. If you roll the same direction as green was mowed, it's easy to follow the lines. This helps a new operator do a fine job sooner.
- 3. To insure longer life to your unit, when changing direction do so smoothly.


03/2011


SERVICE & MAINTENANCE INSTRUCTIONS


- 1. Check all hydraulic hoses **DAILY**, **or before each scheduled use**, for wear and any signs of rubbing or chaffing. **REMINDER**: Drive motor hoses should be treated as wear items and should be replaced on a yearly basis.
- 2. Check all fittings for any signs of leaking **DAILY**, or before each scheduled use.
- 3. Check all grease fittings on a **WEEKLY** basis, and grease as necessary. (Add ½ shot of grease in all four bearings.)
- 4. Check engine to manufacturers' specifications and maintenance. USE CORRECT OIL. (Per Honda Manual).
- 5. Check hydraulic oil (use correct oil per decal).
- 6. Check Fuel NEVER fill a HOT engine.
- 7. Slide fuel shut off towards the engine. Always shut off the fuel when unit is NOT in use.
- 8. Slide choke away from engine till engine starts then turn choke off allowing engine to warm up.
- 9. When transporting unit from green to green be sure to turn off fuel.
- 10. Oil & Filter Type It has been determined that your Salsco machine will perform better by using a 25 micron filter. Salsco recommends using Mobil DTE 26 or Citgo HYD 68, non-detergent hydraulic oil, or their equivalents. The oil should have a viscosity rating of at least 100 SSU. While this is not a necessity, it will improve the overall performance of your machine. Salsco is now using this filter and hydraulic oil on all our machines using hydraulics.

SAFETY IS A PRIME CONCERN AT SALSCO AND THE SAFETY DECALS ON YOUR MACHINE ARE A HIGHLY VISIBLE AND CONSTANT REMINDER TO ALL OPERATORS. REPLACEMENT SAFETY DECALS MAY BE OBTAINED BY CALLING SALSCO @ 1-800-872-5726, OR THE DEALER IN YOUR AREA.


05/2013

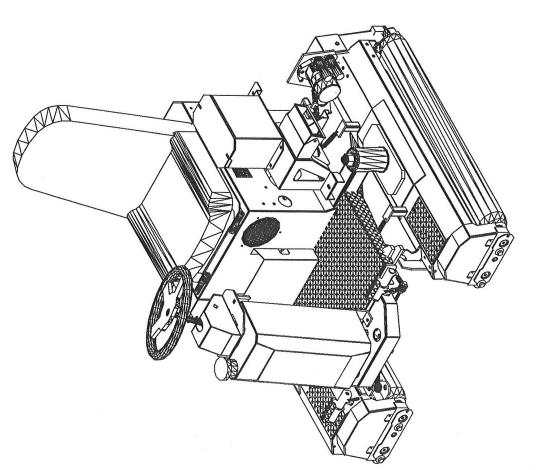

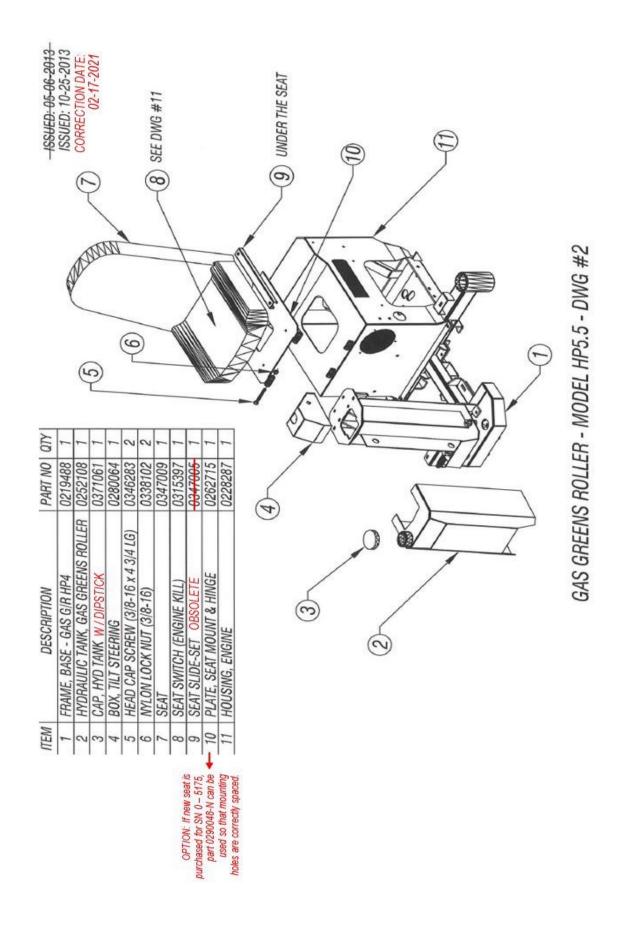

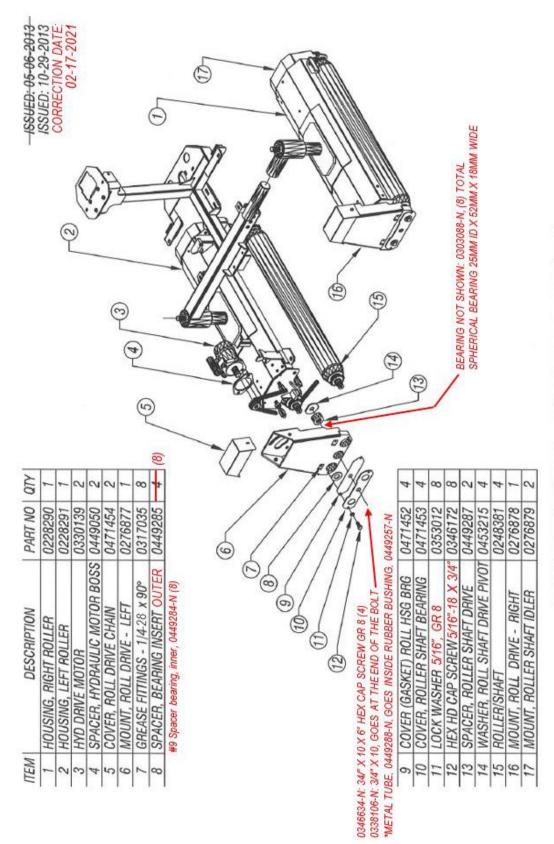


GAS GREENS ROLLER - MODEL HP5.5 - DWG #3

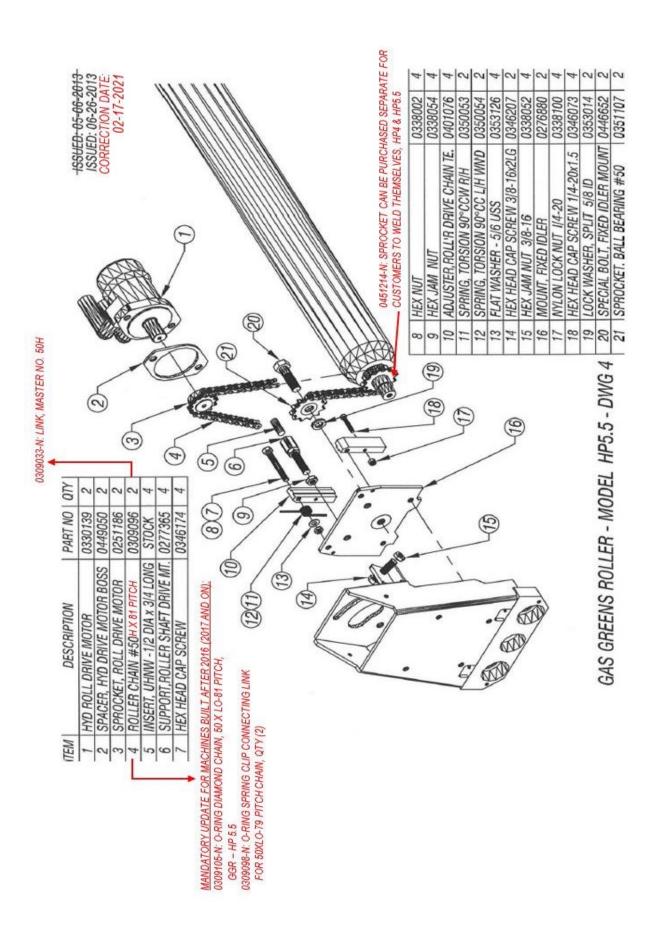


ISSUED: 15-06-2013 CORF IN DATE: (2)(3)(4)Not shown: 0307038-N Bushing, Oil-Life, (2) LEFT SIDE 0431004-N: 3/16" SQ X 1" Key (0) OBSOLETE OBSOLETE OBSOLETE OBSOLETE 100 PART NO 0309008 0353333 0309045 9000000 0353015 0288042 OBSOLETE 0336052 0303087 0245190 0338110 0309022 0346469 CAP. STEERING WHEEL OBSOLETE | 0336124 0323142 0307038 0265122 0448329 0280065 9006020 0309019 0303005 0303024 0350009 0251060 DOM TUBE - 1" OD x 1/4 WALL x 1.515 LONG DOM TUBE - 1" OD x 1/4 WALL x .875 LONG DOM TUBE - 1" OD x 1/4 WALL x 2.5 LONG FLANGETTE BEARING INSERT-3/4 ID ARM, TILT WHEEL STEERING PIVOT ROLLER CHAIN, #50 (59) LINKS CARRIAGE BOLT 1/2"-13 X 6" ZINC BRACKET, STEERING SPROCKET ROLLER CHAIN, #40 (77) LINKS SHAFT. MAIN FRAME STEERING EASY GRIP HANDLE - (1/2 - 13) BOX, STEERING REDUCTION DESCRIPTION FLANGETTE PILLOW BLOCK WASHER, FLAT - UHMW SPROCKET & SHAFT EXTENSION SPRING MASTER LINK #50 MASTER LINK #40 OCK NUT (5/8-11 BUSHING, OILLITE STEERING WHEEL ROD END (5/8-18) JAM NUT, (5/8-18) TIE ROD (5/8-18) HALF LINK #50 HALF LINK #40 TEM Replaced with 0354142-N + 11 Replaced with 0354143-N #50 ROLLER CH, 59 PITCH to be pressed with bushings Replaced 0165121-N: Needs Replaced with 0248404-N Replaced with 0309088-N Replaced with 0309051-N


Operators And Parts Manual-Model HP5.5 Gas Greens Roller 2/17/2021


GAS GREENS ROLLER - MODEL HP5.5 - DWG #6

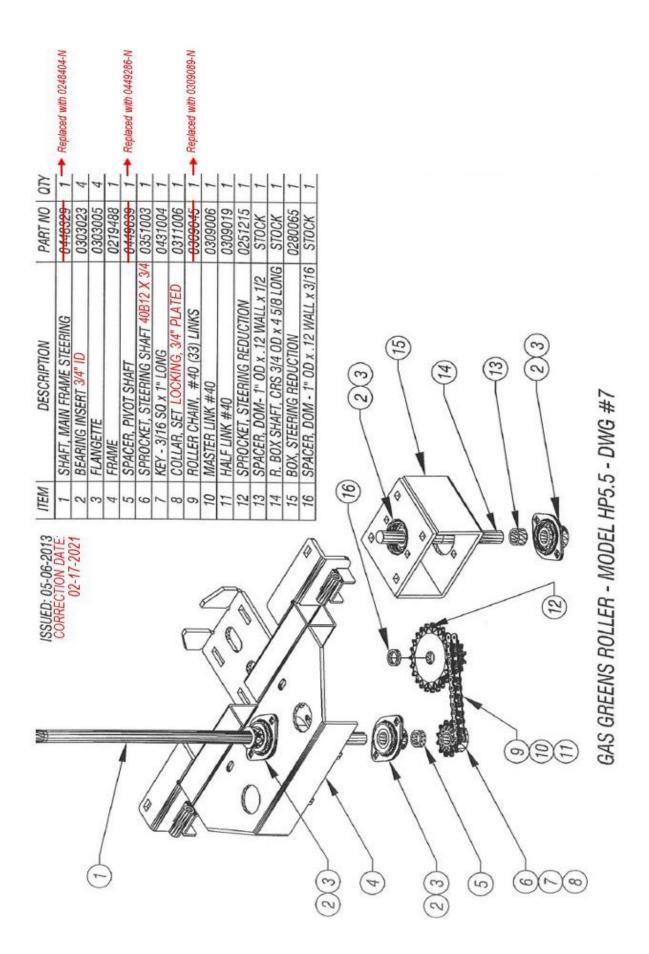


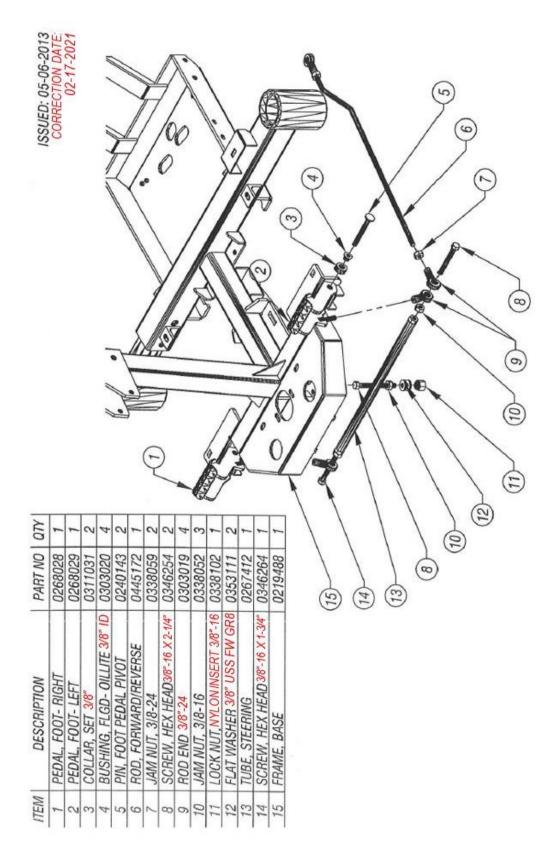



GAS GREENS ROLLER - MODEL HP5.5- DWG #8

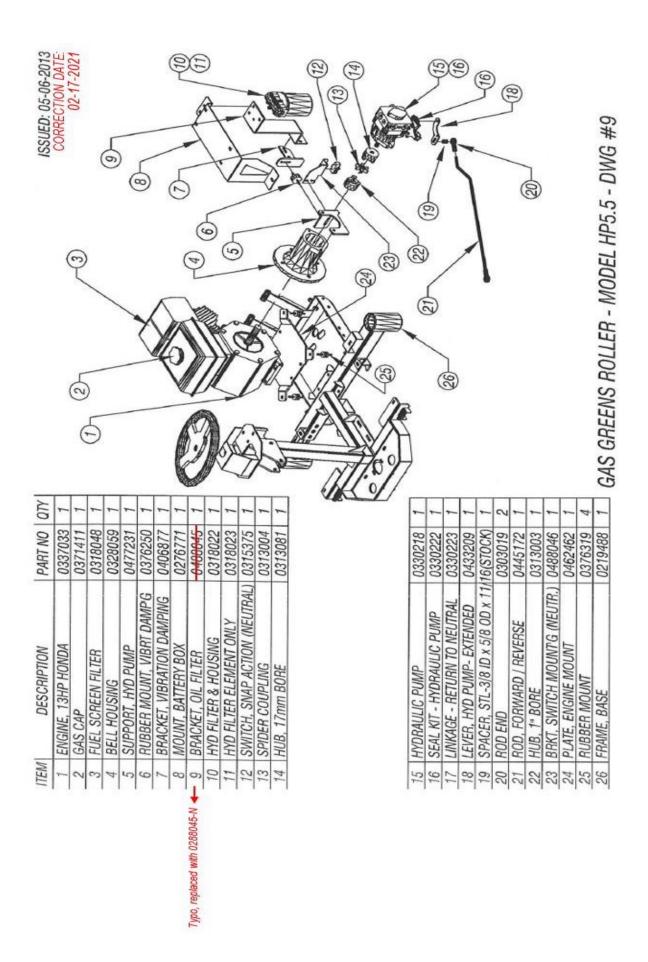


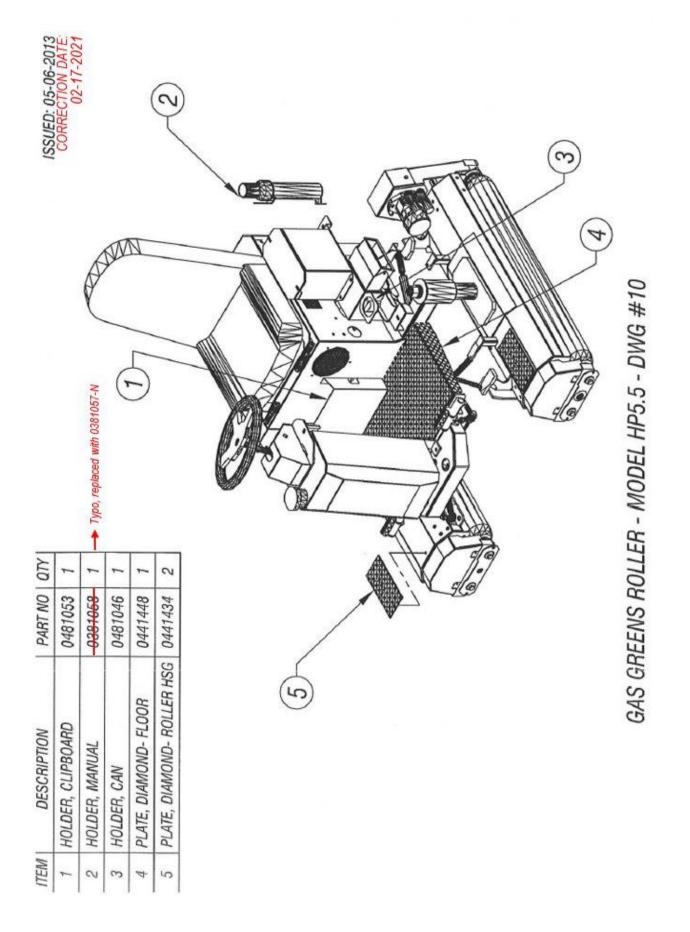


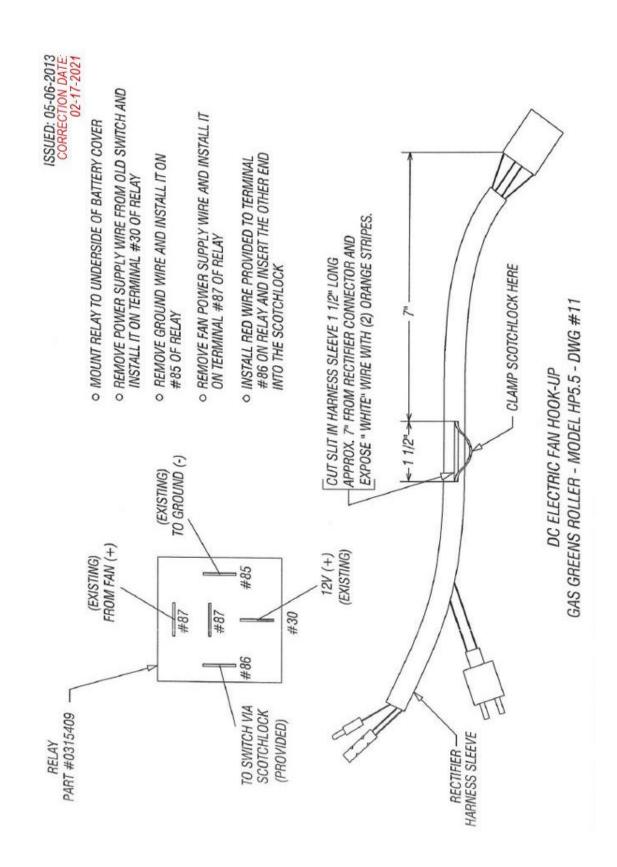


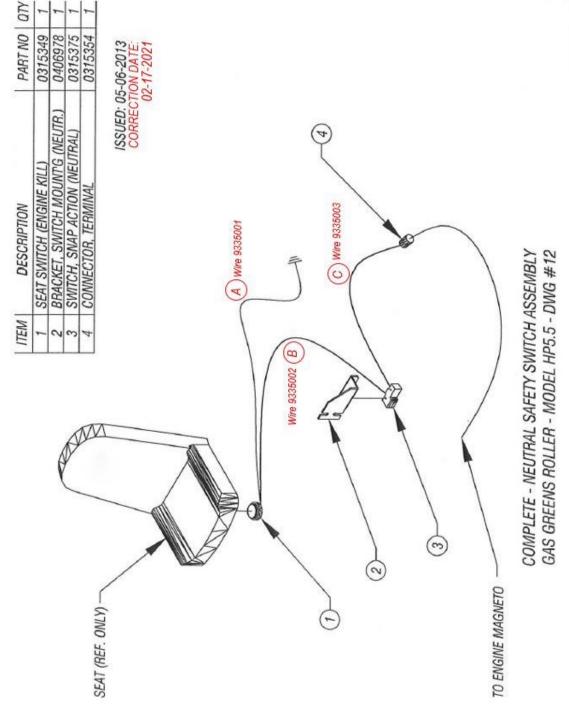


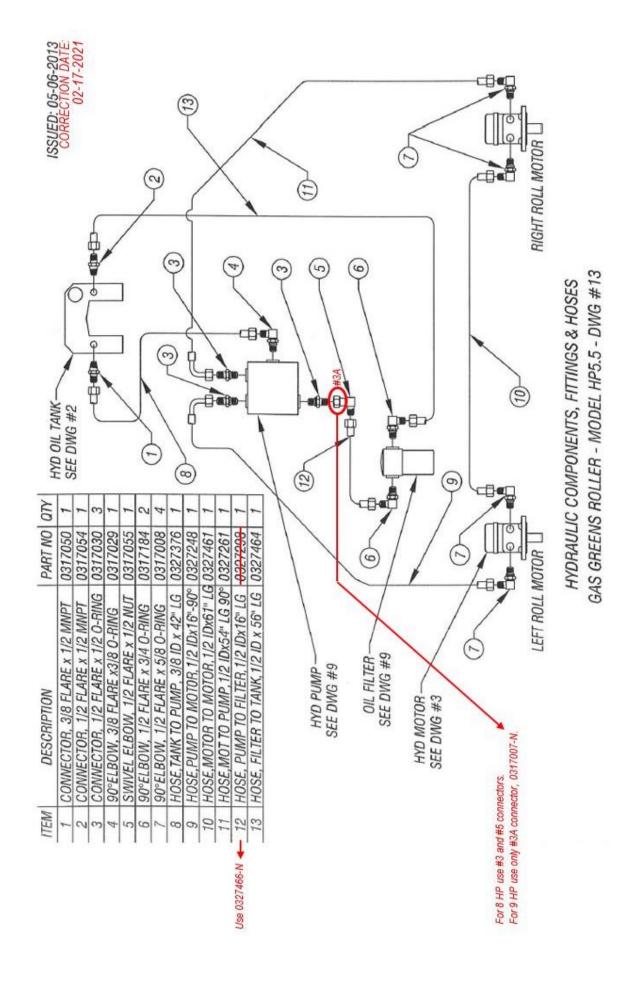


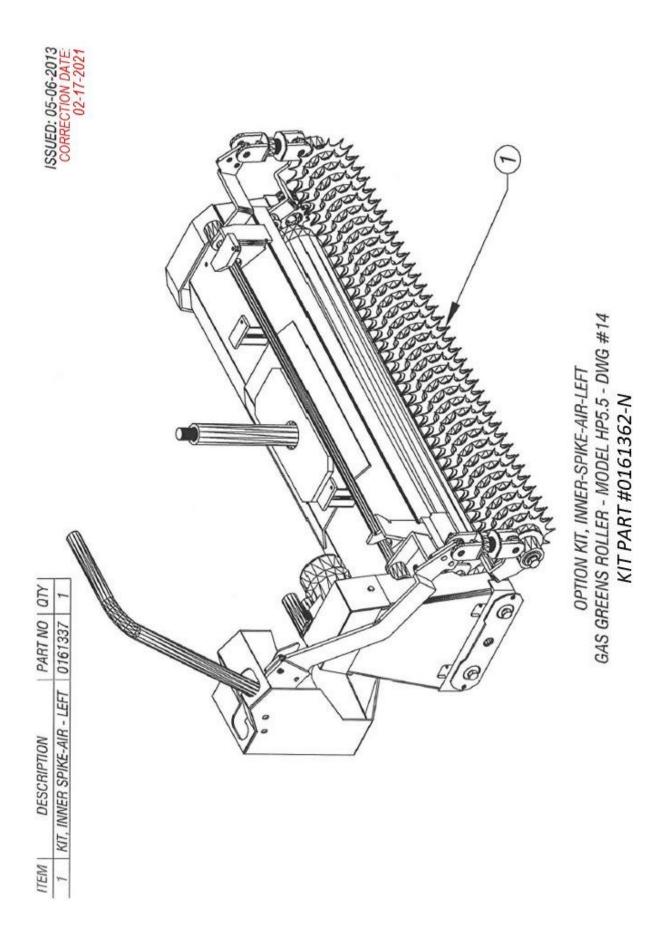


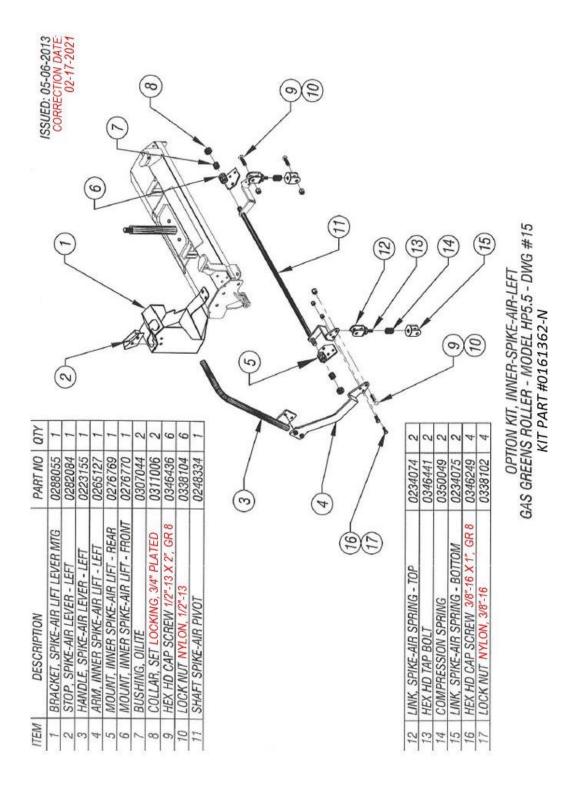

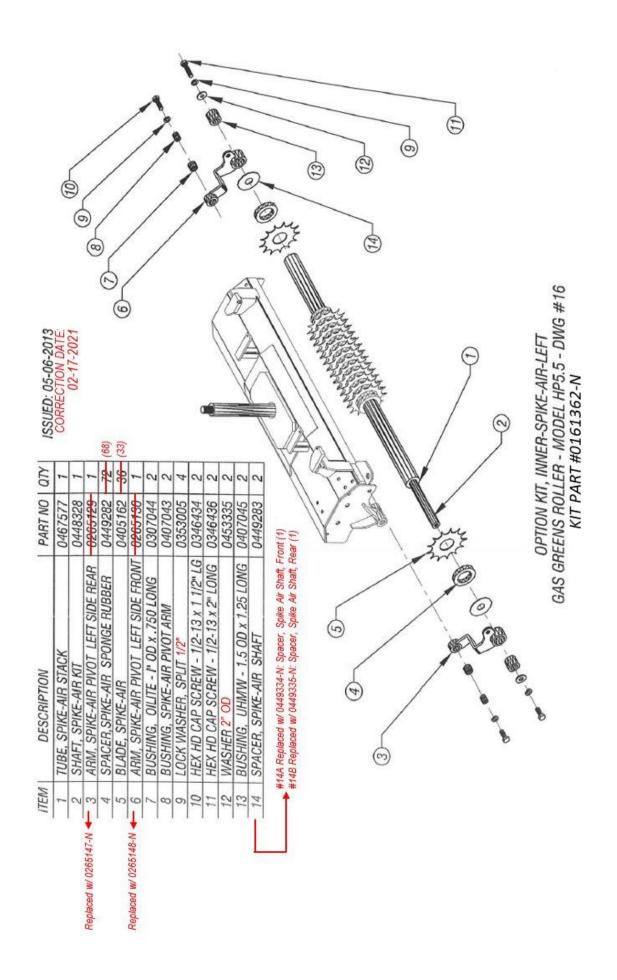

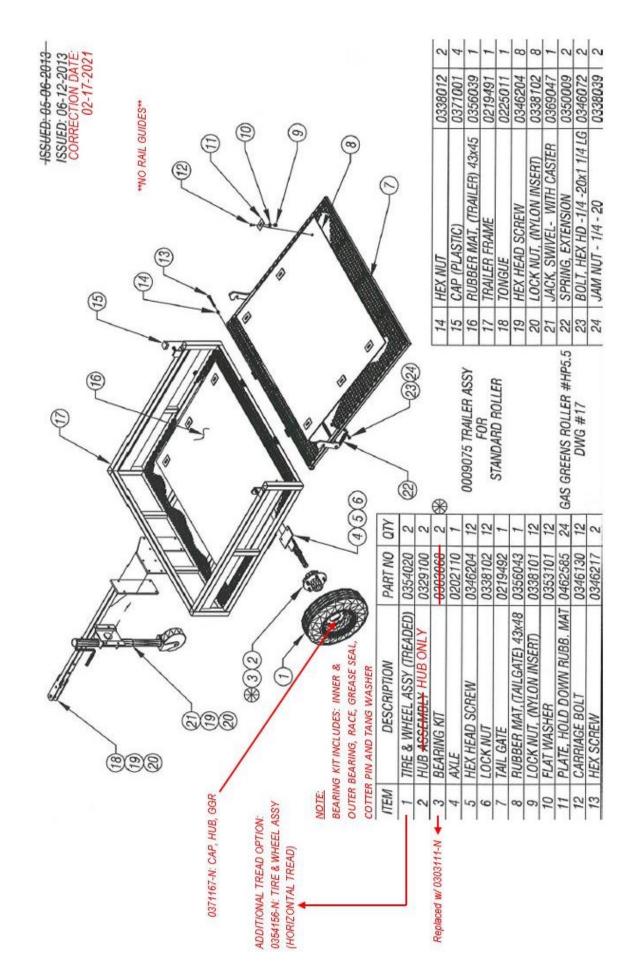

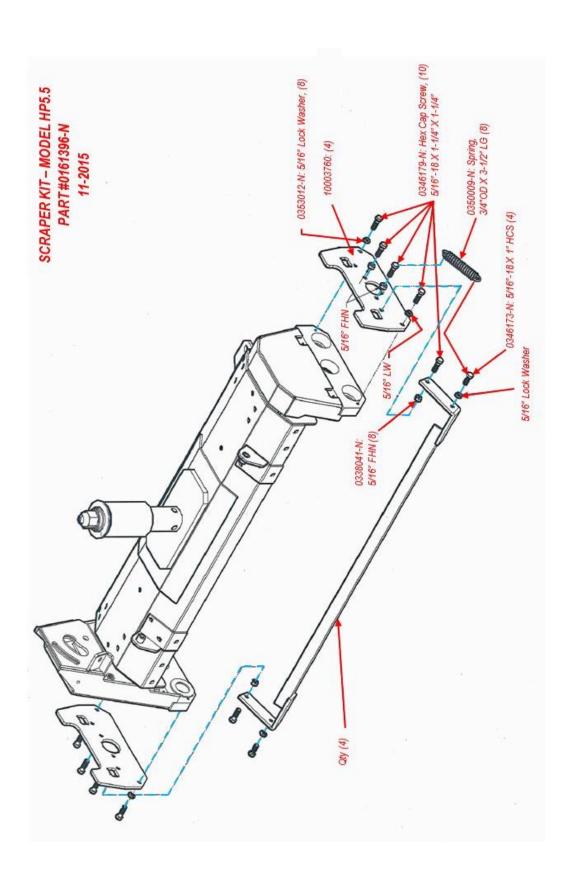

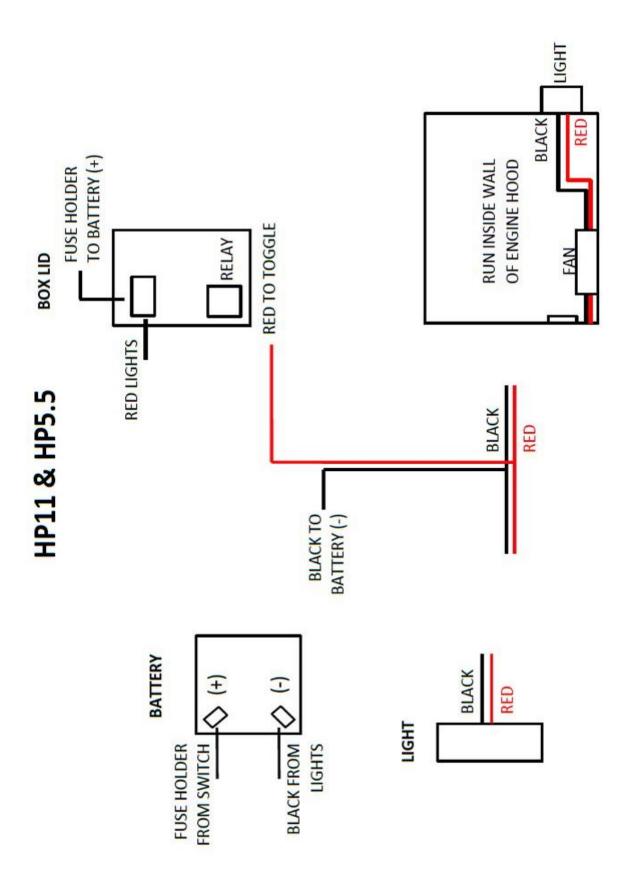


Below is a quick reference chart for various "Flat Head Cap Screws" and the torque recommendations.

VALUES ARE STATED IN FOOT POUNDS

BOLT SIZE	Thds Per Inch	SAE Grade 5	SAE Grade 8
1/4	20	10	14
	28		
5/16	18	19	29
	24		
3/8	16	33	47
	24		
7/16	14	54	78
	20		
1/2	13	78	119
	20		
9/16	12	114	169
	18		
5/8	11	154	230
	11		
3/4	10	257	380
	10		
7/8	9	382	600
	9		
1	8	587	700
	8		

Drive Belt Tension Measurement by Deflection

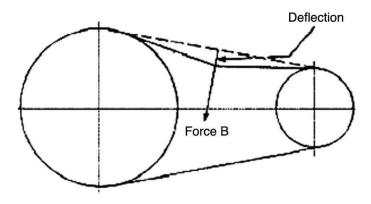

Deflection should be 3/8" when 8-12 lbs. push is applied at "B"

WARRANTY POLICY

Please remember to complete and return your Warranty Card and Dealer Delivery Report. Warranty Claims will not be considered if the Warranty Card and Dealer Delivery Report have not been returned to Salsco.

Your Salsco Commercial or Turf Equipment product is a commercial type product and is normally manufactured and sold for commercial or industrial use. Salsco will, for the original purchaser, for (5) years from the date of purchase (90 days if used for rental purposes) repair or replace, free of charge, any part or parts found to be defective in material, workmanship or both. Any transportation or shipping charges will be borne by the purchaser. If, during the warranty period stated above, the product does not function properly due to defect, simply contact Salsco and follow the Warranty Procedures included in this manual.

This warranty does not include:

- Incidental or consequential damages and is exclusive of any implied warranties.
- Normal maintenance parts, including, but not limited to hoses, chains, belts, filters, lubricants, etc.
- Parts or components, which are covered under the original manufacturer warranty, including, but not limited to engines, pumps, and motors.

WARRANTY PROCEDURE

In order for Salsco to consider your warranty claims in a timely manner you must follow the simple procedures listed below:

MACHINE OR PART FAILURE

- a) Call our service department for helpful instruction on how to correct or repair the problem. Preventive maintenance will also be suggested.
- b) When ordering parts for Warranty issues, you MUST retain possession of the old parts in question until notified with respect to returning the parts to Salsco or other disposition.
- c) Warranty Claims MUST be filed within 30-days from completion of the work performed. Contact our office for an electronic warranty claim form.
- d) Fill in all information requested on warranty claim form, a copy of which is included in this manual, (date of purchase, company name, address, etc.). List all parts used. Make sure part numbers are correct. You can obtain these from your manual. (include good description of problem; i.e. "leaking from spool" rather than "leaking").
- e) It is our goal to consider and reach a disposition on each Warranty Claim within 30-days from the date that it is received. Therefore it is important that you respond promptly to any request for further information. Claims with no response to inquiries will be closed as "denied for lack of response" 90-days from the date of request.
- f) Email, Fax or Send Warranty Claim form to our Warranty Department. **Warranty on parts most often requires** return of the parts that were replaced. DO NOT DISCARD OLD PARTS UNTIL YOU HAVE RECEIVED A DETERMINATION AS TO WHETHER THESE PARTS MUST BE RETURNED.
- g) Our Warranty Department will contact and instruct you on how to return the Parts to Salsco on an RA #. Returns MUST be made within 30-Days from issuance of RA #. FREIGHT CHARGES ON RETURN OF PARTS IS THE RESPONSIBILITY OF THE CUSTOMER. Normal pre-delivery adjustments are not covered under warranty. Labor Warranties are based on reasonable time allowances as determined by Salsco, Inc. and paid at 75% of posted labor rate. TRAVEL TIME IS NOT REIMBURSED UNDER THE WARRANTY POLICY.
- h) Be sure to put the RA form inside the box that you are shipping back, also be sure to put on the outside of the box "Return of Goods" and the RA #.
- i) Ship returns via a traceable method such as UPS Ground Service. Be sure that the shipment is insured for the appropriate value. If uninsured parts are lost, we cannot issue a credit.

PLEASE NOTE: Warranty forms should be filled out completely.

REVENTIVE MAINTENANCE IS YOUR BEST INSURANCE AGAINST EQUIPMENT FAILURE. BE SURE TO READ I'HIS MANUAL, ESPECIALLY THE MAINTENANCE, OPERATING AND CAUTION SECTIONS.

SALSCO, INC., 105 Schoolhouse Rd.

Cheshire, CT 06410

TOLL FREE: 800-872-5726, 203-271-1682, FAX: 203-271-2596 EMAIL: sales@salsco.com, www.salsco.com

SALSCO WARRANTY CLAIM FORM

SALSCO, INC. 105 SCHOOLHOUSE RD. CHESHIRE, CT 06410	PHONE: 203-271-1682, 800-872-5726 FAX: 203-271-2596 EMAIL: f.carrington@salsco.com WEB: www.salsco.com
END OWNER	PHONE:
NAME:	FAX:
EMAIL:	
ADDRESS:	
PURCHASED FROM:	PHONE:
NAME:	FAX:
EMAIL:	
ADDRESS:	
EQUIP/WARRANTY INFO: (MUST BE COMPLETE)	
PURCHASE DATE: INV #:	DATE FAILED:
MODEL #: SERIAL #	REPAIR DATE:
HRS USED:	
WARRANTY CLAIM/WORK ORDER #	
WAS A SALSCO RETURN AUTH. # ISSUED FOR I	REPAIRS OR RETURN OF PARTS: YES NO
IF YES, RA #:	
PROBABLE CAUSE OF FAILURE:	

SALSCO WARRANTY CLAIM FORM - Continued

WORK PERFORMED/COMMENTS ON REPAIR:					
SHOP LABOR RATE:		SUBMITTED BY:			
TOTAL LABOR HRS TO REPAIR:	.	PRINTED NAME:	<u>, </u>		
SALSCO PART #: DESCRIPTION:	QTY	PRICE EACH	TOTAL	INVO	ICE #:
FILL IN ALL INFORMATION REQUESTED ON WARRANTY CLAIM FORM. INCOMPLETE FORMS CANNOT BE PROCESSED & WILL BE RETURNED. LIST ALL PARTS USED. MAKE SURE PART NUMBERS ARE CORRECT. ANY PARTS THAT YOU BELIEVE TO BE DEFECTIVE OR ANY PARTS THAT BREAK SHOULD BE RETAINED FOR POSSIBLE INSPECTION UNTIL AFTER THE WARRANTY HAS BEEN PAID OR PART HAS BEEN RETURNED. INV. # NEEDS TO BE INCLUDED ON WARRANTY CLAIM.					
OFFICE USE ONLY					
DATE REC'D:		DLR. DEL REPORT	ON FILE:	YES	NO
CUST ID:		WARRANTY CLAIM	ON FILE:	YES	NO
SALSCO WC:		PARTS TOTAL:			
SALSCO RA:		LABOR TOTAL:			
DATE APPROVED:	TOTAL APPROVED:				
DATE REJECTED:	REJECTED DATE:				
PROCESSED BY:		REASON:			

SERIAL#		MODEL NO.	
Si	ALSCO LIMITED WARRANT	Y CARD	
1. DATE PURCHASED:			
2. PURCHASER:			
4. EMAIL ADDRESS:			
5. DEALER:			
6. DEALER ADDRESS:	,		
7. WILL THIS EQUIPMENT BE	E USED COMMERCIALLY?	☐ YES	□ NO
8. DID DEALER SERVICE TH	IIS EQUIPMENT AND INSTRUC	T YOU IN ITS CARE AN	D
SAFE OPERATION?		☐ YES	□ NO
9. DID YOU RECEIVE AN "OF	PERATION & SERVICE MANUA	L" AND SAFETY PAMP	HLET?
		☐ YES	□ NO
NOTICE	SIGNED		
		Purchaser	
	ST BE FILLED OUT COMPLETE S OF PURCHASE DATE, OR YO		
VOIDED.	,		
WHITE - DEALER	YELLOW - OWNER	CARD - FACTORY	

	s@salsco.com :salsco.com
EPORT	salsco.com
EPORT	
	ZIP
STATE	ZIP
STATE	ZIP
o.n.e	
1	
CITY STATE	ZIP
ned purchaser certifies that the operated machine have been explained to hi Owners's Instruction Manual and Our on Manual and Caution Notes. I als to explain and make Salsco manuals	m; acknowledges receipt of r Warranty Policy printed in o understand that it is my
Purchase	r
	to explain and make Salsco manuals

SALESMAN ID # _____ SALES MANAGER'S NAME ____

FACTORY COPY WHITE - DEALER'S COPY YELLOW - OWNER'S COPY PINK

SERVICE RECORD

If kept properly, this schedule will help track problems in the future.

Ĩ					Total Hou
Date	Qty.	Part #	Description of Work Done	Hours Used	to Date
					
		<u> </u>			~

MODEL #	S/N		
		DATE PURCHASED:	