## Quality of Workmanship Innovative Design Built to Last!



# HP11 ROLLER - 09071 Operators And Parts Manual



#### MANUFACTURER OF OUTDOOR POWER EQUIPMENT

Products for Turf & Lawncare, Rental, Construction, Tree Care, Wood Processing, Nursery & Farm Industries
3-1/2" - 18" Capacity, Gas, Diesel, & PTO Wood/Brush Chippers - Slab Chippers
Gas, Electric & Tow Behind Rollers - Tranz-Former Roller - CRV Core Recovery Vehicle
Mini-Paver - Mini-Track Paver - Cobra Curbers - Scorpion Router - Concrete Paver
Chipper Shredder Vacuums - Tailgate & Truckloader Vacuums
9 cu. yds. - 50 cu. yds. Per Hour, Electric, PTO & Diesel Powered Shaving Mills



105 Schoolhouse Road Cheshire, CT 06410 U.S.A. 800-872-5726 (Toll Free), 203-271-1682, 203-271-2596 (Fax) www.salsco.com, sales@salsco.com

## **TABLE OF CONTENTS**

## **MODEL HP11, GAS GREENS ROLLER**

COVER & TABLE OF CONTENS	.Pages 1–2
STATEMENT OF FACT	Page 3
SPECIFICATIONS & FEATURES	Page 4
MACHINE REGISTRATION	Page 5
SAFETY & OPERATING INSTRUCTIONS	Page 6
SERVICE & MAINTENANCE INSTRUCTIONS	Page 7
PARTS DIAGRAMSCROSS CONTAMINATION PREVENTION KIT OPTION	Pages 23-24
TORQUE CHART	Page 27
WARRANTY POLICY/PROCEDURE	Page 28
WARRANTY CLAIM FORM	Pages 29-30
DEALER DELIVERY REPORT & WARRANTY CARD	Page 31
SERVICE INTERVAL SCHEDULE	Page 32
SERVICE SCHEDUE LOG	Page 33

SALSCO, INC. 105 Schoolhouse Road Cheshire, CT 06410 800-873-5726, 203-271-1682 203-271-2596 (Fax) www.salsco.com, sales@salsco.com

#### **STATEMENT OF FACT**

You have just purchased the highest quality, most maneuverable, dependable, **GREENS ROLLER** on the market today. This unit has the ability to meet exact standards and perform for years with minimum downtime. HOWEVER, it cannot read nor will it understand this manual no matter how long you leave it on top of the machine.

It is your responsibility to read and understand this manual; it is also your responsibility to be certain this information is passed along to anyone who is expected to operate this equipment. Should you choose not to read, understand and pass along the information provided you, please expect equipment failure and possible injuries to persons around this equipment.

For the safety of the operator, it is **imperative** that this manual is carefully read and understood.

Once you have read this manual, it is your responsibility to be sure that all new operators read and understand this manual, especially all cautions stated.

As a manufacturer of equipment, we have a responsibility to design a safe piece of equipment. NOTE: The important safeguards and instructions in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating this equipment.

#### **ONLY YOU CAN PREVENT ACCIDENTS!!**

### <u>SPECIFICATIONS AND FEATURES</u> GAS GREENS ROLLER – MODEL HP11

The Salsco Greens Roller is actually a multi-purpose tool, which, in a short time, has become a must-have for many golf courses. Our unit can be used on GREENS, WET OR DRY, and will increase speed an average of 1-2 feet. However, that's only part of the story. We can ROLL SOD, CLAY TENNIS COURTS, CART PATHS, SUB BASE FOR NEW GREENS CONSTRUCTION, WET GREENS, WET SPOTS ON FAIRWAYS, etc., etc. Because of traction and maneuverability this machine is ready and able when you are.

#### **Drive System**

A 13HP Honda Engine, electric start, powers this unit. Power is delivered to a Hydrostatic Pump through a love-joy coupling. Fluid power is then transmitted through 2,500 P.S.I. (10,000-lb. burst) hoses to drive motors. Drive motors change fluid power to mechanical power and transmit it through #50 chain to the rolls. We drive both 10-3/4" diameter rolls. This gives us the best traction in the roller business. Compaction is not an issue at 5.4 P.S.I. (a 200 lb. person = 12.5 P.S.I.)

#### **Compaction is Never a Problem**

5.4 P.S.I. puts compaction at the lowest possible level. We want to smooth out the surface, not change it or compact it. Both rollers can be filled with water which will add approximately 128 lbs. and 1.4 P.S.I. to the already 5.4 P.S.I. = 6.8 P.S.I. for rolling out frost heaves, tees or after verti-draining.

The Salsco Roller is very user friendly, with automotive type steering and smooth pedal controls. Operators spend very little time getting comfortable with this machine, usually before the first green is done.

The Salsco Greens Roller comes standard with its own trailer. When not in use with the Greens Roller, it can be used for many other tasks. An example would be for transporting greens mowers from green to green.

03/2011

#### **MACHINE REGISTRATION**

MANUFACTURED BY: SALSCO, INC.

105 Schoolhouse Rd., Cheshire, CT 06410

800-872-5726, 203-271-1682, 203-271-2596 (Fax)

sales@salsco.com www.salsco.com

THIS MANUAL COVERS MODEL (s): MODEL HP11 - GAS GREENS ROLLER

This company reserves the right to discontinue, add improvements to, or change the design of any model or product at any time without obligation to improve existing machines, either by changing the design or adding new parts.

It has been and will continue to be the policy of SALSCO to update existing machines at its own discretion. Whenever possible, new designs will be made in such a way that they can be "Retro Fit" if so desired.

Record in the space provided below the model and serial number of this unit. Please retain these numbers for future reference.

No parts orders will be accepted **WITHOUT MODEL NUMBERS OR PART NUMBERS**. All part numbers are listed in this manual.

Serial Number	Model Number	

NOTE: Be sure to complete your warranty card. This will insure immediate processing of any warranty claims.

#### **READ AND UNDERSTAND THIS MANUAL BEFORE STARTING MACHINE**

03/2011

#### **SAFETY INSTRUCTIONS**

- 1. **NEVER** leave unit running while unattended.
- 2. **NEVER** park on a green for any reason.
- 3. **NEVER** go down steep hills sideways. **ALWAYS** approach hills straight on.
- 4. **NEVER** change your mind mid-way down a steep incline. Once you've started down a steep incline, change direction only with the greatest of care and gentlest touch.
- 5. Allow engine to cool for several minutes before filling with fuel, since fuel tank is over the engine.

NOTE: HONDA ENGINES - ALWAYS TURN OFF THE FUEL SHUTOFF, WHEN THE ENGINE IS NOT RUNNING, i.e. WHEN IN TRANSPORT, STORAGE, ETC.


#### **OPERATING INSTRUCTIONS**


- 1. Check that the unit has been serviced and all fluids are checked and topped off.
- 2. Check all hydraulic hose fittings.
- 3. Push fuel shut off switch to on position.
- 4. Push choke to full on position
- 5. Push throttle to just above idle.
- 6. Turn on/off switch to on position.
- 7. You should start engine from seat position. Just reach down to engine controls. Keep feet off pedals. Hydrostatic drive should come to neutral when engine starts.
- 8. Pull rope and engine will come to life. Hydrostatic transmission should come to neutral when engine is started. REMEMBER: RIGHT PEDAL TO GO RIGHT, LEFT PEDAL TO GO LEFT.
- 9. Slide choke to full off position.
- 10. Once unit is running at just above idle, push pedal down slowly. Unit will begin to move. Drive it out of trailer on to grass area.
- 11. Since the unit is hydrostatic, engine should run at full R.P.M. and speed should be controlled by pressure on the pedal.

#### **SERVICE & MAINTENANCE INSTRUCTIONS**

- Check all hydraulic hoses DAILY, or before each scheduled use, for wear and any signs of chaffing. REMINDER: Drive motor hoses should be treated as wear items and should be replaced on a yearly basis.
- 2. Check all fittings for any signs of leaking **DAILY**, or before each scheduled use.
- 3. Check all grease fittings as listed below on a **WEEKLY** basis, and grease as necessary. (Add grease till grease leaks slightly from fitting.)
  - Bearings on roll housings Quantity 4
  - Pivot bearing on main housing Quantity 2
  - U-Joint on steering shaft Quantity 1
- 4. Check engine to manufacturers specifications and maintenance. THIS ENGINE HAS AN OIL SHUT OFF SWITCH. CHECK OIL LEVEL FREQUENTLY AS THE UNIT WILL STALL ON INCLINES IF OIL LEVEL IS LOW.
- 5. Fill hydraulic tank to 4-6" below filler cap. Be sure to tighten cap till cap seals.
- 6. After approximately 1 WEEK of use, and then every 2 WEEKS thereafter, check drive chains one on each side on roller drive motor. Pivot motor to tighten chain. NOTE: Check and adjust the tension of both drive motor chains on a regular basis. If chains are not tight, this could cause severe sprocket wear and possible breakage.
- 7. After approximately **1 WEEK** of use, **and then every 2 WEEKS thereafter**, check chains on steering. Adjust as needed.
- 8. Pivot for articulating steering should be tight, **with no play,** much the same as wheel bearings on cars.
- 9. **Keep unit clean**. Should rust form on rolls, simply drive the unit on a rough area till rolls are clean.
- 10. Oil & Filter Type It has been determined that your Salsco machine will perform better by using a 25 micron filter. Salsco recommends using Mobil DTE 26 or Citgo HYD 68, non-detergent hydraulic oil, or their equivalents. The oil should have a viscosity rating of at least 100 SSU. While this is not a necessity, it will improve the overall performance of your machine. Salsco is now using this filter and hydraulic oil on all our machines using hydraulics.

SAFETY IS A PRIME CONCERN AT SALSCO AND THE SAFETY DECALS ON YOUR MACHINE ARE A HIGHLY VISIBLE AND CONSTANT REMINDER TO ALL OPERATORS. REPLACEMENT SAFETY DECALS MAY BE OBTAINED BY CALLING SALSCO @ 1-800-872-5726, OR THE DEALER IN YOUR AREA.

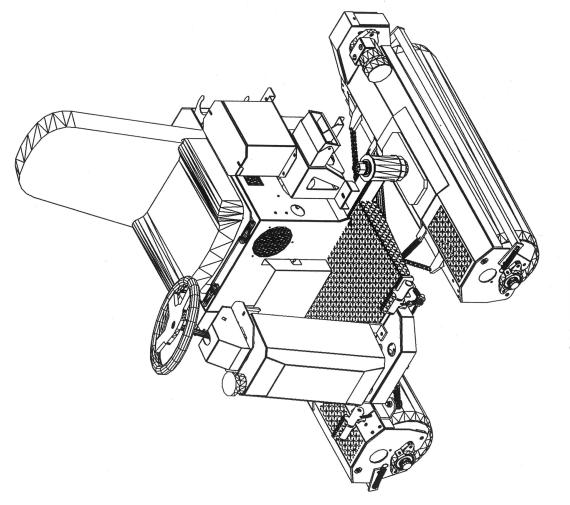

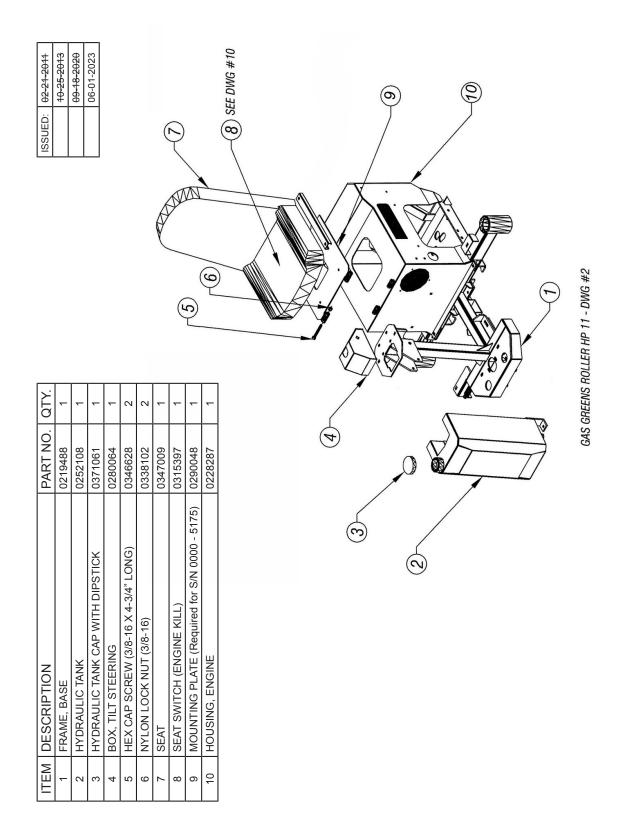

_				ı —	_		_	1	1		_		1		6)	6)						
QTY.	2	2	_	4	2	4	4	2	2	2	4	4			) S/N 7562	) S/N 7562				田	02-21-2011 02-07-2012 05-03-2012 01-11-2013	<del>09-18-2020</del> 06-01-2023
PART NO.	0309008	0251194	0421620	0449050	0330139	0303089	0453117	0338060	0338405	0353106	0343003	0303090			ORE 3/30/2014 OR 3/20/2014 UP TC 562 AND UP	ORE 3/30/2014 OR 3/30/2014 UP TC 2 AND UP	TY.2		5070, QTY. 2 2 ITY. 2	RS WITHOUT TH 33	ISSUED; 92	90
DESCRIPTION	MASTER LINK #50	SPROCKET, ROLL DRIVE MOTOR	GUARD, ROLL DRIVE CHAIN - LT	SPACER, HYDRAULIC MOTOR	MOTOR, HYDRAULIC (ROLL DRIVE)	CONE BEARING	WASHER, FLAT 1-9/16" X 3-1/2" X 1/8"	JAM NUT 7/8"-14	CAP, LUG NUT	WASHER, FLAT 3/4" USS GR 8	0-RING, 3" ID X 3-3/8" X 3/16"	BEARING CUP		NOTES:	<ul> <li>ITEM #2 - HOUSING, LEFT ROLL</li> <li>USE PART# 0228289 ON UNITS BUILT BEFORE 3/30/2014</li> <li>USE PART# 0228330 ON UNITS BUILT AFTER 3/20/2014 UP TO S/N 7562</li> <li>USE PART# 0228375 ON UNITS WITH S/N 7562 AND UP</li> </ul>	038, ITEM #3 - HOUSING, RIGHT ROLL Y.2 • USE PART# 0228268 ON UNITS BUILT BEFORE 3/30/2014 • USE PART# 0228329 ON UNITS BUILT AFTER 3/30/2014 UP TO S/N 7562 • USE PART# 0228378 O UNITS WITH S/N 7562 AND UP	ITEM #17 - HARDWARE TO MOUNT MOTOR  • BOLT, PART# 0346436, 1/2"-13 X 2", QTY. 2  • SAF 1/2" FI AT WASHER PART# 0353115 OTY 2	NYLON NUT 1/2"-13, PART# 0338104, QTY. 2	<ul> <li>ITEM #15 - HARDWARE TO MOUNT GUARD</li> <li>HEX CAP SCREW, 1/4-20 X 3/4", PART# 0346070, QTY. 2</li> <li>LOCK WASHER, 1/4", PART# 0353011, QTY. 2</li> <li>SAE 1/4" FLAT WASHER, PART # 0353121, QTY. 2</li> </ul>	ITEMS #7 AND #15 ARE ONLY USED ON ROLLERS WITHOUT THE OPTIONAL INNER SPIKE-AIR KIT, PART# 0161333		
ITEM	13	14	15	16	17	18	19	20	21	22	23	24			NOT SHOWN BOLT - PART # 0346445, 1/2-13 X 3-1/4", QTY. 1	SPACERS - PART # 0449038 3/4" D X 1/2" id x 1/4", QTY. 2	_				(5)	١
QTY.	1	1	_	_	2	2	_	2		2	2	4	4	7	NOT SHOWN BOLT - PART # 034644 1/2-13 X 3-1/4", QTY. 1	SPACERS - 3/4" D X 1/2'	$\bigcirc$	· ·				,
PART NO.	0219488	SEE NOTES	SEE NOTES	0228164	0317072	0248320	0421645	0351212		0251203	0351213	0449310	0303083	0309027	0	(2)						
DESCRIPTION	FRAME	HOUSING, LEFT ROLL W/PIN	HOUSING, RIGHT ROLL W/PIN	HOUSING, OSCILLATOR	PLUG, 3/4 NPT	SHAFT/ROLL (1-1/4" SHAFT)	GUARD, ROLL DRIVE CHAIN - RT	SPROCKET, ROLL 32 TOOTH - S/N 3377 &	UP (1-1/4" SHAFT)	SPROCKET, ROLL S/N 0000-3376 (1" SHAFT)	BUSHING, TAPER LOCK	SPACER, 2-BOLT BEARING FLANGE	BEARING, 2-BOLT FLANGE	CHAIN, ROLL DRIVE #50, 55 PITCH		(B) DRAULIC	7.2					GAS GREENS ROLLER HP11 - DWG #3
ITEM	_	2	3	4	2	9	7	8			6	10	11	12		BO MO	PA		(15)	(3) (2) (3)	)	Ó

NOI	PART NO.	QTY.	
ILL, 1-1/4"	0248320	2	Z

	LEM   DESCRIPTION	PART NO.   QTY.	QTY.	
_	SHAFT/ROLL, 1-1/4"	0248320	2	_
2	HOUSING, ROLL-LEFT	SEE NOTES	-	
က	ROD END (5/8-18)	0303087	2	•
4	TIE ROD (5/8-18)	0245190	2	•
5	JAM NUT, (5/8-18)	0338061	2	• –
6	NYLON LOCK NUT (5/8-18)	0338110	2	•
7	ROLLER CHAIN #50 61 PITCH	0309087	_	•

TEM #11 - HOUSING, RIGHT ROLL TEM #2 - HOUSING, LEFT ROLI **JOTES**: CROSSOVER CHAIN


USE PART# 0228330 ON UNITS BUILT AFTER 3/20/2014 UP TO S/N 7562

USE PART# 0228375 ON UNITS WITH S/N 7562 AND UP

USE PART# 0228289 ON UNITS BUILT BEFORE 3/30/2014

TEM # 24 - STEERING CHAIN 1 of 2. SEE DWG.#5, ITEM #9 FOR STEERING CHAIN 2 of 2.

USE PART# 0228268 ON UNITS BUILT BEFORE 3/30/2014 USE PART# 0228329 ON UNITS BUILT AFTER 3/30/2014 UP TO S/N 7562 USE PART# 0228378 O UNITS WITH S/N 7562 AND UP

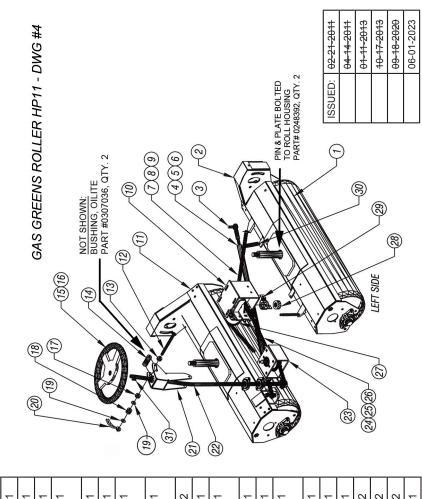

0323142

EASY GRIP HANDLE - (1/2 -13) ARM, TILT WHEEL STEERING

WASHER, FLAT - UHMW

9 20

1-1/4" LONG

0165121

0353333

STOCK

DOM TUBE-1" OD X 1/4" WALL X

8

0248404 0280065

SHAFT, MAIN FRAME STEERING

PIVOT

7

BOX, STEERING REDUCTION

23

24

22

SEE NOTES

9006080 0309019

0309088

ROLLER CHAIN, #40, 77 PITCH "STEERING CHAIN, 1 of 2"

MASTER LINK #40 HALF LINK, #40

25 26 0303023

0251060

0303024

FLANGETTE PILLOW BLOCK

BEARING INSERT - 3/4" ID

28 29

SPROCKET & SHAFT

27

0350009

0431003

KEY -3/16 X 3/16 X 7/8 LONG

**EXTENSION SPRING** 

30

SEE NOTES

0346469 0467576 0354142 0354143

STOCK

TUBE, HANDLE LEVER LOCKING

CARRIAGE BOLT, 1/2"-13 X 6"

7 13 4

HOUSING, ROLL-RIGHT

DOM TUBE-1" OD X 1/4" WALL X

STOCK

DOM TUBE-1" OD X 1/4" WALL X

1

1/2" LONG

CAP, STEERING WHEEL

STEERING WHEEL

15 16

2-1/2" LONG

0309022 0288042

BRACKET, STEERING SPROCKET

10

7


0309008

MASTER LINK #50

HALF LINK #50


0

31

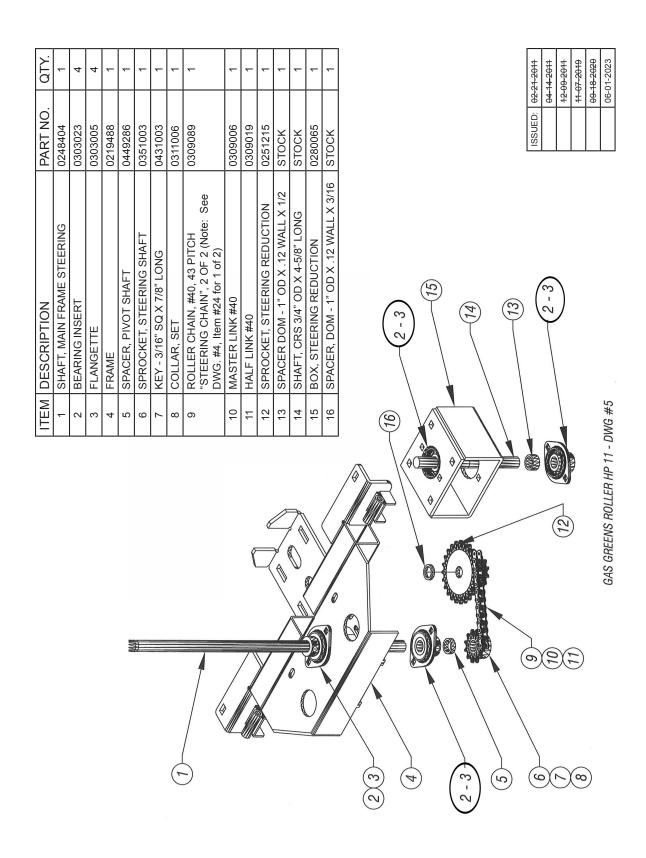


ISSUED: 92-24-2041	41-07-2013	08-10-2023															GAS GREENS ROLLER HP 11 - DWG #6
QTY.	-	-	2	4	2	_	2	2	4	ო	-	2	-	-	_		GAS GRE
PART NO.	0268028	0268029	0311031	0303020	0240143	0445172	0338059	0346254	0303019	0338052	0338102	0353111	0267412	0346264	0219439	(14)	
ITEM   DESCRIPTION		2 PEDAL, FOOT-LEFT	3 COLLAR, SET	4 BUSHING, FLANGED, OILITE	5 PIN, FOOT PEDAL PIVOT	6 ROD, FORWARD/REVERSE	7 JAM NUT, 3/8-24	8 SCREW, HEX HEAD	9 ROD END	10 JAM NUT, 3/8-16	11 LOCK NUT, NYLON INSERT	12 FLAT WASHER	13 TUBE, STEERING	14 SCREW, HEX HEAD	15 FRAME, BASE		

02-21-2011	02-26-2013	41-07-2013	09-18-2020	06-01-2023
ISSUED:				

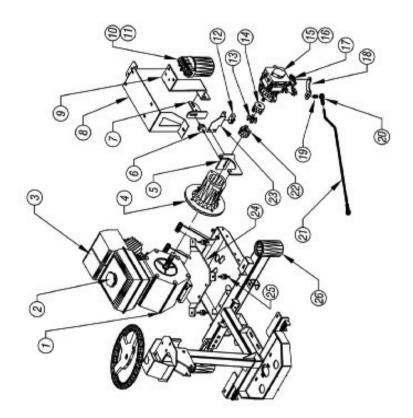

ITEM	DESCRIPTION	PART NO.	QTY.
-	ENGINE, 13HP HONDA	0337033	_
2	GAS CAP, HONDA	0371495	_
3	FUEL SCREEN FILTER	0318048	-
4	BELL HOUSING	0328059	1
5	SUPPORT, HYDRAULIC PUMP	0477231	1
9	RUBBER MOUNT, VIBRATION DAMPING	0376250	1
7	BRACKET, VIBRATION DAMPING	0406877	1
8	MOUNT, BATTERY BOX	0276771	1
6	BRACKET, OIL FILTER	0288045	1
10	HYDRAULIC FILTER & HOUSING	0318022	1
11	HYDRAULIC FILTER, ELEMENT ONLY	0318023	1
12	SWITCH, SNAP ACTION (NEUTRAL)	0315375	1
13	SPIDER COUPLING	0313004	1
14	HUB, 17mm BORE	0313081	1
15	HYDRAULIC PUMP	0330218	1
16	SEAL KIT, HYDRAULIC PUMP	0330222	1
17	LINKAGE, RETURN TO NEUTRAL	0330223	1
18	LEVER, HYDRAULIC PUMP EXTENDED (S/N 1589 AND UP)	0433209	_
18	LEVER, HYDRAULIC PUMP EXTENDED (S/N 0000 - 1588)	0233018	1
19	SPACER, STEEL, 3/8 ID X 5/8 OD X 11/16	STOCK	1
20	ROD END	0303019	2
21	ROD, FORWARD/REVERSE	0445172	1
22	HUB, 1" BORE - LOVEJOY COUPLER	313003	1
23	BRACKET, SWITCH MOUNTING (NEUTRAL)	0480446	1
24	PLATE, ENGINE MOUNT	0462462	_
25	RUBBER MOUNT	0376319	4
26	FRAME, BASE	0219488	7

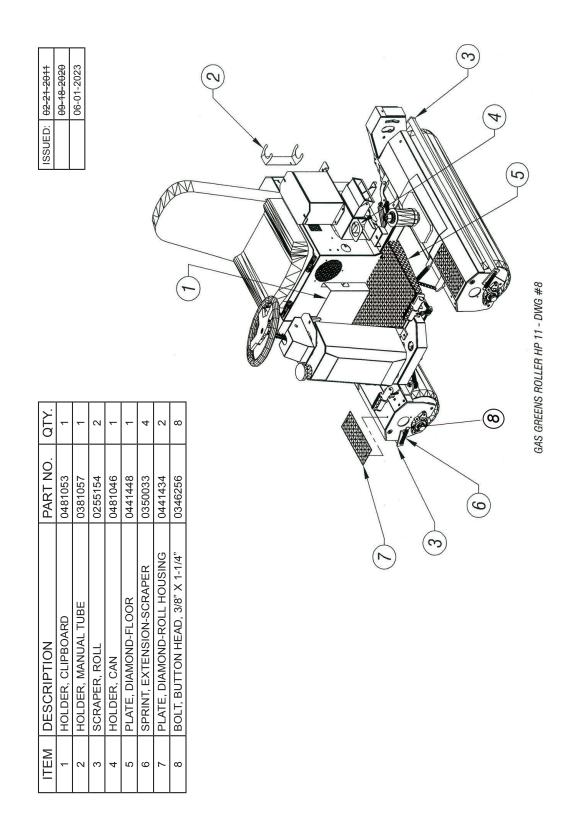

DWG
-
-
H
H
7
$\approx$
ROLLER
GREENS
2
111
3
CD
GAS

ITERMS #1 THROUGH #6 AND ITEMS #13 THORUGH #18 ARE PARTS OF OPTIONAL LIGHT KIT #0161335

₩

NOTE, ITEM 21:

When ordering Cooling Fan, part # 0315370, must upgrade the Rocker Switch part # 0315390, to the Relay part # 0315409.

7 12 13 4

BATTERY 12V (Not Available After Market)

"A" 6 10

œ

COVER, BATTERY BOX

BATTERY BOX

BATTERY CABLE - 6GA. BLACK (Bulk)

BATTERY CABLE - 6GA. RED (Bulk)

CONNECTOR, BATTERY WIRE

PLATE, ON/OFF BOOT, TOGGLE

SWITCH TOGGLE - HEADLIGHTS

TERMINAL RING

17 18 19 20 7

HOLDER, FUSE FUSE, (IN LINE)

15 16 DC ELECTIR FAN (See Note)

HOUR METER

RELAY

BRACKET, HEADLIGHT BOX PIVOT, (LED)

ITEM DESCRIPTION

PIGTAIL, HEADLIGHT FOR 90° BULB

**BUB HEADLIGHT (STRAIGHT)** 

**HEADLIGHT/LENS** 


**HEADLIGHT BOX** 

7 3 4 LOOM, SPLIT - 3/8" DIAMETER

9

90° BULB

PART NO.   QTY.	0315397 1	0488046 1	0315375 1	0315354 1	ISSUED: 02-21-2011	<del>09-18-2020</del> 06-01-2023
ITEM DESCRIPTION	1 SEAT SWITCH (ENGINE KILL)	2 BRACKET, SWITCH MOUNTING (NEUTRAL)	3 SWITCH, SNAP ACTION (NEUTRAL)	4 DISCONNECT, TERMINAL	SEAT (REF. ONLY)  A)WIRE 9335001  A)WIRE 9335002  TO ENGINE MAGNETO	COMPLETE - NEUTRAL SAFETY SWITCH ASSEMBLY GAS GREENS ROLLER HP 11 - DWG #10

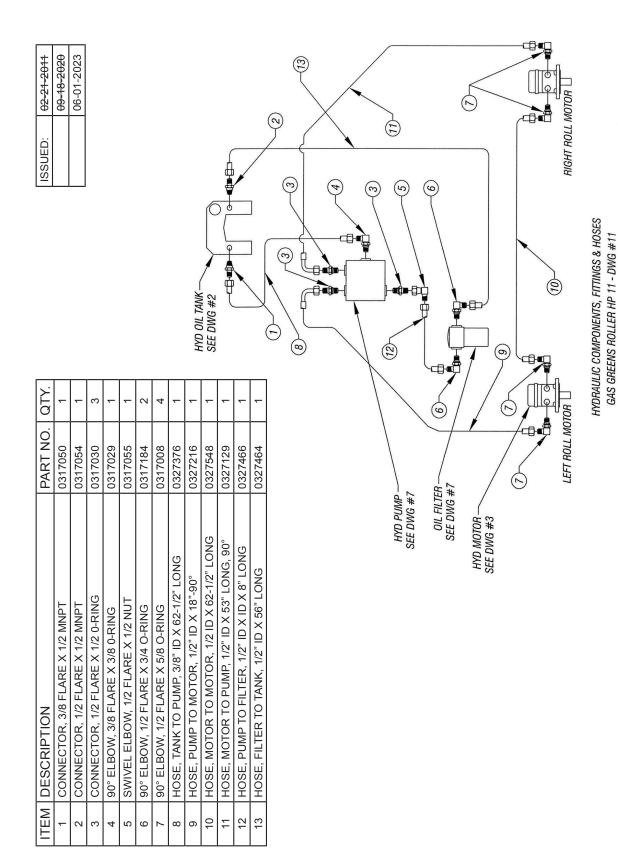


Gas Greens Roller, Model HP11 Operators and Parts Manual 06-01-2023

02-21-2011	09-18-2020	06-01-2023
ISSUED:		


QTY.


PART NO.


ITEM DESCRIPTION

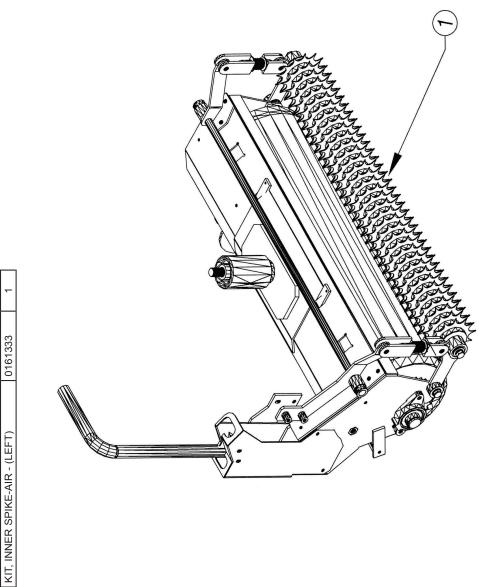


OPTION KIT - INNER SPIKE-AIR (LEFT) GAS GREENS ROLLER - DWG #12

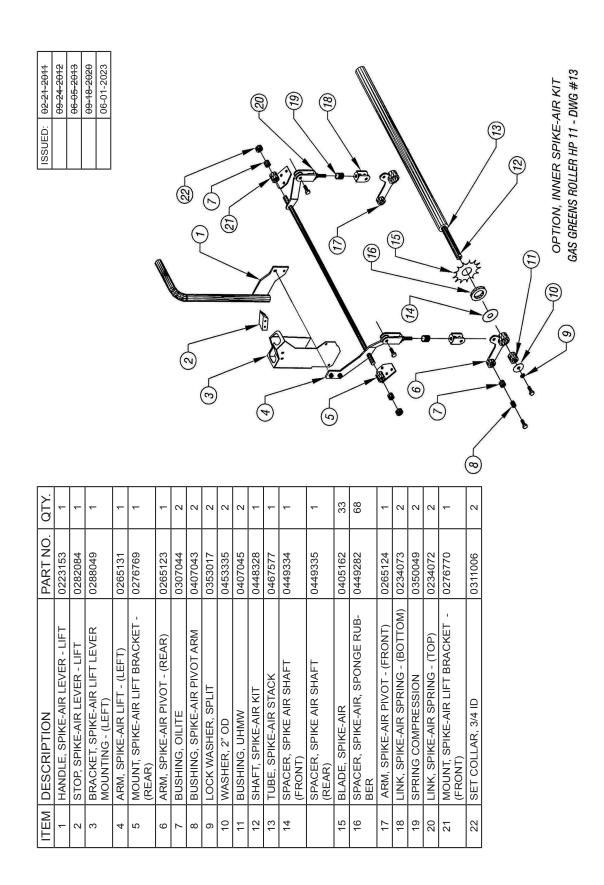


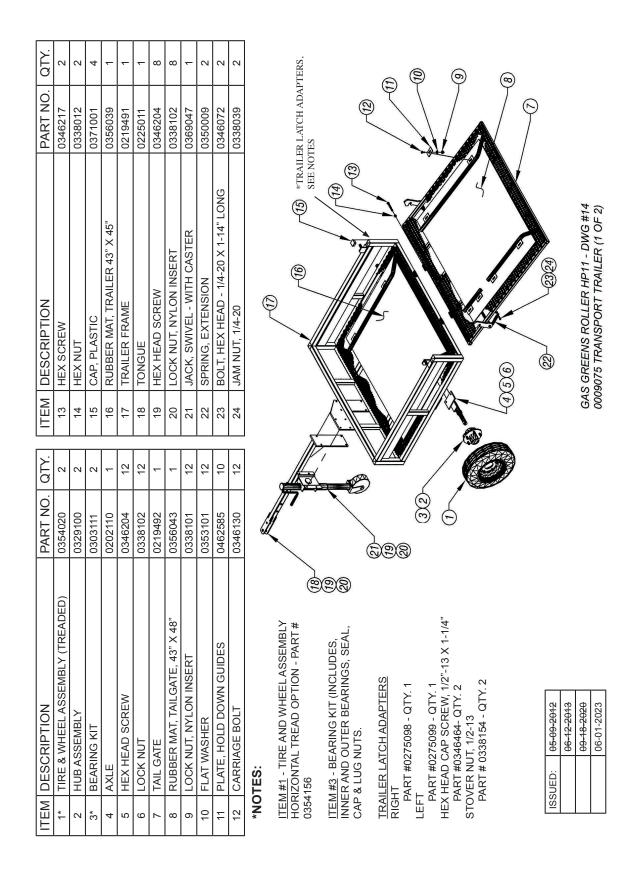

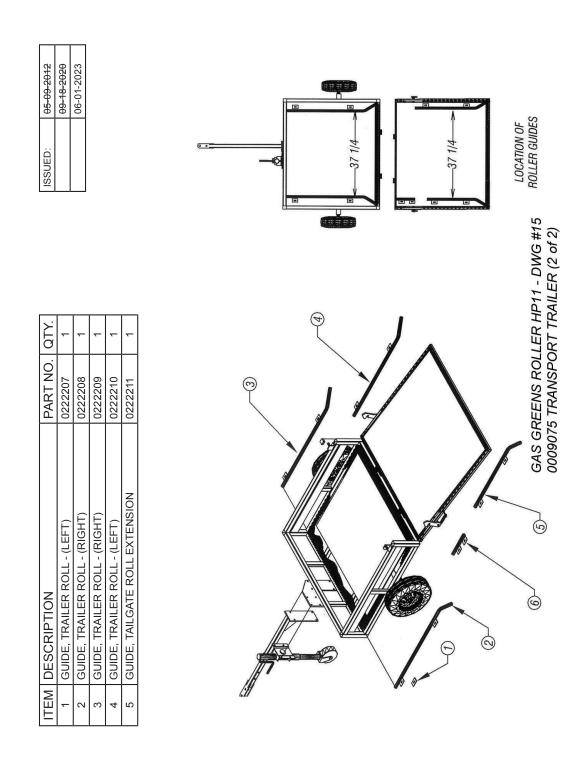


ITEM	ITEM DESCRIPTION	PART NO.	QTY.	ITEM	ITEM DESCRIPTION PESCRIPTION	PART NO.	QTY.
-	COLLAR, BRUSH CLAMPING	0211064	7	6	V-BELT CONTINUOUS, SINGLE 28" LONG (SEE NOTES)	0304200	-
2	PULLEY, BRUSH DRIVE	0242276	-	10	BRACKET, ROLL BRUSH SHAFT MOUNT, LEFT REAR 0	0288177	-
က	SHAFT, ROLL BRUSH	0248424	~	11	BRACKET, ROLL BRUSH SHAFT MOUNT, LEFT FRONT 0	0488232	-
4	MOUNT, ROLL BRUSH SHAFT, LEFT IDLER SIDE	0490372	~	12	SCREW, HEX HEAD CAP, 3/8"-16 X 1" LONG	0346249	∞
2	MOUNT, ROLL BRUSH SHAFT, DRIVE SIDE	0276938	-	13	NUT, LOCK, 3/8-16 NYLOCK	0338102	8
9	BEARING INSERT, 5/8" BORE W/LOCKING COLLAR	0303053	2	14	WASHER, FLAT, 3/8" SAE	0253113	8
7	BEARING FLANGETTE, FOR 5/8" BEARING	0303054	4	15	CARRIAGE BOLT, 1/4"-10 X 3/4	0346028	4
80	BRUSH, OPEN COIL	0336142	-	16	NYLON LOCK NUT, 1/4"-10 X 3/4	0338100	4
NOTES:	NOTES: ITEM #9 - BELT, CONTINUOUS 0304200 IS FACTORY INSTALLED DURING PRODUCTION. REPLACEMENT ORDERS: * 0304200 V-BELT CONTINUOUS REQUIRES ROLL TO BE DROPPED FOR INSTALLATION. * 0404195, ADJUSTABLE V-TWIST BELT, DOES NOT REQUIRE ROLL TO BE DROPPED, BUT MAY REQUIRE LINK ADJUSTMENTS TO MAINTAIN PROPER TENSION.	DURING PRC SE DROPPED QUIRE ROLL ENTS TO	DDUCTIO	Z 2			( <b>z</b> ) /
ROTARY E PREVENT INSTALL (OPTION: 0	ROTARY BRUSH CROSS CONTAMINATION PREVENTION KIT - MODEL HP11 ROLLER INSTALL ON UNITS WITH S/N 7561 & BELOW OPTION: 0161370 - REV. D   DWG. 2 of 2 LEFT ROLL						
ISSUE	ISSUED: 05-21-2015	/	(*	15			

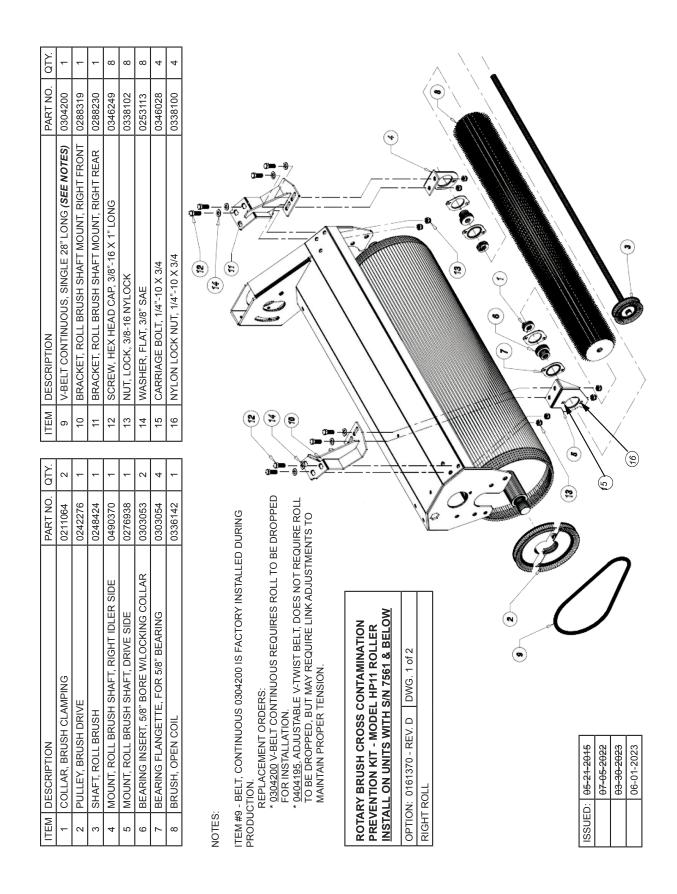

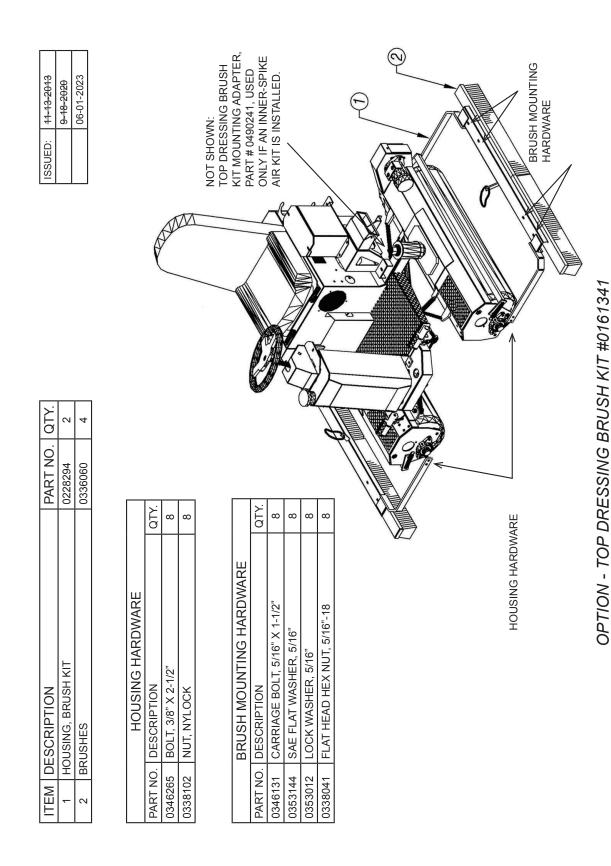

Gas Greens Roller, Model HP11 Operators and Parts Manual 06-01-2023


GAS GREENS ROLLER HP11 - DWG #18

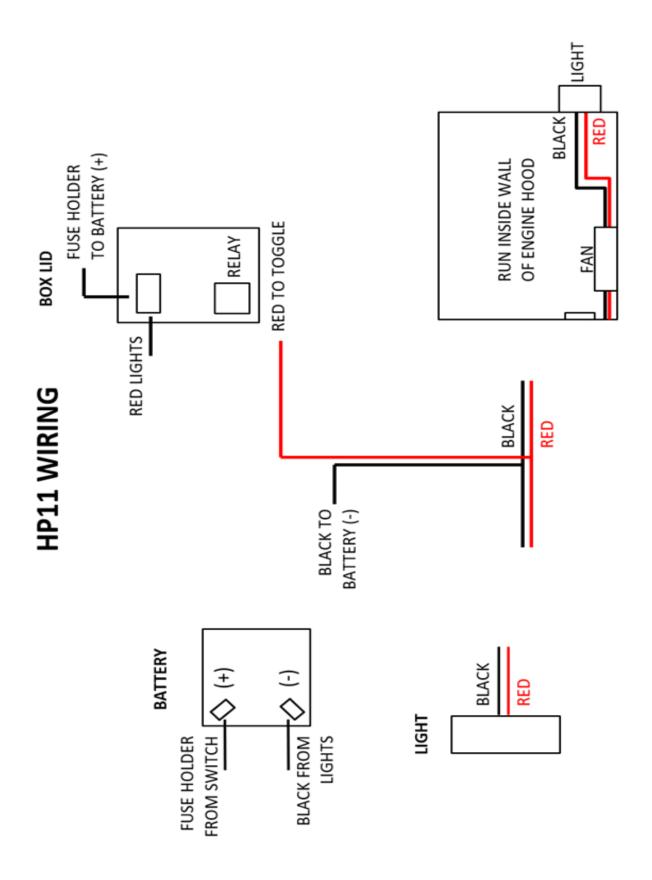

Below is a quick reference chart for various "Flat Head Cap Screws" and the torque recommendations.

#### **VALUES ARE STATED IN FOOT POUNDS**

BOLT SIZE	Thds Per Inch	SAE Grade 5	SAE Grade 8
1/4	20	10	14
	28		
5/16	18	19	29
	24		
3/8	16	33	47
	24		
7/16	14	54	78
	20		
1/2	13	78	119
	20		
9/16	12	114	169
	18		
5/8	11	154	230
	11		
3/4	10	257	380
	10		
7/8	9	382	600
	9		
1	8	587	700
	8		

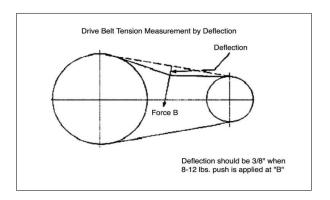

#### **WARRANTY POLICY**

Please remember to complete and return your Warranty Card and Dealer Delivery Report. Warranty Claims will not be considered if the Warranty Card and Dealer Delivery Report have not been returned to Salsco.

Your Salsco Commercial or Turf Equipment product is a commercial type product and is normally manufactured and sold for commercial or industrial use. Salsco will, for the original purchaser, for (5) years from the date of purchase (90 days if used for rental purposes) repair or replace, free of charge, any part or parts found to be defective in material, workmanship or both. Any transportation or shipping charges will be borne by the purchaser. If, during the warranty period stated above, the product does not function properly due to defect, simply contact Salsco and follow the Warranty Procedures included in this manual.

#### This warranty does not include:

- Incidental or consequential damages and is exclusive of any implied warranties.
- Normal maintenance parts, including, but not limited to hoses, chains, belts, filters, lubricants, etc.
- Parts or components, which are covered under the original manufacturer warranty, including, but not limited to engines, pumps, and motors.

#### **WARRANTY PROCEDURE**

In order for Salsco to consider your warranty claims in a timely manner you must follow the simple procedures listed below:

#### MACHINE OR PART FAILURE

- Call our service department for helpful instruction on how to correct or repair the problem. Preventive maintenance will also be suggested.
- b) When ordering parts for Warranty issues, you MUST retain possession of the old parts in question until notified with respect to returning the parts to Salsco or other disposition.
- c) Warranty Claims MUST be filed within 30-days from completion of the work performed. Contact our office for an electronic warranty claim form.
- d) Fill in all information requested on warranty claim form, a copy of which is included in this manual, (date of purchase, company name, address, etc.). List all parts used. Make sure part numbers are correct. You can obtain these from your manual. (include good description of problem; i.e. "leaking from spool" rather than "leaking").
- e) It is our goal to consider and reach a disposition on each Warranty Claim within 30-days from the date that it is received. Therefore it is important that you respond promptly to any request for further information. Claims with no response to inquiries will be closed as "denied for lack of response" 90-days from the date of request.
- f) Email, Fax or Send Warranty Claim form to our Warranty Department. **Warranty on parts most often requires** return of the parts that were replaced. DO NOT DISCARD OLD PARTS UNTIL YOU HAVE RECEIVED A DETERMINATION AS TO WHETHER THESE PARTS MUST BE RETURNED.
- g) Our Warranty Department will contact and instruct you on how to return the Parts to Salsco on an RA #. Returns MUST be made within 30-Days from issuance of RA #. FREIGHT CHARGES ON RETURN OF PARTS IS THE RESPONSIBILITY OF THE CUSTOMER. Normal pre-delivery adjustments are not covered under warranty. Labor Warranties are based on reasonable time allowances as determined by Salsco, Inc. and paid at 75% of posted labor rate. TRAVEL TIME IS NOT REIMBURSED UNDER THE WARRANTY POLICY.
- h) Be sure to put the RA form inside the box that you are shipping back, also be sure to put on the outside of the box "Return of Goods" and the RA #.
- i) Ship returns via a traceable method such as UPS Ground Service. Be sure that the shipment is insured for the appropriate value. If uninsured parts are lost, we cannot issue a credit.

#### PLEASE NOTE: Warranty forms should be filled out completely.

PREVENTIVE MAINTENANCE IS YOUR BEST INSURANCE AGAINST EQUIPMENT FAILURE. BE SURE TO READ THIS MANUAL, ESPECIALLY THE MAINTENANCE, OPERATING AND CAUTION SECTIONS.

SALSCO, INC., 105 Schoolhouse Rd. Cheshire, CT 06410 800-872-5726, 203-271-1682 203-271-2596 (Fax) sales@salsco.com, <u>www.salsco.com</u>

## **SALSCO WARRANTY CLAIM FORM**

SALSCO, INC. 105 SCHOOLHOUSE RD. CHESHIRE, CT 06410	PHONE: 203-271-1682, 800-872-5726  FAX: 203-271-2596  EMAIL: a.fowler@salsco.com  WEB: www.salsco.com
END OWNER	PHONE:
NAME:	FAX:
EMAIL:	
ADDRESS:	
PURCHASED FROM:	PHONE:
NAME:	FAX:
EMAIL:	
ADDRESS:	
EQUIP/WARRANTY INFO: (MUST BE COMPLETE)	
PURCHASE DATE: INV #:	DATE FAILED:
MODEL #: SERIAL #	REPAIR DATE:
HRS USED:	
WARRANTY CLAIM/WORK ORDER #	
WAS A SALSCO RETURN AUTH. # ISSUED FOR	REPAIRS OR RETURN OF PARTS: YES NO
IF YES, RA #:	
PROBABLE CAUSE OF FAILURE:	

## **SALSCO WARRANTY CLAIM FORM - Continued**

WORK PERFORMED/COMMENTS ON REPAIR:						
SHOP LABOR RATE:		SUBMITTED BY:				
TOTAL LABOR HRS TO REPAIR:	т	PRINTED NAME:		T		
SALSCO PART #: DESCRIPTION:	QTY	PRICE EACH	TOTAL	INVC	DICE #:	
FILL IN ALL INFORMATION REQUESTED ON WARRANTY CLAIM FORM. INCOMPLETE FORMS CANNOT BE PROCESSED & WILL BE RETURNED. LIST ALL PARTS USED. MAKE SURE PART NUMBERS ARE CORRECT. ANY PARTS THAT YOU BELIEVE TO BE DEFECTIVE OR ANY PARTS THAT BREAK SHOULD BE RETAINED FOR POSSIBLE INSPECTION UNTIL AFTER THE WARRANTY HAS BEEN PAID OR PART HAS BEEN RETURNED. INV. # NEEDS TO BE INCLUDED ON WARRANTY CLAIM.						
OFFICE USE ONLY						
DATE REC'D:		DLR. DEL REPORT	ON FILE:	YES	NO	
CUST ID:		WARRANTY CLAIM	ON FILE:	YES	NO	
SALSCO WC:	PARTS TOTAL:					
SALSCO RA:	LABOR TOTAL:					
DATE APPROVED:	TOTAL APPROVED:					
DATE REJECTED:	REJECTED DATE:					
PROCESSED BY:		REASON:				

SALESMAN ID #	SALES MANAGER'S NAME	

800-872-5726, 203-271-1682 SALSCO, INC. www.salsco.com 203-271-2596 (Fax) 105 School House Road sales@salsco.com Cheshire, CT 06410 **DEALER DELIVERY REPORT** SERIAL NO: DEALER: CITY: STATE: ZIP: PURCHASER: ADDRESS: CITY: ST: ZIP: The undersigned dealer warrants that the above-described machine was carefully inspected, adjusted and prepared for delivery before delivery to the purchaser; that both the operation and maintenance of the machine were explained to the purchaser; and that a copy of the Owner's instruction Manual were given to the purchaser and his attention called to Our Warranty and any operating instructions included in the purchaser. The undersigned purchaser certifies that the operation and maintenance of the abov described machine have been explained to him; acknowledges receipt of a copy of the Owner's Instruction Manual and Our Warranty Policy printed in said Instruction Manual and Caution Notes. I also understand that it is my responsibility to explain and make Salsco manuals available to new operators. included in the manual and caution notes. DATE: DATE: PURCHASER: SIGN BY: SIGN BY: PHONE: PHONE: E-Mail EMAIL:

MODEL:	SERIAL NO:						
SALSCO LIMITED WARRANTY CARD							
DATE PURCHASED:							
PURCHASER:	ADDRESS:	CITY:	2	ST:	ZIP:		
EMAIL:		PHONE:					
DEALER:		STATE: CT					
Will this equipment be used commercially?						No	
Did Dealer service this equipment and instruct you in its care and safe operation						No	
Did you receive an	"Operation & Service Manual" and sa	fety pamphlet?		Yes		No	
	Signed						
				Purch	naser		
NOTICE:	IMPORTANT: THIS CARD MU: FACTORY WITHIN 10 DAYS OF BE VOIDED.						_

## **GAS GREENS ROLLER SERVICE INTERVAL SCHEDULE**

After \_\_\_ hours / Daily / Weekly / Yearly / See vendor manual

TAIP					
SINE - Check Honda service manual for recommended service intervals.	Н	D	W	Υ	MANUAL
Check oil level		X		33	
Change oil	500		10	3/	2
Change oil filter	500				
Change fuel filter	500				62
Check all for leaks		X		22	

DRAULIC SYSTEM		Н	D	W	Y	MANUAL
Grease hydraulic cylinders, pins, etc. where applicable				X		
Check for leaks (all hoses and fittings at both hose ends)		3	X		8.	3
Check hydraulic oil level only if you see leaks				- 600		
Change hydraulic oil	First 500	1000			57 57	
Change hydraulic oil filter	1000			20		
Inspect hoses for chafing, cracks, etc. and assure nothing impe		X				

IUSTMENTS & DRIVES	Н	D	W	Y	MANUAL
Check all nuts, bolts, other fasteners for tightness			X		3
Check chains for proper lubrication, wear, and tension			X	56°	
Check belts for proper wear and tension (is belt dressing recommended?)			X	33	
Grease bearings, cylinders, steering shaft (is this a sealed bearing?)			X	0	es

TRAILER	н	D	W	Y	MANUAL
Check tire pressure (recommended pressure)			X		
Inspect tires for dry rot, tread wear, damage, etc.		X			
Grease axle and wheel hubs				X	

## RECOMMENDED OIL - Fill within 6" of the top to avoid overflow when it gets hot.

Models 09065 / 09067	AW68 Hydraulic Oil
HP11	AW68 Hydraulic Oil
HP5.5	AW68 Hydraulic Oil
HP11-III	15-50 Motor Oil
Roll-n-Go, EHA	15-50 Motor Oil
Tranz-Former, EHA 5-G	10-40 Motor Oil

### **SERVICE RECORD**

If kept properly, this schedule will help track problems in the future.

Deta	Otro	Part #	Description of Work Dogs	Hours Used	Total Hours to Date
Date	Qty.	Part #	Description of Work Done	nours osea	to Date
				***************************************	
	375 455 375 375	S 200			
					~
					- 30
			The state of the s		
	1.7				
					***************************************
				***************************************	
					-

MODEL #	S/N	 
		DATE PURCHASED: