

MODEL SIDEWALKER

SIDEWALK PAVER

OWNER'S MANUAL
PARTS MANUAL
SERVICE MANUAL

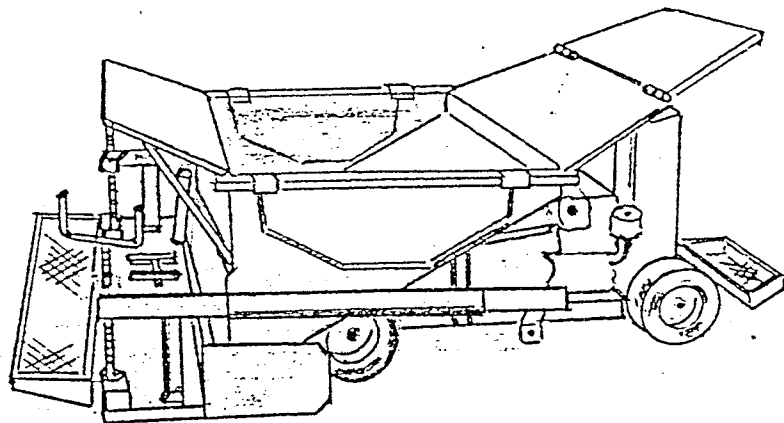

SALSCO, INC.
TURF EQUIPMENT DIVISION
105 SCHOOL HOUSE ROAD
CHESHIRE, CT 06410

*NOTE: PLEASE READ CAUTIONS ON PAGE 3!

BELOW PLEASE FIND AN EXPLANATION OF SALSCO'S PART NUMBERS AS
THEY ARE USED IN THE SERVICE MANUAL.

Model Number	Prefix	Part Number
300	B	070

Model Number: Consists of three (3) digits and refers to the model number of the machine that the part will fit.

Prefix: Consists of one (1) letter, used for Salsco inventory control purposes. PREFIX MUST BE USED WHEN ORDERING PARTS.

Part Number: Consists of three (3) digits and refers to the Salsco inventory control number of this part.

TABLE OF CONTENTS

INTRODUCTION.....	PAGE 1
DESCRIPTION.....	PAGE 2
CAUTION.....	PAGE 3
MAINTENANCE & OPERATING INSTRUCTIONS.....	PAGE 4
SERVICE & DISASSEMBLY PROCEDURE.....	PAGE 5
PARTS LIST.....	PAGES 6, 7, 8
PARTS SCHEMETIC.....	PAGES 9, 10
WARRANTY.....	PAGE 11

MANUFACTURED BY: SALSCO, INC.
TURF EQUIPMENT DIVISION
105 SCHOOL HOUSE RD.
CHESHIRE, CT 06410
(203) 271-1682
TELEX 643708

SIDEWALK PAVER MANUAL

This company reserves the right to discontinue any model or product, add improvements to, or change the design at any time without obligation to improve existing machines, either by changing the design or adding new parts.

It has been and will continue to be the policy of SALSCO to update existing machines at its own discretion. Whenever possible, with respect to update, parts will be made in such a way that they can be "Retro Fit" if so desired.

Record in space provided below the model and serial numbers of this unit. Please retain these numbers for future reference.

No parts orders will be accepted without Model numbers or parts numbers.

<u>Model Number</u>		<u>Serial Number</u>
<u>Model No.</u>	<u>Prefix No.</u>	<u>Part Number Code:</u>
SIDEWALKER	= 600	<u>Model</u> <u>Part No.*</u>
		000 A 000

* PART NUMBER PREFIX MUST BE USED WHEN ORDERING PARTS (___A000). PREFIX NUMBER IS LISTED ABOVE.

*** CAUTION ***

READ AND UNDERSTAND THIS MANUAL BEFORE STARTING MACHINE!

DESCRIPTION

The SALSCO SIDEWALKER* is the only sidewalk paver on the market.

It has the ability to pave a 36" to 72" wide path at a speed of 50 ft. per hour with an asphalt depth of 1/4" to 5".

The unit is equipped with an 11 HP Briggs I.C. electric start engine with an infinitely variable hydrastatic drive forward or reverse.

The screed, which is free floating with adjustments to control asphalt thickness and compensate for variations in ground contour, also includes adjustment to crown or invert pavement surfaces. The hopper can be fed on either side by curb feeding or wheel barrows.

The unit size is 54" wide x 96" long with a height of 36" and a weight of 1040 lbs. It has a ground transport speed of 3 1/2 M.P.H.

* PLEASE REFER TO THE "CAUTIONS" SECTION ON PAGE THREE (3) OF THIS MANUAL!

"CAUTION"

BEFORE YOU START THIS MACHINE:

1. Read and understand owner's manual.
2. Be sure that "forward/reverse" lever is locked in neutral position before starting engine.
3. Never leave machine running while unattended.
4. Never reach under or into machine while it is running.
5. Be sure that screed is in full "UP" position when machine is in transport.
6. Under no circumstances EVER allow any part of your body or anyone else's body to come in contact with moving drive parts such as, but not limited to, chains, sprockets, couplings, and cylinders.
7. Always remove spark plug wire, make sure engine switch is off, throttle is in "STOP" position, and shut gas off when working on or checking this machine.

OPERATION & START-UP INSTRUCTIONS OF SIDEWALKER

- A) Be sure that "Forward/Reverse" lever is locked in neutral position.
- B) Place switch on motor to "ON" position. Place Choke Lever (just under air cleaner) to "CHOKE" position if needed.
- C) Place Toggle Switch on control panel to "ON" position.
- D) Place Throttle Lever on control panel to "FAST" or "START" position and push starter switch button to start engine.
- E) Place Throttle Lever to "LOW" engine speed and return Choke Lever to "NORMAL" position.
- F) The "Forward/Reverse" Lever is supplied with two lock levers which can be lifted away individually. Pull the Drive Lever for "FORWARD" and push for "REVERSE".
- G) Be sure that screed is lifted to the "UP" position before transport.
- F) Adjust the two Screw Handles on screed for proper paving depth.

MAINTENANCE

- 1. There are nine (9) grease fittings on this unit. One (1) on each front wheel, one (1) on each front wheel pivot bushing, and one (1) on each screed adjustment bearing. They should be greased weekly.
- 2. All chains and sprockets should be checked daily for alignment and lubricated if needed.
- 3. Check engine manual for maintenance on engine oil, gear box oil, and air cleaner.

SERVICE AND DISASSEMBLY PROCEDURE

- 1)
 - a. Remove spark plug wire.
 - b. Make sure that engine switch is in "OFF" position.
 - c. Make sure throttle is in "STOP" position.
 - d. Shut off gas.
 - e. Drop screed to "DOWN" Position.
- 2)
 - a. Remove Cylinder Mounting Pins (106 & 134) and place cylinder with hoses to right side of machine.
 - b. Remove Pivot Arm Bolts (144), Screed Bearing Bolts (113), and Connecting Link Bolts (111). Pivot Arms and Screed can now be removed.
*NOTE: (Right arm is still connected to main frame with Hydraulic Hoses).
- 3) TO REMOVE HOPPER
 - a. Support front side of hopper so that it will not fall when bolts are removed.
 - b. Remove two bolts on rear underside of hopper.
 - c. Remove two bolts (142) from side legs of hopper.
 - d. Remove two bolts (149) from Hopper Extension Plate. Front and rear Extension Plates can be removed from hopper if desired.
 - e. Hopper can be lifted off the main frame.
- 4) TO REMOVE MOTOR AND PUMP ASSEMBLY
 - a. Remove one bolt (35) from Adjustable Connecting Link (35).
 - b. Remove (6) Hydraulic Hoses from Hydrostatic Pump. Be sure to mark each hose for ease of assembly.
 - c. Remove Throttle Cable and gas line to motor.
 - d. Remove (6) bolts (50) and motor and pump assembly can be removed.
- 5) TO REMOVE HYDRAULIC TANK
 - a. If it is necessary to remove Hydraulic Tank, remove only the hoses that are necessary and mark them clearly to where they connect for ease of assembly.
 - b. Remove (4) bolts (69) and tank can be removed. Should Hydraulic Hoses become mixed up, see diagram on page 9; connect A to A, B to B, etc. as shown.

TO REASSEMBLE; REVERSE PROCEDURE.

PAVER
PARTS LIST


<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	600G193	Toggle Switch	1
	600H193	Switch Boot	1
2	600I193	Starter Switch	1
3	600A132	Nut & Bolt	2
4	600A105	Throttle Cable Assembly	1
5	600A134	Nut & Bolt	2
6	600E195	Elbow	2
7	600B197	Hydraulic Valve	1
8	600F195	Elbow	2
9	600C190	Hose Assy 112" "I & H"	2
10	600D195	Tube Adapter	2
11	600D190	Hose Assy. 21" "G"	1
12	600A133	Nut & Bolt	4
13	600G195	Elbow 45 Degrees	1
14	600A120	Bushing	5
15	600J089	Wheel Spacer	2
16	6000096	Step Holding Bracket	1
17	600A133	Nut & Bolt	1
18	600C150	Nut & Bolt	2
19	600I181	Tie Bar	1
20	600A142	Nut & Bolt	1
21	600A141	Nut & Bolt	2
22	600L096	Steering Pivot Bracket	1
23	600A081	3/4 Locking Collar	4
24	600C088	Right Wheel Pivot Axle	1
25	600B120	Bushing	2
26	600E076	Steering Shaft	1
27	600C150	Nut & Bolt	2
28	600M096	Pivot Arm Bracket	1
29	600F076	Front Wheel Pivot Shaft	2
30	600B081	Locking Collar Bracket	1
31	6000088	Left Wheel Pivot Axle	1
32	600B504	Front Step	1
33	600E085	Front Wheel	2
34	600A081	Locking Collar 3/4	2
35	600H181	Connecting Link Adjustable	1
36	600C150	Nut & Bolt	1
37	600F100	Control Arm	1
38	600E190	Hydraulic Hose Assy. 11" "E"	1
39	600H195	90 Degree Elbow	1
40	600C189	Hydrostatic Pump	1
41	600F190	Hose Assy. 51" "D"	1
42	600E195	Elbow 90 Degrees	1
43	600I195	Elbow 45 Degrees	2
44			
45	600J195	Elbow 90 Degrees	1
46	600B144	Nut & Bolt	4
47	600G190	Hose Assy. "F" 48"	1
48	600E195	Elbow 90 Degrees	1
49	600B050	Love Joy Coupling	1
50	600A142	Nut & Bolt	6
51	600F164	Pump & Motor Mt'g Bracket	1
52	600F200	Bridges & Stratton Motor	1


-7-
PAVER
PARTS LIST (Continued)

53	600B183	Hydraulic Tank & Control. Handles	1
54	600K195	90 Degree Elbow	1
55			
56	600L195	90 Degree Elbow	1
57	600C183	Gas Tank	1
58	600A133	Bolt	2
59	600B140	Bolt	4
60	600B175	Filler Breather Cap	1
61	600A104	Knob	2
62			
63			
64	600B145	Nut & Bolt	1
65	600A161	Bolt	
66	600E175	Filter Mount	1
67	600F175	Oil Filter	1
68	600H190	Hose Assy. 26"	1
69	600A141	Nut & Bolt	4
70	600B174	Drain Plug	1
71	600A079	Collar 1"	2
72	600E089	Spacer	2
73	600L195	Elbow 90 Degree	1
74	600I190	Hose Assy. 14"	1
75	600F085	Rear Wheel	2
76	600A179	Flange Bearing	2
77	600F046	Sprocket	1
78	600B501	Main Frame	1
79	600G164	Motor Plate	1
80	600F054	Chain, Drive	1
81	600G046	Sprocket	1
82	600A178	Bearing Pillow Block	1
83	600A148	Nut & Bolt	2
84	600A150	Nut & Bolt	2
85	600D189	Hydraulic Motor	1
86	600M195	90 Degree Elbow	2
87	600A148	Nut & Bolt	4
88	600J190	Hose Assy. 16" "B"	1
89	600K190	Hose Assy. 15" "C"	1
90	600C007	1/4" Sq. Key	2
91	600G076	Drive Shaft	1
92	600N195	90 Degree Elbow	1
93			
94			
95			
96			
97			
98			
99			
100	600H502	Width Adjusting Plate, Right	1
101	600G502	Width Adjusting Plate, Left	1
102	600A141	Nut & Bolt	3

-8-
PAVER
PARTS LIST (Continued)

103	600A150	Nut & Bolt	2
104	600C190	Hose Assy. "H"	1
105	600C190	Hose Assy. "I"	1
106	600C098	Cylinder Mounting Pin	1
107	600K196	Elbow 90 Degree	1
108	600G100	Screed Pivot Arm, Right	1
109	600A141	Nut & Bolt	2
110	600E502	Rear Extension Plate	1
111	600C150	Nut & Bolt	2
112	600C009	Screed Height Adjuster	2
113	600A142	Nut & Bolt	8
114	600B179	Bearing, Flange	2
115	600C150	Nut & Bolt	2
116	600A209	Screed Height Gage	2
117	600B158	Nut	4
118	600J181	Width Adjusting Link	2
119	600C150	Nut & Bolt	2
120	600K089	Spacer	4
121	600A142	Bolt	4
122	600B053	Chain	1
123	600A147	Washer	4
124	600B009	Screed Adjustment Assy.	1
125	600A504	Rear Step	1
126	600A503	Screed Assembly	1
127	600K181	Connecting Link	2
128	600B503	Left Width Adjusting Skirt	1
129	600B151	Nut & Bolt	2
130	600A158	Nut	2
131	600O195	Elbow 45 Degrees	1
132	600C184	Cylinder Screed Raising	1
133	600C150	Nut & Bolt	1
134	600C098	Cylinder Mounting Pin	1
135	600C053	Chain	1
136	600C503	Right Width Adjusting Skirt	1
137	600A208	Width Adjusting Lever	2
138	600B147	Washer	2
139	600C150	Bolt	2
140	600A142	Bolt	2
141	600H100	Screed Pivot Arm, Left	1
142	600C150	Nut & Bolt	2
143	600L089	Pivot Spacer	2
144	600A154	Bolt	2
145	600J502	Removable Side Panel	2
146	600D502	Hopper	1
147	600A141	Nut & Bolt	3
148	600I502	Front Extension Plate	1
149	600A141	Nut & Bolt	2

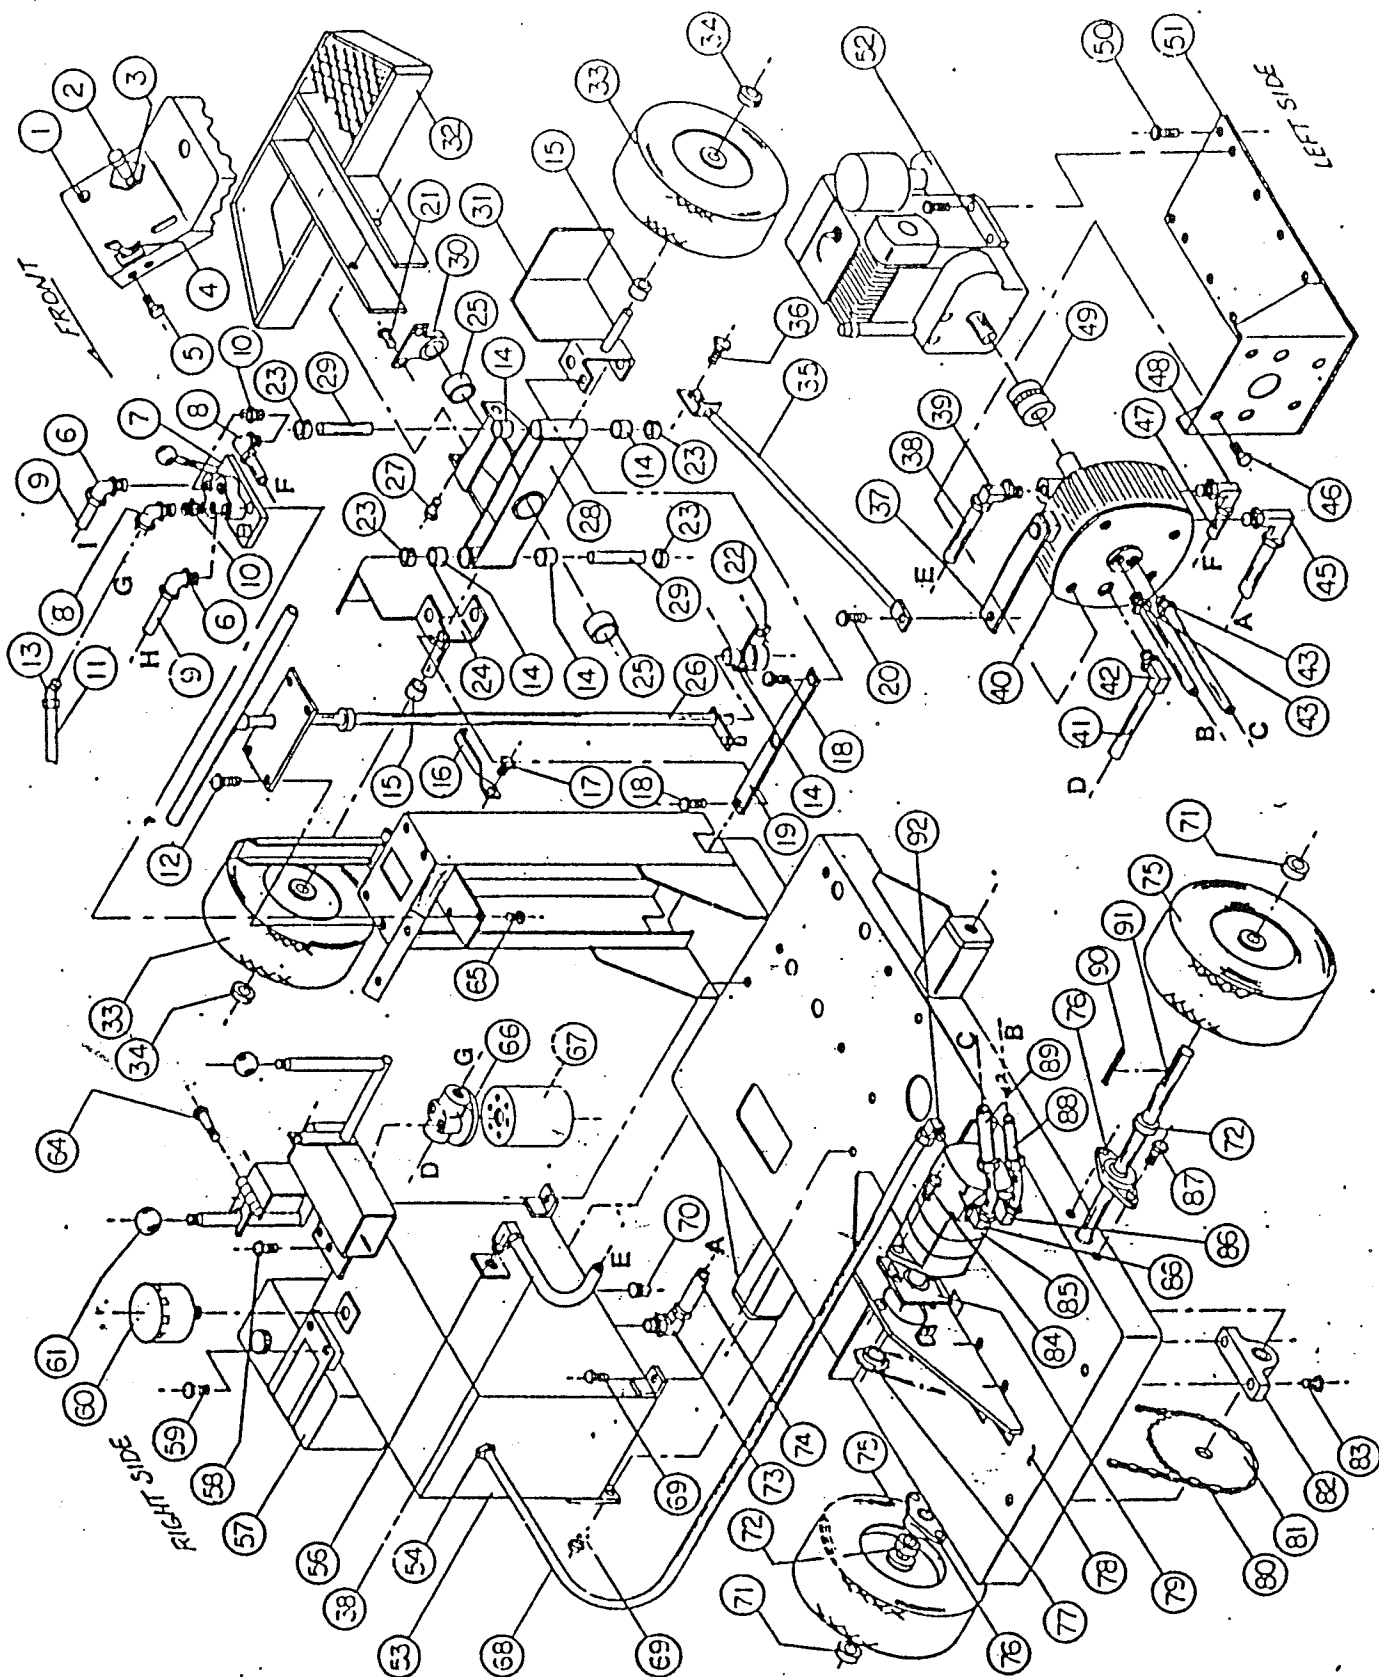

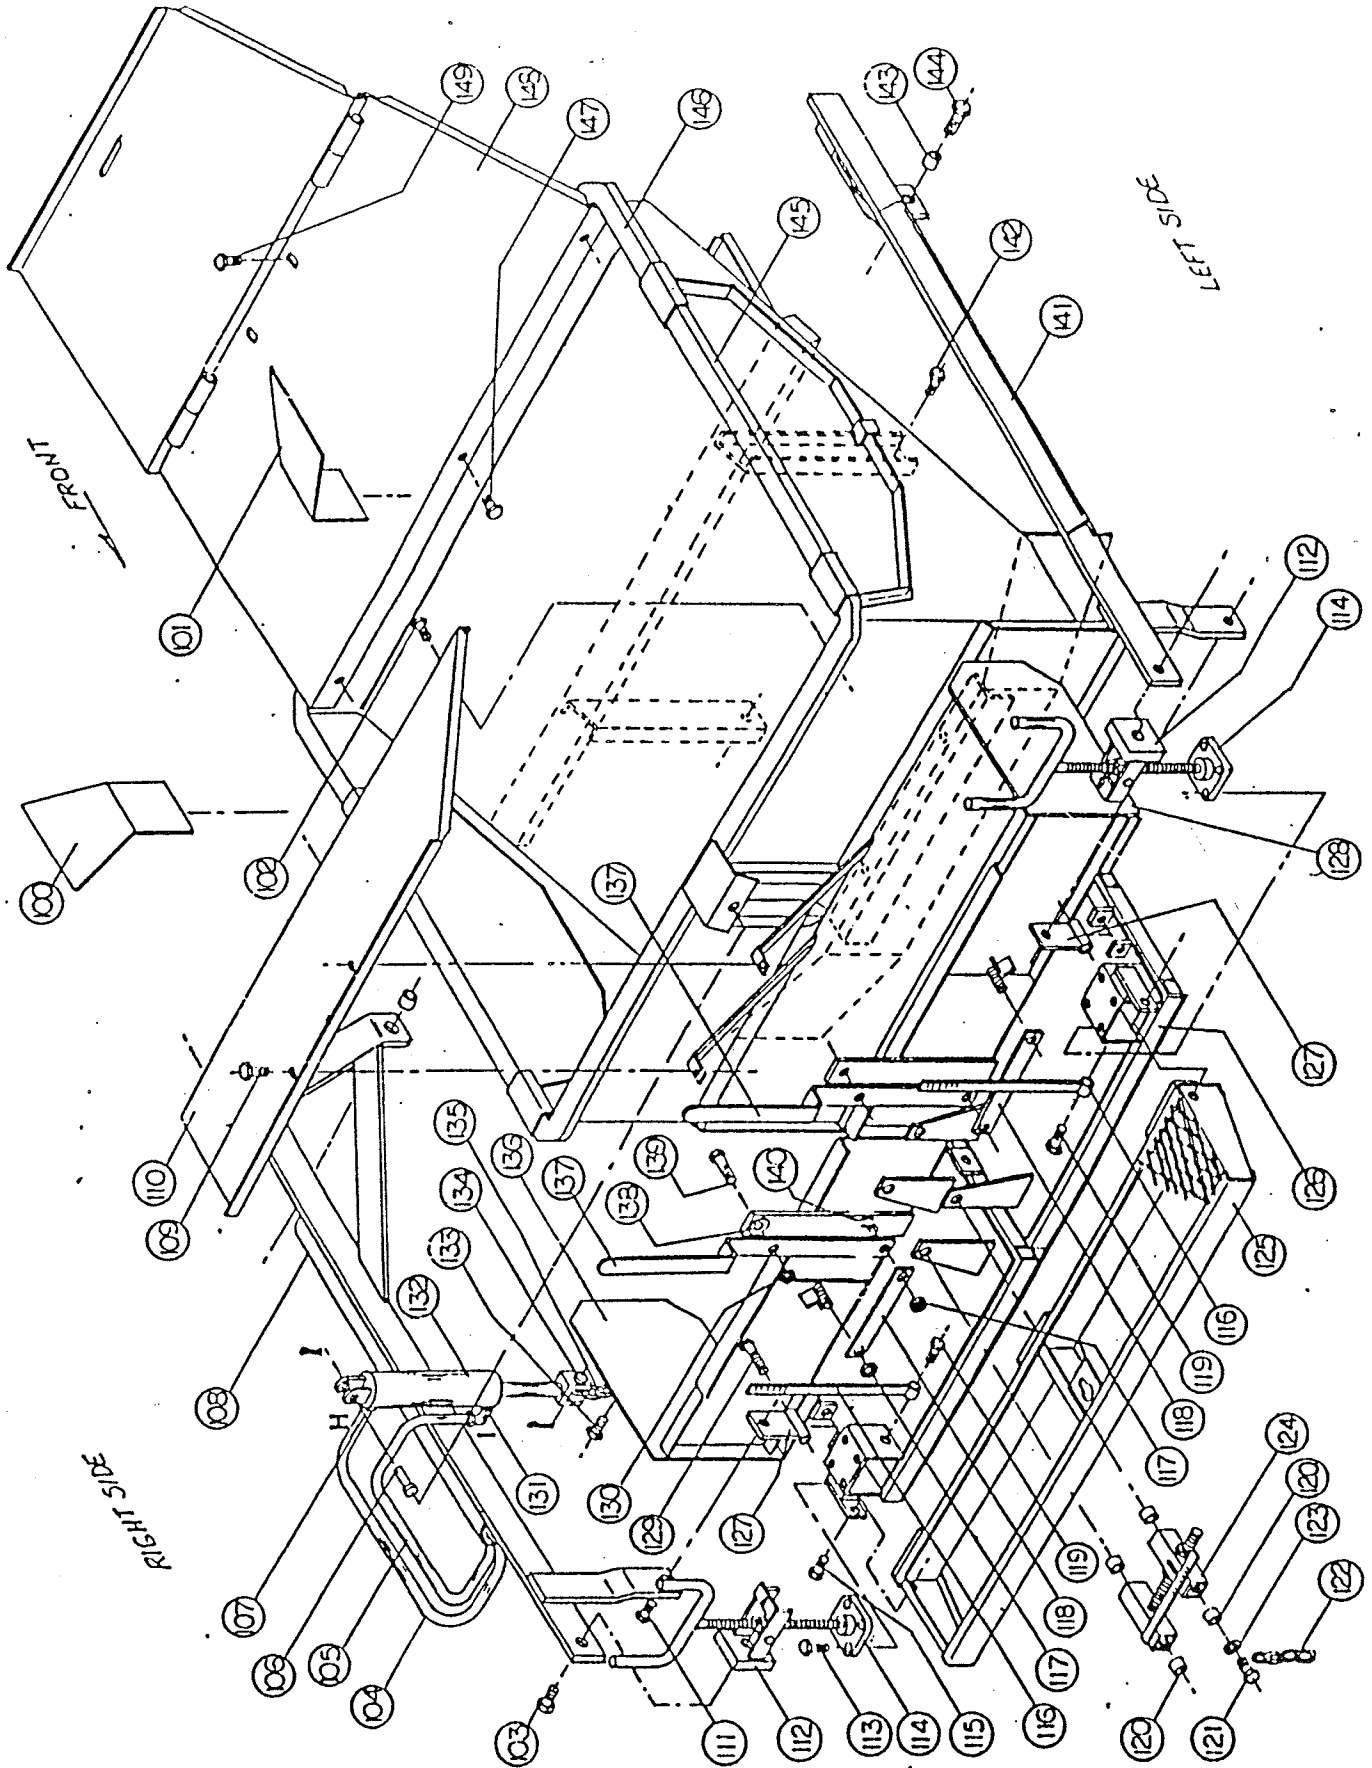

WARRANTY

Your Salsco Commercial or Turf Equipment product is a commercial type product and is normally manufactured and sold for commercial or industrial use. Salsco will, for the original purchaser, for one (1) year from the date of purchase (90 days if used for rental purposes) repair or replace, free of charge, any part or parts found to be defective in material or workmanship or both. Any transportation charges to be borne by the purchaser.

If, during the Warranty Period, the product does not function properly due to defect, simply contact your Salsco Distributor and provide the unit or part for inspection or contact directly:

SALSCO, INC.
Turf Equipment Division
Service Department
105 School House Rd.
Cheshire, CT 06410.
(203) 271-1682
Telex 643708

This warranty does not include incidental or consequential damages and is exclusive of any implied warranties.

This warranty does not include normal maintenance parts, including, but not limited to spark plugs, filters, lubricants, springs, tines, tine overlays, nylon bars, and blades.

This warranty does not include parts or components which are covered under the original manufacturers warranty, including, but not limited to engine and differential.